

Service Manual

VECTOR SIGNAL GENERATOR SMIQ02B/03B/04B/06B

10125.5555.02/03/04/06

Volume 1 Service manual consists of 4 volumes

Printed in the Federal Republic of Germany

. ji			
			-
			,
			:
			· :
		7.1	

Safety Instructions

This unit has been designed and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards.

To mainfain this condition and to ensure safe operation, the user must observe all instructions and warnings given in this operating manual.

Safety-related symbols used on equipment and documentation from R&S:



Observe operating instructions



Weight Indication for units >18 kg



PE terminal



Ground terminal



Danger! Shock hazard



Warning! Hot surfaces



Ground



Attention! Electrostatic sensitive devices require special care

- The unit may be used only in the operating conditions and positions specified by the manufacturer. Unless otherwise agreed, the following applies to R&S products:
 - IP degree of protection 2X, Pollution severity 2, overvoltage category 2, altitude max. 2000 m. The unit may be operated only from supply net-
- For measurements in circuits with voltages V_{rms} > 30 V, suitable measures should be taken to avoid any hazards.

works fused with max. 16 A.

- (using, for example, appropriate measuring equipment, fusing, current limiting, electrical separation insulation).
- If the unit is to be permanently wired, the PE terminal of the unit must first be connected to the PE conductor on site before any other connections are made. Installation and cabling of the unit to be performed only by qualified technical personnel.
- For permanently installed units without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fused such as to provide suitable protection for the users and equipment.
- 5. Prior to switching on the unit, it must be ensured that the nominal voltage set on the unit matches the nominal voltage of the AC supply network. If a different voltage is to be set, the power fuse of the unit may have to be changed accordingly.
- 6 Units of protection class I with disconnectible AC supply cable and appliance connector may be operated only from a power socket with earthing contact and with the PE conductor connected.

- 7. It is not permissible to interrupt the PE conductor intentionally, neither in the incoming cable nor on the unit itself as this may cause the unit to become electrically hazardous.
 - Any extension lines or multiple socket outlets used must be checked for compliance with relevant safety standards at regular intervals.
- 8. If the unit has no power switch for disconnection from the AC supply, the plug of the connecting cable is regarded as the disconnecting device. In such cases it must be ensured that the power plug is easily reachable and accessible at all times (length of connecting cable approx. 2 m). Functional or electronic switches are not suitable for providing disconnection from the AC supply.
 - If units without power switches are integrated in racks or systems, a disconnecting device must be provided at system level.
- Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.
 - Prior to performing any work on the unit or opening the unit, the latter must be disconnected from the supply network.
 - Any adjustments, replacements of parts, maintenance or repair may be carried out only by authorized R&S technical personnel.
 - Only original parts may be used for replacing parts relevant to safety (eg power switches, power transformers, fuses). A safety test must be performed after each replacement of parts relevant to safety.
 - (visual inspection, PE conductor test, insulationresistance, leakage-current measurement, functional test).

continued overleaf

Safety Instructions

- Ensure that the connections with information technology equipment comply with IEC950 I EN60950.
- Lithium batteries must not be exposed to high temperatures or fire.

Keep batteries away from children.

If the battery is replaced improperly, there is danger of explosion. Only replace the battery by R&S type (see spare part list).

Lithium batteries are suitable for environmentally-friendly disposal or specialized recycling. Dispose them into appropriate containers, only. Do not short-circuit the battery.

- Equipment returned or sent in for repair must be packed in the original packing or in packing with electrostatic and mechanical protection.
- 13. Electrostatics via the connectors may damage the equipment. For the safe handling and operation of the equipment, appropriate measures against electrostatics should be implemented.
- 14. Any additional safety instructions given in this manual are also to be observed.

Contents

Volume 1	
6 Repair Instruction	
7 Testing and Repair of Modules	
Front Module with Controller MOD 10 Reference/Step Synthesis (SMIQ02B/03B only) Digital Synthesis Summing Loop (SMIQ02B/03B only)	Register 2
Volume 2	
7 Testing and Repair of Modules	
6 GHz Extension	Register 2
Volume 3	
7 Testing and Repair of Modules	
Attenuator 3 GHz	Register 1
N/D Simulator	Register 2
Power Supply	Register 3
Fan Unit	Register 4
Connector board	•
Option Reference Oscillator OCXO SM-B1	
Option FM-Modulator SM-B5 (SMIQ02B/03B only)	Register 7
Volume 4	
7 Testing and Repair of Modules	
Option Modulation Coder SMIQ-B20	Register 1
Options Data Generator SMIQ-B11 and Memory Extension SMIQ-B12	Register 2

Option Fading Simulator SMIQ-B14 and SMIQ-B15 (SMIQ02B/03B only)...... Register 3

			•

Contents

1 TESTING AND REPAIR OF THE INSTRUMENT	
1.1 Function Description	
1.1.1 Theory of Synthesis	
1.2 The Modules	•••••••
1.2.1 Digital Synthesis (A8)	
1.2.2 FM-Modulator (Option B5)	4
1.2.3 Reference/Step Synthesis (A7)	4
1.2.4 Summing Loop(A9)	
1.2.5 Synthesizer TSYN (SMIQ-E)	5
1.2.6 IQ-Converter (A220)	
1.2.7 IQ Modulator (A240)	6
1.3 Test Instruments and Utilities	8
1.4 Troubleshooting	
1.4.1 Built-in Utilities, Servicekit	
1.4.2 Selftest, Error Messages (ERROR)	
1.4.3 Internal Diagnosis	
1.4.4 List of Diagnostic Points	
1.4.5 Testing the Modules with the Built-in Diagnosis	
1.4.6 Troubleshooting to Type of Error	
1.5 Calibration, Password Protection	
1.5.1 Calibration Routines	
1.5.2 Adjustments of Complete Instrument	25
1.5.3 Adjustments on Module Replacement	
1.6 Removal and Assembly	
1.6.1 Replacing the Panelling	
1.6.2 Replacing a Plug-in Module	
1.6.3 Replacing the Front Module	
1.6.4 Replacing the Power Supply	
1.7 External Interfaces	28

Parts list List of coordinates Circuit diagram Components layout diagram

1125 5555 2 E-1

1 Testing and Repair of the Instrument

1.1 Function Description

For the following see function circuit diagram 1125.55555.FS. The models 04 provide an upper frequency limit of 4.4 GHz. Of course, all measurements on these models should be performed in the reduced frequency range, only.

1.1.1 Theory of Synthesis

The synthesis first generates a frequency range from 750 to 1500 MHz.

The fine resolution is implemented by direct digital synthesis in the **SMIQ.** The optional frequency/phase modulation is also converted to this frequency by mixing such that it can be coupled in here.

A step synthesizer with a fractional divider produces an auxiliary frequency which is applied to a harmonic mixer. The output oscillators are synchronized with the frequency of the digital synthesis after mixing with a harmonic of the auxiliary frequency. The frequency of the main octave then corresponds to the sum of the frequency of the selected harmonic of the auxiliary frequency and the frequency of the digital synthesis.

Further frequency extension is obtained by division and mixing.

The **vector modulation** is generated in all models at a fixed frequency of 300 MHz and added to the synthesis frequency, if this operating mode has been selected. Tunable filters suppress only spuriae. At frequency above 3.3 GHz the vector modulation is upconverted to 900 MHz before mixing.

1.2 The Modules

1.2.1 Digital Synthesis (A8)

The fine resolution of the output frequency is implemented by direct digital synthesis in this module. A gate array provides instantaneous values of a sinewave oscillation produced by computation to a D/A converter which generates the analog signal. A series-connected lowpass filter suppresses the alias frequencies.

Since the digital synthesis delivers a wide spectrum of spurious frequencies, a buffer loop is series-connected. Its bandwidth can be switched in two steps. For normal operation, the small bandwidth is designed such that spuriae 10kHz beside the carrier are suppressed more than 80dB. The large bandwidth at about 200 kHz is used in fast list mode and for lock-in.

25 5555 2 m 1

1.2.2 FM-Modulator (Option B5)

The FM modulator provides the analog frequency and phase modulation at the frequency of the digital synthesis. A modulated 100-MHz VCO can be operated in two control loops: a phase-locked loop with a control bandwidth of approx. 200 kHz for the phase modulation and a slow frequency control loop for FM. Since the input frequency must be maintained, a fixed frequency of 100 MHz is used for up-conversion. A combination of highpass and lowpass filters is used to suppress unwanted mixed products. Then the modulated 100-MHz signal is used for down-conversion so that the input frequency is obtained again. The resulting mixed products are eliminated by a lowpass filter.

The phase comparison for both control loops is performed at 10 MHz. With phase modulation, a conventional phase-locked loop with a control bandwidth of 200 kHz is closed, the modulation signal being fed in after the phase detector. With FM, the signal of the phase detector is used to generate a pulse sequence with the differential frequency which is applied to a differential integrator which receives the modulation signal as a reference. If the average values of the two signals deviate from each other, a correction voltage is produced, which maintains the center frequency of the oscillator at the correct value even with FM-DC.

In order for the phase-locked loop to remain in the linear section of the oscillator characteristic, the integrator voltage is automatically kept at its value during switchover by means of a counter and a D/A converter.

1.2.3 Reference/Step Synthesis (A7)

This module generates some reference frequencies of high spectral purity for the synthesis stages as well as the auxiliary frequency for the harmonic mixer which can be set in steps.

1.2.3.1 Reference Frequencies

As internal time base for the complete synthesis, a temperature-compensated 10-MHz crystal oscillator (TCXO) is used, which can be optionally replaced by an oven-controlled oscillator (OCXO, SM-B1). As noise reference, a 100-MHz crystal oscillator is used which is synchronized with the 10-MHz crystal or also with external references of 1 to 16 MHz with small bandwidth of approx. 50 Hz.

The reference frequency lies at 1 MHz. The divider of the 100-MHz crystal oscillator features a 10-MHz output for synchronization of connected devices. A programmable divider from 1 to 16 permits synchronization with external sources of 1 to 16 MHz in 1-MHz steps.

The 100-MHz signal of the crystal oscillator is used for mixing and synchronization in the FM modulator. The signal divided by two is fed through several modules as clock frequency. By trebling and doubling, a 600-MHz signal is produced which feeds the fractional divider of the step synthesis and is used as

auxiliary frequency for the IQ modulator and broadband FM (option).

1.2.3.2 Step Synthesis

The auxiliary frequency for the harmonic mixer in the summing loop is generated in a phase-locked loop with fractional division ratio. The fractional divider is implemented as ECL gate array in order to obtain a high reference frequency and a large suppression of spuriae. Down-conversion of the synthesis oscillator with the 100-MHz crystal oscillator is also made with regard to spectral purity.

Since a mixer is used as phase detector, a preset into the lock-in range of the control loop is required, which also reduces the settling time. It is implemented by a parallel-operated frequency discriminator with window comparator.

1.2.4 Summing Loop (A9)

In the summing loop, the main octave and the divider frequency ranges of the synthesis are produced. Using a harmonic mixer, the signal of one harmonic of the step synthesis is converted into the frequency of the digital synthesis, where the phase comparison is made. A control bandwidth of 300 kHz is provided for a spectrum optimized with respect to noise.

A mixer is used as phase detector. For this reason and in order to force the synchronization to the correct harmonic, a preset into the lock-in range of the phase-locked loop is necessary, which is performed via a D/A converter according to a table stored in the computer and compensating for the temperature drift. Temperature compensation is accomplished by the internal diagnosis on the controller module. Correct functioning of the diagnosis is a prerequisite for synchronisation! Moreover, the table is set up using this diagnosis (see section Calibration Routines).

The SMIQ uses the first divided octave of the divider frequency ranges, thus ensuring that the output frequency range from 450 to 1500MHz is available for the IQ converter module.

1.2.5 IQ Converter (A220)

The IQ converter is provided for frequency extension by doubling and addition of the vector-modulated 300-MHz signal from the IQ modulator board (modulation mixer). The input signal supplied by the summing loop or the synthesizer (SMIQ-E) is applied to a power amplifier either via a harmonic filter or via a doubler with filter. A level control is provided there which keeps the output level of the board constant with CW mode. With vector-modulation mode, the LO level of the modulation mixer is thus kept constant.

The modulation mixer is followed by sophisticated filters in three frequency ranges, which suppress LO stereo separation and other mixer products. The filters are bypassed in the unmodulated mode, only with frequencies above 3 GHz mixing with 300 MHz and the

1125 5555 5 E-1

filters are active.

The individual filter characteristics are stored in an onboard EEPROM. In the vector mode, the level frequency response is set by a control element according to a table. The associated calibration table is generated internally by comparing the level to the controlled output level with unmodulated operation and stored in the computer RAM (see section Calibration Routines).

The output signal with its frequency range 450 MHz (CW) or 750 MHz (VM) to 3.3 GHz feeds the IQ modulator module.

1.2.6 IQ Modulator (A240)

The IQ modulator contains the vector modulator or IQ modulator on the internal 300-MHz carrier frequency which is obtained by division from the 600-MHz auxiliary frequency of the reference/step synthesis module. The a.m. modulator is followed by an amplitude modulator with a switch for the ramp control and control elements for fast level control with level attenuation in the adjacent time slot or pulse modulation (burst modulator). A high-resolution diagnosis rectifier and precise internal calibration voltages allow for an internal calibration of the vector modulator. The data are stored in the RAM of the computer (see section Calibration Routines). The 300-MHz signal is fed to the IQ-converter module for mixing.

Besides, the frequency range is extended here by mixing with a 2.4-GHz signal which is also generated onboard and synchronized with the 600-MHz auxiliary frequency of the reference/step synthesis board. Similar to the IQ converter, the level frequency response is set internally according to an internally generated calibration table the data of which are stored in the RAM of the computer (see section Calibration Routines).

Subsequently, the signal is amplified to the output level of the instrument. A linearized rectifier provides for an exact level which can be recalibrated using a power meter. The calibration table is written to the EEPROM of the computer and can be updated with module replacement or repair using the required equipment (see section Calibration Routines).

A synthesizer from 0.1 Hz to 1 MHz is provided as internal modulation source for the analog modulations (AM/FM/PhiM). The synthesizer signal is also provided at an output connector.

1.2.7 Frequency Extension 6.4 GHz (A500)

This module contains a frequency doubler, synthesizer mixer, modulation mixer and a filter bank for the frequency extension up to 4.4 or 6.4 GHz, an output amplifier for providing an output level above 3.3 GHz and a bypass switch for loopthrough of the signal up to 3.3 GHz.

The input signal is taken from the IQ modulator via doubler, filter and amplifier to the LO input of the synthesizer mixer, where the level is controlled by the detector and level control element. The unmodulated or vector-modulated signal is available at the IF port of the synthesizer mixer. The mixed signal is picked up at the RF port and via a level control element (Level Preset) applied to the filter bank where the correct sideband is filtered out and spurious are suppressed.

The output stage is driven by a further level control element (ALC). Level control is implemented by the output detector.

The 600-MHz signal REF600 from the reference/step synthesizer module is doubled to obtain a 1200-MHz LO signal for the modulation mixer and kept constant by a control element. The 300-MHz signal IQAUX (CW or vector-modulated signal is converted to 900 MHz with the modulation mixer, bandpass-filtered and applied to the modulation mixer. It is taken via power splitter and amplifier, or with models 02 and 03 directly to the rear-panel output of the instrument.

1.2.8 Modulation Coder (Option SMIQB10)

This module generates the I and Q signals for digital modulation and conforming to the digital standards. Through the use of a signal processor new modulation methods and network standard can be implemented by software.

1.2.9 Data Generator (Option SMIQB11)

The data generator stores and supplies the digital data for the various network standards to the modulation coder.

1.2.10 Fading Simulator (Options SMIQB14/B15)

In this module the I and Q input signals are A/D-converted, digitally faded with selectable parameters and methods and reconverted into analog signals.

1.2.11 Noise/Distortion Simulator (Option SMIQB17)

In the noise/distortion simulator the I and Q input signals are A/D-converted, digitally distorted and/or superimposed by noise with selectable parameters and reconverted into analog signals.

1125 5555 7 E-1

Test Instruments and Utilities

Item	Requirements	Instrument				
1	Controller according to industry standard AT with remote control interface IEC-625/IEEE488 and serial interface RS232, connecting cable for RS232 and IEC bus	PSM17 (1116.5004.70)				
2	Board adaptor, software for diagnosis and calibration	Service Kit SM-Z3 (1085.2500.01)				
3	RF power meter, 300kHz to 3.3 GHz	R&S NRVS (1020.1809.02) with power sensor NRV-Z51 (857.9004.02)				
4	10-MHz frequency counter, calibrated					

125 5555 8 E-1

1.4.1 Built-in Utilities, Servicekit

For self-monitoring and servicing purposes, internal test points are provided on all modules. The most important ones release an internal alarm via comparators when limit values are exceeded; all of them can be measured via multiplexer and an A/D converter on the controller board.

At least the available control voltages (also provided with alarm comparators) and the output levels can be internally measured on every module. In addition, test points are provided to support adjustments and enable measurements at places where an external measurement would cause problems (e.g. RF level in the module at interfaces to submodules). Mostly, these utilities are sufficient for identification of the damaged module.

The Service Kit SM-Z3 (Test Instruments and Utilities, pos. 2) contains extension boards and cables to put modules into an accessible servicing position. Furthermore a floppy disk is provided containing a diagnostic program, which performs a lot of module tests, diagrams and trimming routines to ease troubleshooting. Another program is provided for recalibration of the output level.

1.4.2 Selftest, Error Messages (ERROR)

If the control voltage exceeds the permissible range in a control loop, an alarm is released on the computer, which is indicated in the status line of the display. It may be caused by missing calibrations, wrong operation, exceeding of the specified parameters (above all in the case of the level) or internal faults.

The faults should be eliminated in the sequence given in the table below, since the faults listed further down may result from faults above.

1125 5555

Warrana in the dignlay	Fault	Possible causes
Message in the display 172, Reference	The 100-MHz crystal	External reference selected
frequency 100MHz VCXO	oscillator on the module	but not connected,
unlocked	Reference/Step Synthesis	
uniocked	(A7) is asynchronous.	wrong frequency of the
	(A) is asynchications.	external reference selected,
		external reference not in the
		permitted lock-in range,
		hardware error.
173, Step synthesis	The step synthesis on	Hardware error.
unlocked	the module	
aniockeu	Reference/Step Synthesis	
	(A7) is asynchronous.	•
221 Distral growthogic	The buffer loop on the	Hardware error.
221, Digital synthesis buffer VCO unlocked	module Digital Synthesis	
buffer VCO unlocked	(A8) is asynchronous.	
	(A8) is asynchronous.	
120 774 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	The modulation	Heavy overload with external
130, FM modulator VCO	oscillator on the module	modulation.
unlocked	FM Modulator (option) is	modulation.
	asynchronous.	Hardware error.
		Missing or faulty calibration,
211, Summing loop	The PLL on the Summing	e.g., after module replacement
unlocked	Loop module is	or at extreme temperatures
	asynchronous.	(cf. Calibration Routines).
		Overload with external
	0	FM/Phim.
		CAUTION ! After elimination of
		the overload, perform PRESET
		or a new calibration in order
		to synchronize the module
		again if repeated frequency
		changes lead to the error
1		
		message again! Hardware error which often
		results from faults on the
		Digital Synthesis or Step
		Synthesis.
		Synchesis.
	ml - 2 2 trail for	Level outside the specified
110, Output unleveled;	The level control for	1
ALC Failure	the output level on the	range.
	IQ modulator module does	Overload with AM-EXT-DC.
	not work correctly.	OUCLIONE WICH IN DAIL DO.
		Missing or faulty
		calibration, e.g., after
		module replacement or at
		extreme temperatures (cf.
		Calibration Routines).
		Calibration Woodines!
		Hardware error.
	m1	Hardware error.
111, IQCON: ALC loop	The local level control	naidwate error.
failure	on the IQ-converter	
	module does not work	
	correctly.	

10F FFFF 10 E-1

Message in the display	Fault	Possible causes
112, E6GHZ: ALC loop	The level control on the	Level outside the specified
failure	frequency extension module does not work	range.
	correctly.	Overload with AM-EXT-DC.
		Missing or faulty calibration, e.g., after module replacement or at extreme temperatures (cf. Calibration Routines).
		Hardware error.
224, 2.4 GHz LO loop unlocked	The VCO for the output mixer on the IQ-modulator board is not synchronized.	Hardware error.

1.4.3 Internal Diagnosis

Since the voltage range of the multiplexers is limited to \pm 5 V, voltage dividers are required at many test points. However, the original voltage is to be indicated in the display so that every test point has its associated scaling factor. The full measured value before the voltage divider is displayed.

For further fault location, the following test points can be selected, the specified voltages are approximate values for properly functioning instruments. They are indicated on the display and can also be read out by a controller via the IEC-625 interface.

1.4.4 List of Diagnostic Points

The table contains the voltages which may occur in the case of a functioning instrument. Some of the test points require the corresponding function to be activated on in order to obtain the table values. An X in the column IR means that the test point releases an alarm. Df is the divider factor before the multiplexer.

Module	T-point	Test	*	min/V	max/V	Df
FRO	0	Reference 1kOhm		-0.05	0.05	
	1	Input DIAG-15		-15	15	
	2	Input DIAG-5		-5	5	
	3	X-voltage		0	10	
·····	4	not used				
	5	Programming voltage EEPROM		0	5.5	
	6	Reference voltage X-D/A converter		4.9	5.1	
***************************************	7	Battery voltage		2.2	3.8	

11 R_

Module	T-point	Test	*	min/V		Df
ROSC	100	Reference 10kOhm		-0.01	0.01	1
	101	Bridge voltage thermostat (VAR06, only)	х	5.6	6.4	3
	102	Output level		0.6	3	1
REFSS	200	Reference 10kOhm		-0.01	0.01	1
	201	Tuning voltageVCXO 100MHz	×	2	12	4
	202	DAC tuning 10-MHz reference		-10	0	4
	203	Level 1-MHz reference		1.8	2.5	1
	204	Level divider output 1MHz	<u> </u>	2	3	1
	205	Level external reference		0.8	3.5	1
····	206	Level 300-MHz IF		0.1	0.4	1
	207	Level Output REF50		0.3	1.3	1
J	208	Frequency detector		-0.04	0.04	4
	209	Level Output REF100		0.15	1.2	1
	210	Level Output REF600		0.15	0.6	1
	211	+24-V supply		22.5	25.5	8
	212	Tuning voltage STEP-VCO	×	1	21	6
	213	Level Step divider		0.4	2.5	1
	214	Level Step IF (3 to 17 MHz)		0.1	0.25	1
	215	Level Output FSTEP		0.2	0.6	1
DSYN	300	+15-V supply		14	16	4
	303	Clock for DDS-GA		0.5	1.5	1
	304	Output level FDSYN		0.05	0.2	1
	305	Tuning voltage buffer VCO off		-5	24	5
		Tuning voltage buffer VCO on		1.5	21.5	5
	306	-15-V supply		-14	-16	4
	307	7.5-V supply		7	8	2
FMOD	500	Reference 10 kOhm		-0.01		1
	501	Tuning voltage VCO	х	2.7	12.3	3
	502	Level VCO		0.1	0.4	1
	503	LO level 1st mixer		0.1	0.4	1
	504	Output level FDFM		0.1	0.6	1
	505	Modulation voltage		-4	4	3

Module	T-point	Test	*	min/V	max/V	Df
SUM	600	PLL differential voltage		-0.6	0.6	2
	601	IF level		0.18	0.28	1
	602	RF level at sampler		0.01	0.15	1
	603	Pulse amplitude		1	3	1
	604	Output level FSUM		0.06	0.4	1
	605	VCO level		0.02	0.3	1
	605	VCO tuning voltage	x	0	22	5
	607	VCO preset		0	22	5
ATTC	1100	Overvoltage protection		5	-3	1
IQCON	2000	Reference 10kOhm		-0.01	0.01	1
	2001	Internal -10V		-10.2	9.8	3
	2002	Level Preset		2.5	6	5
	2003	Tuning voltage owfil		0	22	5
	2004	Tuning voltage vdfil		0	22	5
161100	2005	Tuning voltage iqfill	<u> </u>	0	22	5
	2006	Tuning voltage iqfil2		0	22	5
	2007	Tuning voltage iqfil3		0	22	5
	2007	Internal ref4		3.9	4.1	1
	2009	Internal ref6	-	6.4	6.6	2
	2010	Internal ref10	_	9.8	10.2	3
	2010	Level owfil		0	0.6	1
	2011	Level vdfil		0	0.6	1
	2012	Local ALC	-	0	12	3
			X	0.1	0.6	1
	2014	Input level iqfil		0.1	0.6	3
	2015	Output level iqcon		0.1	0.0	3
IQMOD	2100	Reference 10kOhm		-0.01	0.01	1
101101	2101	Internal ref10		9.8	10.2	3
	2102	Output LF generator		-1	1	3
	2103	Level ref600	_	0.1	0.5	1
	2104	Tuning voltage 2.4-GHz VCO	×	0	22	5
	2105	Level 2.4 GHz oscillator	 ^ -	0.1	0.3	1
	2106	Level at phi600		0.1	0.3	1
	2107	LO level 2.4 GHz		0.1	0.3	1
	2107	Level Preset		2.4	6	3
	2109	ALC voltage	×	0.1	14	3
	<u> </u>	Level command value	^_	6	0	3
	2110	Level IF		0	0.3	1
	2111	Level AM modulator	-	0	0.5	1
	2112			0	6	
	2113	Detector voltage			1.5	3
	2114	Level ref300		0.5	}	1
	2115	Level igout	_	0	0.3	1
	2116	Level inp. I		-0.5	0.5	2
	2117	Level inp. Q		-0.5	0.5	2
	2118	LO level I		0	0.5	1
	2119	LO level Q		0	0.5	1
	2120	Phase control voltage		3.5	13	3
	2121	300-MHz calibration detector		0	10	3
	2122	Power ramp		-3	0	3
	2123	Control voltage lev. att.		-3	0	3

10c ccc 13 F-1

Module	T- point	Test	*	min/V	max/V	Df
MCOD	2200	Reference 10kOhm		-0.01	0.01	1
MCOD	2200	Tuning voltage VCO	х	0	20	5
	2202	Signal out_i		0	1.1	1
	2202	Signal out_q		0	1.1	1
	2204	Signal out_burst		0	4.5	3
	2205	VCO level		0	0.5	1
	2206	+5-VA supply		4.8	5.3	2
	2207	-5-VD supply		-5.3	-4.8	2
	2201	3 02 5455-1				
DGEN	2300	Battery voltage		2.0	3.8	1
	0.400	Reference 10kOhm		-0.01	0.01	1
E6GHZ	2400			0	10	4
	2401	Detector voltage		0	5	1
	2402	Temperature sensor		 ` 	+ -	+
	2403	1-4 Jerman		0	22	5
	2404	Tuning voltage 1st lowpass		0	22	5
	2405	Tuning voltage 2nd lowpass		0	22	5
	2406	Tuning voltage 1st highpass		0	22	5
	2407	Tuning voltage 2nd highpass		0	10	3
	2408	Level preset		0	10	3
	2409	Level before filter bank		0	10	3
	2410	Level before ALC		0	10	3
	2411	Level before output amplifier		0	10	3
	2412	Level of 900 MHz IF	x	-15	15	3
	2413	ALC voltage	- ^-	-15	15	3
	2414	ALC voltage synthesizer mixer		-15	15	3
	2415	ALC voltage modulation mixer		-10		
FSIM1	2500	+3.3V supply		3.1	3.5	1
	2501	I-output		0	1	1
	2502	Q-output		0	1	1
	2503	Clock generator supply		4.7	5.3	2
	2504	Digital module supply		4.9	5.5	2
	2505	Ground		01	.01	1
	2506	Ground		01	.01	1
	2507	Ground		01	.01	1
FSIM2	2600	+3.3V supply		3.1	3.5	1
	2601	I-output		0	1	1
	2602	Q-output		0	1	1
	2603	Clock generator supply		4.7	5.3	2
	2604	Digital module supply		4.9	5.5	2
······	2605	Ground		01	.01	1
	2606	Ground		01	.01	1
	2607	Ground		01	.01	1
NDSIM	2700	+3.3V supply		3.1	3.5	1
	2701	I-output		0	1	1
	2702	Q-output		0	1	1
	2703	Clock generator supply		4.7	5.3	2
	2704	Digital module supply		4.9	5.5	2
	2704	Ground		01	.01	1
	2705	Ground		01	.01	1
<u> </u>	2707	Ground		01	.01	1

1.0 E-1

1.4.5 Testing the Modules with the Built-in Diagnosis

The diagnosis is activated in the menu UTILITIES/DIAG/TPOINT/STATE with ON. TPOINT permits to select the desired test point via rollkey or keyboard.

1.4.5.1 Troubleshooting with Respect to Modules

Before performing the specified settings on the SMIQ, the instrument should be set to a defined initial status by means of PRESET. Diagnostic test points which are not referred to in the following must lie inside the given limits irrespective of the settings. Particularly the internal supply voltages should be the first to be checked.

These simple tests are intended to allow for determination of a faulty module, more detailed tests can be looked up in the service instructions of the modules.

Most of the following tests and many more can be performed automatically using the **diagnostic program of the Service Kit SM-Z3**. This program additionally offers an overall test, wherein all modules are checked in order of signal flow. Defects so are listed in that order, they should get repaired to prevent unneccesary troubleshooting on secondary defects.

1.4.5.1.1 A3 Front Module, Diagnostic Test

If the instrument does not respond to inputs via rollkey or keyboard although the display shows readings, first check whether the instrument is disabled by the remote control (IEC bus) or whether a key got stuck. If this is not the case, see service instructions for the module A3.

Test points 0 to 7 are to be found on the computer. Test point 0 is applied to digital ground, measuring the voltage drop of this ground with respect to the analog ground. Test point 2 is not used with the SMIQ. Test point 3 indicates the input voltage of the diagnostic A/D converter.

- \bullet For testing the diagnosis, select TPOINT 3 and apply a voltage V with -5 V < V < +5 V to pin 19 of the motherboard plug of a module.
- \triangleright The voltage applied to pin 19 must be read out on the display. The deviation must be <1 % ±50 mV.

Test point 6 measures the voltage for the output socket X-AXIS at the rear.

- Set any sweep with approx. 100 steps on the SMIQ. Vary from the lower to the upper sweep limit in the operating mode MAN and observe the indicated voltage.
- > It must vary from 0 to 10 V proportionally to the sweep steps. Test point 7 measures the voltage of the battery supplying the non-volatile memories (RAM). If the voltage drops below 2.2 V, the data will no longer remain saved after switching off.

1.4.5.1.2 A2 Power Supply

The power supply features an independent self-monitoring facility, switching to standby mode in the case of overload or internal disturbances (LED on the front panel).

• Test points 211, 300, 306 and 307 permit to perform measurements on the modules for checking whether the supply voltage are properly applied.

1.4.5.1.3 Reference/Step Synthesis

Proper functioning of the step synthesis over its frequency range can be checked as follows:

- Vary the frequency from 840 to 942 MHz on the SMIQ. In this frequency range, nearly all steps of the step synthesis are swept through.
- \triangleright The tuning voltage of the step VCO at test point 212 must increase continuously from approx. 2 V to approx. 18 V.

1.4.5.1.4 A7 Digital Synthesis

Functioning of the buffer loop can be checked as follows:

- Vary the frequency (unmodulated) on the SMIQ from 1350.2 to 1351.4 MHz. Thus the setting range of the digital synthesis is fully swept through.
- > The tuning voltage of the buffer VCO at TPOINT 305 must continuously increase from approx. 14.6 to approx. 18 V.

1.4.5.1.5 A6 FM Modulator (Option)

The built-in modulator allows for tracing the signal path of FM as far as to the modulator.

- To this end, select MODULATION/FM/FM2 SOURCE INT, DEVIATION 500kHz at an RF of 1000 MHz and LFGEN FREQUENCY 0.2Hz.
- \triangleright Am TPOINT 505 soll die Anzeige von ca+1.5V bis ca. -1.5V variieren.

1.4.5.1.6 A9 Summing Loop

Correct synchronization of the two oscillators can be checked as follows:

- Vary the carrier frequency (unmodulated) on the SMIQ from 750.0000001 to 1100 MHz. Thus, the complete tuning range of the first oscillator is covered.
- > The voltage at test points 606 and 607 must continuously increase from 2 ± 0.5 to 19 ± 2 V. It must not exceed ± 600 mV at test point 600.

The second oscillator features an inverted tuning characteristic.

- Vary the carrier frequency (unmodulated) on the SMIQ from 1100.0000001 to 1500 MHz. Thus, the complete tuning range of the second oscillator is covered.
- \triangleright The voltage at test points 606 and 607 must continuously decrease from 19 ± 1V to 2 ±1 V. It must not exceed ±600 mV at test point 600.

In the case of faulty functioning, in particular in the upper frequency range of both oscillators, the calibration might be faulty. For recalibration, see Calibration Routines.

1.4.5.1.7 IQ Converter

• Generation of the tuning voltages for the various filters can be checked according to the table below. The tuning voltages must vary continuously between the interpolation points.

Carrier	Modulation	Diagnostic	Filter	Rated voltage
frequency in MHz		point	<u> </u>	in V
500	CW	2003	owfil	3
750				6.5
1000				11.5
1200				21
1500				21
1500.1		2004	vdfil	0
1750				3
2000				6
2250				9
2500				15
2700				20
2750 to 3000				21
800	VM	2005	iqfil1	3
1000				4
1200				5.5
1400				7
1600				10
1799.9				11
1800.1				0.5
2000				5
2200				10
2400				16
2499.9				20
2500.1				6
2800				8
3000				10
3200				13
3300				15
800	VM	2006	iqfil2	3
1000				4.5
1200				6

	1 3	Disensatio	Filter	Rated voltage
Carrier	Modulation	Diagnostic point	FITCEL	in V
frequency in MHz		DOTILC		7.5
1400				10
1600				15
1799.9				6
1800.1				8
2000				
2200				9.5
2400				14
2499.9			<u></u>	18
2500.1				5.5
2800				7
3000				10
3200				14
3300				18
800	VM	2007	iqfil3	0 .
1000				4
1200				5
1400				6.7
1600				10
1799.9				16
1800.1		-		1.5
2000				4.5
2200		-		6.5
2400				10
2499.9			1	13
2500.1				2
2800.1			 	5
				8
3000			+	11
3200	<u> </u>		<u></u>	13
3300	<u> </u>			

105 FFFF 18 E-1

Level measurements

• Preferably start tracing the level in CW mode.

Carrier frequency in MHz	Modulation	Diagnostic point	Measurement	Rated voltage in V
450.1 to 1499.9	CW	2011	owfil	>.03
1500.1 to 3000	CW	2012	vdfil	>.03
450.1 to 3000	CW	2013	Local ALC	<12
450.1 to 3000	CW	2015	Output level	0.2 to 0.3

- Subsequently, trace levels in IQ mode.
- > It is therefore required to apply 0.50V dc to the I or Q input.

Carrier frequency in MHz		Diagnostic point	Measurement	Rated voltage in V.
750.1 to 3300	VM	2014	Input iqfil	>.03
750.1 to 3300	VM	2013	Local ALC	<12
750.1 to 3300	VM	2015	Output level	0.15 to 0.4

1.4.5.1.8 IQ Modulator

- Level command value
- > Settings on SMIQ: level 7 dBm, internal AM featuring 0% modulation depth, switch off level correction (CALIB/LEVEL/USAGE OFF).
- \triangleright A voltage from -1.5+-0.1V shall be measured at diagnostic test point 2110.
- ➤ If the LF generator is set to 0.1 Hz and the modulation depth is increased to 100%, the voltage must change between 0 and -3 V.

RF Level

• The level is traced with 16 dBm, unmodulated.


Carrier frequency in MHz	Modulation	Diagnostic point	Measurement	Rated voltage in V
450.1 to 3300	CW	2112	acc. to ALC element	>.03
400	CW	2107	2.4-GHz LO level	>0.1
100 to 450	CW	2111	IF level	>0.03

Testing the modulator

• Internal calibration of the modulator is suitable for testing the modulator (cf. Calibration Routines).

1.4.5.1.9 Frequency Extension

• The tuning voltages for the various filters can be checked with the aid of the following graph. The example gives approximate values only, the tuning voltages are determined for each individual module and stored in an EPROM on the module.

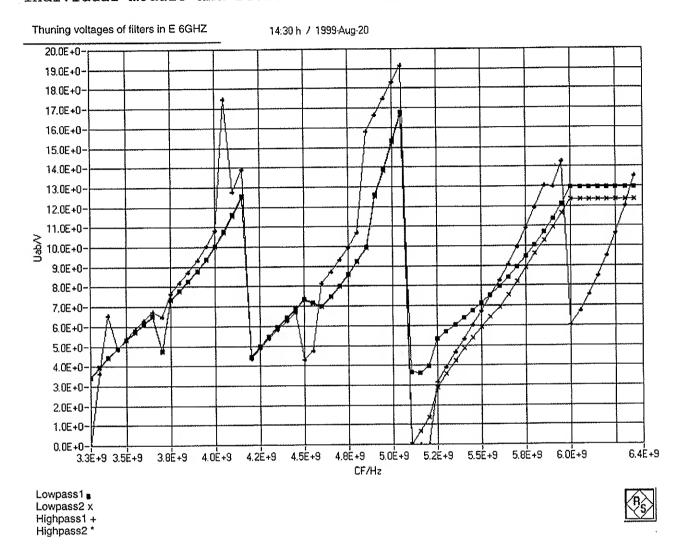

Level measurements

• The level should be measured in CW mode at 13 dBm.

			Rated voltage in V
3000	2414	LO synthesizer mixer off	< -0.2
3300.1max.RF	2414	LO synthesizer mixer, ALC	0.5 < v < 2
3000	2415	LO modulation mixer off	<-0.2
4000	2415	LO modulation mixer, ALC	0.5 < v < 2
4000	2412	Level of LO modulation mixer	> 0.1
3300.1max.RF	2410	Level after filter bank	>0.5
3300.1max.RF	2411	Level before output amplifier	>0.1

1.4.5.1.10 Modulation Coder

Diagnostic	Measurement	Rated voltage
point		in V
2206	+5V supply	4.9 < v < 5.3
2207	-5V supply	-5.45 < v < -4.85

1.4.5.1.11 Data Generator

Diagnostic	Measurement	Rated voltage
point		in V
2300	RAM battery	> 2.1

1.4.5.1.12 Fading Simulator 1

Diagnostic	Measurement	Rated voltage
point		in V
2500	+3.3V supply	3.1 < v < 3.5
2503	Clock generator supply	4.7 < v < 5.3
2504	Digital module supply	4.9 < v < 5.5

1.4.5.1.13 Fading Simulator 2

Diagnostic point	Measurement	Rated voltage
2600	+3.3V supply	3.1 < v < 3.5
2603	Clock generator supply	4.7 < v < 5.3
2604	Digital module supply	4.9 < v < 5.5

1.4.5.1.14 Noise/Distortion Simulator

Diagnostic point	Measurement	Rated voltage in V
2700	+3.3V supply	3.1 < u < 3.5
2703	Clock generator supply	4.7 < u < 5.3
2704	Digital module supply	4.9 < u < 5.5

1105 5555 21 D...1

1.4.6 Troubleshooting to Type of Error

Depending on the type of error, the sequence of the modules that may have caused the fault is listed in the following according to the signal flow

Type of Error	Troubleshooting Sequence	
Frequency error	Reference oscillator OCXO (option)	
	Reference/Step synthesis	
	Digital Synthesis	
	Summing loop	
	Synthesizer (SMIQ-E)	
	IQ converter	
	IQ modulator ·	
Level error	Summing loop	
20,000 02101	Synthesizer (SMIQ-E)	
	IQ converter	
	IQ modulator	
	Attenuator	
AM error	IQ modulator	
FM/PhiM error	Reference/Step synthesis (mixed	
	frequency 100MHz)	
	Frequency modulator	
	Summing loop (error with high	
	deviations and modulation frequencies)	
	Synthesizer (SMIQ-E)	
Harmonic level too high	IQ converter	
	IQ modulator	
Insufficient spectral purity (SSB	If this error occurs in the	
noise, unwanted deviation)	unmodulated state, see Frequency	
The state of the s	error; only with FM/PhiM see FM/PhiM	
	error.	

1.5 Calibration, Password Protection

The diagnosis program in the service SM-Z3 provides a menu item which allows for performing all internal calibration.

For troublefree and safe operation of the instrument, valid calibration values are required for various functions.

Calibration values which can be generated by the instrument itself are kept in the battery-backed RAM of the computer. These values are protected against accidentally overwriting by a password (level 1, 123456).

Unlocking password protection is described in the operating manual.

Values which can only be determined using external measuring equipment are written into the flash EPROM (level correction and tuning voltage of reference oscillator). These data are protected by password level 3 or 2.

Since the flash EPROM does not permit single data to be deleted, new memory space is used for each calibration.

If no more memory area is available, the EPROM must be cleared and newly written to by a R&S service department. Calibrations like this should only be performed if required.

Operational data (operating time, attenuator switch count etc.) are protected by password level 3.

1.5.1 Calibration Routines

1.5.1.1 Calibration of Summing Loop Pretune Voltage

After unlocking the password protection (Level 1, 123456) CALIBRATE ALL can be activated in the UTILITIES/CALIB/ALL menu. All internal calibration routines are automatically called up in the correct sequence.

CAUTION!!

The summing loop cannot synchronize without valid calibration of the pretune voltage! This routine must be called up after an adjustment or module replacement.

- Perform calibration as described in the operating manual.
- > The instrument should have warmed up to normal operating temperature. If the cold instrument has to be calibrated to be started up, the calibration must be repeated at normal operating temperature.

> This calibration must be performed prior to any other calibration!

Results of the calibration can be checked by selecting VIEW. Typical values for the offset (in the first column after the frequency) are up to +-200mV, preset values in the second column typically raise from about 90 up to about 240 at 1100MHz and fall down again to about 90 at 1500MHz. The third column shows values representing tuning sensitivity in the range from 0 to 7.

The calibration data are stored in the RAM and can be updated as often as desired.

1.5.1.2 Calibration of the Vector Modulator

Optimum modulation data of this modulator are obtained by internal calibration. Depending on the configuration, offsets of other modules can also be calibrated.

- Perform the calibration according to the operating manual.
- > The instrument should have warmed up to normal operating temperature. If the cold instrument has to be calibrated to be started up, the calibration must be repeated at normal operating temperature.

100 000 P 1

The calibration data are stored in the RAM and can be updated as often as desired.

1.5.1.3 Calibration of Level Preset

The individual level preset of the instrument permits the level control to be operated in its optimal operating point.

CAUTION!!

If the calibration table is missing or faulty, the AM and vector modulation characteristics become worse, in the extreme case the set level is not reached and failure message "110 Output unleveled; ALC Failure" is displayed.

The calibration must always be performed when the Front Module has been replaced or modules starting from the summing loop have been repaired or replaced. The frequency generation must work properly, the summing loop, in particular, must be calibrated (see above).

- Perform the calibration according to the operating manual.
- > The instrument should have warmed up to normal operating temperature. If the cold instrument has to be calibrated to be started up, the calibration must be repeated at normal operating temperature.

Results of the calibration can be checked by selecting **VIEW**. Typical values range from 16 to 50.

The calibration data are stored in the RAM and can be updated as often as desired.

1.5.1.4 Output Level Correction

The accuracy of the output level is obtained by means of a level correction according to a table stored in the computer. The table is generated using a test program and a calibrated power meter and transferred into the EPROM of the computer.

This calibration must be repeated after replacement of the computer and after replacement or repair of the IQ-modulator or attenuator modules.

The following instruments and utilities are required:

- controller (Test Instruments and Utilities, item 1).
- program floppy disk (Test Instruments and Utilities, item 2).
- Power meter (Test Instruments and Utilities, item 3).
- To execute the program-controlled calibration please refer to the manual of the service kit (Test Instruments and Utilities, item 2)

1.5.1.5 Reset Attenuator Counter

When fitting a new attenuator, the counter in menue UTILITIES/DIAG/PARAM is to be reset. The counter is protected by password level 3. Unlocking is described in the operating manual. Please contact your local R&S representative to get the password. After unlocking menue UTILITIES/DIAG/SET PARAM appears, which allows switch counts to be reset.

1.5.1.6 Calibration of the Reference Frequency

If the option SM-B1, reference oscillator OCXO is not fitted to the instrument, the reference oscillator on the reference/stepsynthesis module must be recalibrated in case of module replacement or advanced ageing.

- > The instrument should have warmed up to normal operating temperature.
- Set UTILITIES/PROTECT LOCK LEVEL 2 to OFF by entering the pass word 250751.
- Connect calibrated frequency counter (Test Instruments and Utilities, item 4) to the REF connector on the rear panel and measure the output frequency.
- Select UTILITIES/CALIB REF OSC. Select CALIBRATION DATA and vary the rollkey until reaching the rated frequency 10.000000 MHz. The new setting value is written to the EPROM by selecting STORE CALIBRATION DATA.

CAUTION!! This procedure can only be performed as long as the EPROM provides sufficient storage capacity. Otherwise, the flash EPROM has to be reprogrammed by an R&S service department.

If the SM-B1 option, reference oscillator OCXO is fitted, the calibration data have to be transferred to the EEPROM of the computer with replacement of the option or advanced ageing. Refer to the service instructions of the option.

1.5.2 Adjustments of Complete Instrument

If the instrument is composed of modules which are tested and adjusted according to the corresponding service instructions, only the calibrations listed in section Calibration Routines need be performed.

1105 555 75

1.5.3 Adjustments on Module Replacement

After replacement of a module it is recommended to carry out all internal calibrations on the instrument after warmup (see above). The internal and external calibrations listed in the table below are required as a minimum.

Replacement of module	Required adjustments		
Front unit	all		
Option SM-B1, reference oscillator OCXO	Calibration of the reference frequency		
Reference/step synthesis	Calibration of the reference frequency		
Digital synthesis	none		
Summing loop	Calibration of the pretune voltage of the summing loop,		
	calibration of level preset		
IQ converter	Calibration of level preset		
IQ modulator	Calibration of the vector modulator Calibration of level preset, output level correction		
Frequency extension	Calibration of the vector modulator Calibration of level preset, output level correction		
Attenuator	Output level correction Reset of attenuator counter		

26 E-

1.6 Removal and Assembly

CAUTION !!! Switch off the instrument and pull the power plug prior to removal

1.6.1 Replacing the Panelling

- Loosen four screws in the rear-panel feet and remove the feet.
- >The upper panelling can then be lifted towards the rear and the top.
- Place the instrument upside down in order to remove the lower panelling.
- Before fitting the panelling first check whether the modules are locked and lock them, if necessary.
- Place the instrument onto a side edge and insert the lower panelling first. Make sure that the sealing cords are correctly placed in their grooves.
- Place the instrument in the horizontal position and insert the upper panelling.

Make sure with both panellings that the guide lugs on the rear panel engage into the grooves of the panellings

• Fasten the feet with screws.

1.6.2 Replacing a Plug-in Module

- Remove panelling (see above).
- Place the instrument onto a side edge.

Before removing a module, the common lock of the modules must be loosened.

- For this purpose, loosen the two screws in the elongated holes on every locking rail. The rail in question can then be pushed to the front using a screw-driver (slotted-type) at the points marked by the screw-driver symbol.
- Take off or unscrew the RF cables.
- > The module can then be removed.

For replacement, proceed in the reverse order.

110G GGGG 77 F_m1

1.6.3 Replacing the Front Module

- Loosen four screws in the feet on the rear panel and take off the feet.
- Carefully take out the front module until the flat cable connectors can be removed from the front module.
- Loosen the lock of the big flat cable plug at the front edge of the motherboard and disconnect the plug.
- > The front module can then be removed.

When replacing the module in the reverse order make sure that no flat cables get stuck.

1.6.4 Replacing the Power Supply

- Loosen four screws in the feet on the rear panel and take off the feet.
- Unscrew six screws (marked by milling of their contact surface) at the edge of the right-hand sheet of the rear panel and two screws on the joint of the two rear panel sheets.

The power supply is directly plugged to the motherboard and can then be removed.

For replacement, proceed in the reverse order.

1.7 External Interfaces

The external interfaces are described in the operating manual.

28



Liste mechanischer Teile Bilder und Erklärung zur Liste mechanischer Teile

List of mechanical parts
Figures and explanation pertaining to
list of mechanical parts

Liste des pièces mécaniques Figures et définitions pour la liste des pièces mécaniques

				:
				:
				:
				:
			,	

Liste mechanischer Teile

List of mechanical parts

Der SMIQ ist in **R&S-Kompaktbauweise 90** aufgebaut.

The SMIQ is designed in accordance with the *R&S design 90*.

Gehäusegröße:

4E, 1/1, T460

Cabinet size:

Accessories:

4E, 1/1, T460

Maße über alles:

 $450 \times 192 \times 460 (B \times H \times T)$

Overall dimensions:

 $450 \times 192 \times 460$ (width \times height \times depth)

Ergänzungen:

19"-Adapter

ZZA

19"-Adapter

ZZA

Tragegriff, Nachrüstsatz

(falls ein zweiter Tragegriff gewünscht wird)

Carrying handle, retrofit set

(if a second carrying handle is desired)

Lfd. Nr.	Kenn- zeichen	Menge	Benennung/Beschreibung	Sachnummer
No	Unit/ Comp.No	Qty	Designation	Stock No.
1		1	Haube, oben 4 E, 1 / 1 , T 460 Cover, top	-819:0426 1106, 1306,00
2		1	Haube, unten 4 E, 1 / 1 , T 460 Cover, bottom	- 396:7910 {}06:1823,€€
3		1	Führungsschiene, rechts Guide rail, right	
4		1	Führungsschiene, links Guide rail, left	
5		1	Bedienhinweiskarte 1 User guide card 1	Campana,
6		1	Bedienhinweiskarte 2 User guide card 2	
7		1	Bedienhinweiskarte 3 User guide card 3	· · · · · · · · · · · · · · · · · · ·
8		2	Gerätefuß, vorne Instrument foot, front	396.4534
9		2	Aufstellfuß, unten Foot, bottom	396.4540
11		2	Gerätefuß, hinten Instrument foot, rear	396.4586
12		8	Zapfen Pin	396.4634
15		2	Seitenleiste T 460 Side strip	396.3080

Lfd. Nr.	Kenn- zeichen	Menge	Benennung/Beschreibung	Sachnummer
No	Unit/ Comp.No	Qty	Designation	Stock No.
16		4	M3×6 DIN965 A4	081.9378
17		1	Rückwandfuß, links 4 E Rear-panel foot, left	396.4363
18		1	Rückwandfuß, rechts 4 E Rear-panel foot, right	396.4157
19		4	Ansatzschr. M4 K.D 7985 Screw	396.4492
21		1	Tragegriff T 460 Carrying handle	: 396.3221
22		2	Griffbuchse Washer	396.3367
23		2	M4×10 DIN965 A4	081.9478
24		2	Abdeckung, Griffseite Cover, handle side	396.3350
25		2	Abdeckung, Leerseite Cover, blank side	396.3344
30		1	Frontrahmen 4 E 1 / 1 Front frame	396.2131
31		4	Seitenfuß Side foot	396.4692
32		2	Stapelnutabdeckung Cover for groove	396.4711
33		2	Frontgriff Front grip	
34		4	M4×8 DIN965	396.1087
35		1	Rückrahmen 4 E 1 / 1 Rear frame	396.2277
36		4	Rahmenschiene T 460 Frame rail	396.2377
37		16	M3×8 DIN965 A4	081.9384
40		1.17 M	HF-Dichtschnur O-Prof. 2,7 SI RF seal	396.0916
41		3.22 M	WG HF-Dicht. O-Prof. 2,0 SI RF seal	396.1035

1084.8004.02 6.31 D/E-1



Schlüsselliste für Bauteile-Sachnummern

Code list for component stock nos.

Liste des références des composants

				•
				:



R&S-Schlüsselliste R&S key list Liste des symboles de référence R&S

Die R&S-Schaftteilfisten nennen in der Spalte "Benennung/Beschreibung" die technischen Daten der Bauelemente in Kurzform. Die Art des Bauelements (z.B. Schicht-, Draht-Widerstand usw.) beschreiben die 2 Kennbuchstaben vor der "Benennung" (evtl. auch vor der "Sachnummer"), die nachfolgend erklärt werden. In Ersatzteil-Bestellungen an R&S ist stets die Angabe der vollständigen Sachnummer erforderlich

The R&S Parts Lists give the technical data of the components in short form in the column "Benennung/Beschreibung" (designation). The type of component (e.g. depos.-carbon resistor, wire-wound resistor etc.) is indicated by 2 identification letters before the designation, possibly also before the "Sachnummer" (order number), which are explained below. When ordering spare parts from R&S, the complete order number must always be specified.

La colonne "Désignation/description" des fistes de pièces de R&S indique les caractéristiques des éléments sous forme abrègée. Le type d'élément (p. ex. résistance à couche, résistance bobinée etc...) est décrit par les deux lettres précédant la désignation (et éventuellement le numero de référence), dont voici l'explication. Prière d'indiquer le numéro de référence ("Sachnummer") complet dans toute commande de pièces de rechange.

Teile- lamilie	Art des Bauelementes	Parts family	Type of component	Famil- le	Type delement
A	Aktive Bauelemente, Halbleiter	Α	Active components, semiconductors	A	Composants actifs, semiconducteurs
AD	Universaldiode, z.B. Gleichrichter, Sperrdiode	AD	General-purpose diode, e.g. rectifier, high-resistance diode	AD	Diode d'usage genéral, p.ex. redresseur diode à haute resistance
AE	Spezialdiode, z.B. Tunnel-, Kapazitäts-, Zener-Diode	AE	Diode (special), e.g. tunnel diode, varactor, Zener diode	AE	Diode speciale, p.ex. diode tunnel, varactor, diode Zener
AF	Fotohalbleiter, z.B. Foto-Diode, -Transistor, -Widerstand, Leucht- diode	AF	Photo-semiconductor, e.g. resistor, diode, transistor; LED	AF	Semiconducteur photoelectrique, p.ex. diode, transistor, resistance photoèl., DEL
AG	Leistungs-Gleichrichter, z.B. Thyristor, Triac, Selengleichrichter	AG	Power rectifier, e.g. thyristor, triac, selenium rectifier	AG	Redresseur de puissance, p.ex. thyristotriac, redresseur, au selenium
AK	Kleinsignal-Transistor	AK	Small-signal transistor	AK	Transistor faible puissance
AL	Leistungs-Transistor	AL	High-power transistor	AL	Transistor grande puissance
AM	Spezial-Transistor, z.B FET, MOSFET	AM	Transistor (special), e.g. FET, MOS-FET	АМ	Transistor special, p.ex TEC. MOSTEC
AP	Peltier-, Hall-Element	AP	Peltier element, Hall element	AP	Element Pettier, élement Hall
AR	Rohre für Empfanger, Verstarker, Gleichrichter	AR	Valve for receiver, amplifier, rectifier	AR	Tube pour récepteur, amplificateur, redresseur
AS	Spezialrohre, z.B. Senderohre, EW-Widerstand, Stabilisator	AS	Valve (special), e.g. for transmitter, baretter, ballast valve	AS	Tube (spécial), p.ex. pour emetteur, resistance fer-hydrogène, ballast
ΑT	Katodenstrahlrohre, z.B. Bildrohre, Ziffern-Anzeigerohre	АТ	Cathode ray tube, e.g. picture tube, digital indicator tube	AT	Tube à rayon cathodique, p.ex. tube a image, tube a affichage numérique
AZ	Zubehor für Halbleiter u. Rohren	AZ	Accessories for semiconductors and valves	AZ	Accessoires pour semiconducteurs et tubes
В	Bausteine	В	PC boards, chips	В	Cartes imprimées, puces
вс	Integr. Schaltkreis (Microcomp.)	ВС	Integrated circuit (interface, A/D)	вс	Circuit intègré (microprocesseur)
BD	R&S-Dunnschicht- und Dickschicht- schaltung	BD	R&S thinfilm or thickfilm circuit	BD	Circuit R&S à couche mince ou épaisse
BG	R&S-spezifische Gate-Arrays	BG	R&S gate arrays	BG	Circuits integrés prédiffusés R&S
BJ	Integrierter Schaltkreis (Interface, A/D-Wandler)	ВЈ	Integrated circuit (interface, A/D converter)	B1	Circuit intégré (interface, convertisseur A/N)
BL	Log. Schaltkreis z.B. DTL, TTL, HTL, ECL, C-MOS	BL	Logic circuit, e.g. DTL, TTL, HTL, ECL, C-MOS	BL	Circuit logique, p.ex. DTL, TTL, HTL, ECL, C-MOS
ВМ	Hybridbaustein, z.B. Mischer, Tuner, Modulator	ВМ	Hybrid chip, e.g. mixer, tuner, modulator	ВМ	Puce hybride, p.ex. mélangeur, tuner, modulateur
во	Analogschaltkreis, z.B. Operationsverstärker	во	Analog circuit, e.g. operational amplifier	во	Circuit analogique, p.ex. amplificateur opérationnel
BP	Optoelektronischer Baustein, z.B. Anzeigeeinheit, Koppler	BP	Optoelectronic component, e.g. display, coupler	BP	Composant optoelectronique, p.ex. afficheur, coupleur
BS	Schalt- und Steuerbaustein, elektronischer Sensor	BS	Switching and control modul, electronic sensor	BS	Modul de commutation et de commande, sonde électronique
вv	Stromversorgung, ÜberspSchutz	вν	Power pack, protective circuit	ВV	Alimentation, protection surcharge
BZ	Zubehör	BZ	Accessories	BZ	Accessoires

R 29500 (095.1000) - Seite 7

tamde	Art des Bauerementes	Parts family	Type of component	Famil- le	Type d'element
С	Kondensatoren	С	Capacitors	С	Condensateurs
CB	Bypass-, DurchfKondensator	СВ	Bypass capacitor, feed-through capacitor	СВ	Condensateur bypass, condensateur de traversée
CC	Keramischer Kondensator	CC	Ceramic capacitor	cc	Condensateur céramique
CD	Drehkondensator	CD	Variable capacitor	CD	Condensateur variable
CE	Elektrolytkondensator	CE	Electrolytic capacitor	CE	Condensateur électrolytique
CG	Glimmerkondensator	CG	Mica capacitor	CG	Condensateur au mica
СН	Sperrschichtkondensator	СН	Semiconductor capacitor	СН	Condensateur semiconducteur
CK	Kunstfolienkondensator	СК	Synthetic-foil capacitor	СК	Condensateur à feuille synthétique
CL	Ker. HochspKondensator	CL	HV capacitor (ceramic)	CL	Condensateur HT céramique,
CM	Metallpapier-Kondensator	СМ	MP capacitor	СМ	Condensateur à papier métallisé
CN	Kondensatornetzwerk	CN	Capacitor network	CN	Réseau capacitif
CP	Papierkondensator	CP	Paper capacitor	CP	Condensateur au papier
CS	Störschutzkondensator	cs	Interference-suppression capacitor	cs	Condensateur anti-parasite
CT	Trimmkondensator	СТ	Trimmer capacitor	СТ	Condensateur ajustable
CV	Vakuum-Kondensator	CV	Vacuum capacitor	cv	Condensateur à vide
D	Drähte, Leitungen	D	Wires, lines	ם	Fils, lignes
DD	Schalt- und Wickeldraht	DD	Hook-up or winding wire	DD	Fil de câblage, fil de bobinage
DF	Flachleitung, Litze	DF	Flat multiple line, stranded wire	DF	Ligne plate, ligne torsadée
DG	Abgeschirmte Leitung	DG	Shielded line	DG	Ligne blindė
DН	Koaxialkabel	DH	Coaxial line	DH	Ligne coaxiale
DJ	Isolierschläuche. Schrumpf- schläuche, Wellrohre, Schutzschläuche	DJ	Insulating sheaths, shrink-on sleeves, corrugated tubes, protective tubes	רם	Gaines isolantes, gaines thermorétrac tables tubes ondules, gaines protectrices
DL	HF-Litzen	DL	RF stranded wires	DL	Lignes torsadées RF
MC	Schaltlitzen (mehrdrahtige Leiter)	DM	Multi-conductor wires	DM	Lignes torsadees (multiconducteurs)
DN	Antenne	DN	Antenna	DN	Antenne
DO	Lichtleiter (optisch)	00	Optical waveguides	00	Guides d'onde optiques
OP	Leiterplatten (unbestückt)	DР	Printed circuit boards (bare)	DP	Cartes imprimées (non équipées)
DQ	Multilayer (unbestuckt)	DQ	Multilayer boards (bare)	DQ	Cartes multicouche (non équipées)
DS	Anschlußkabel (mehradrig)	DS	Connecting cable, multicore	DS	Câble de connexion (multiconducteur)
טם	Substratplatten für Dickschicht- schaltungen	טם	Substrate boards for thickfilm circuits	DU	Cartes à substrat pour circuits à couche epaisse
DW	Festmantelkabel	DW	Rigid cables	DW	Câbles rigides
Ε	Elektrische Teile	E	Electric parts	E	Organes électriques
EB	Blei-, NC-Akku, Batterie	EB	Lead or alkaline accumulator, battery	E8	Accumulateur Pb/NC, batterie
ED	Gedruckte Schaltung (bestückte Leiterplatte), nicht steckbar	ED	Printed circuits (assembled), non-pluggable	ED	Circuits imprimes (équipés) non enfichables
EE	Gedruckte Schaltung (bestückte Leiterplatte), steckbar	EE	Printed circuits (assembled), pluggable	EE	Circuits imprimés (équipés) enfichables
EF	Glühlampe, Leuchte	EF	Incandescent lamp, pilot lamp	EF	Lampe à incandescence, voyant
EG	Glimmlampe, Entladungslampe	EG	Glow lamp, discharge lamp	EG	Lampe à luminescence lampe à décharge
ĒΚ	Kontakt-Streifen, -Feder	EK	Contact clip, contact spring	EK	Lampe de contact, ressort de contact
EL	Lautsprecher, Kopfhörer, Mikrofon	EL	Loudspeaker, headphones, microphone	EL	Haut-parleur, casque, microphone
EM	Motor, Hubmagnet, Drehfeldsystem	ĘM	Motor, lifting magnet, synchro system	EM	Moteur, électro-aimant de levage, système synchro
EO	Oszillator, z.B. Quarzoszillator	EO	Oscillator, e.g. crystal oscillator	EO	Oscillateur p.ex. oscillateur à quartz
EP	Tief-, Band-, Hochpaß, Bandsperre, Diskriminator	EP	Lowpass, bandpass, highpass filter, band-stop filter, discriminator	EP	Filtre passe-bas, passe-bande, passe-haut, suppression de bande, discriminateur
EQ	Schwing-, Filter-Quarz	EQ	Oscillator or filter crystal	EQ	Quartz oscillateur, quartz de filtre
ER	Resonator, piezoelektr./magnetostriktiv	ER	Resonator, piezoelectric/ magnetostrictive	ER	Résonateur piezo-electrique/ magneto-strictif
ES	Passive SHF-Bauteile	ES	Passive SHF-components	ES	Composant SHF passif
ET	Thermostat	ET	Thermostat	ET	Thermostat
EV	Lüfter, Gebläse	ΕV	Ventilator, blower	EV	Ventilateur, soufflerie



Teile- familie	Art des Bauelementes	Parts family	Type of component	Famil- le	Type d'element
F	Fæssungen, Steckverbindungen	F	Sockets, connectors	F	Douilles, connecteurs
FG	Koax-Umrüstsatz	FG	Coaxial screw-in assembly	FG	Ensemble vissable coaxial
FH	Koax-Übergang auf Fremdsystem	FH	Coaxial adapter	FH	Adaptateur coaxial
FJ	BNC-Systemteil	FJ	BNC screw-in assembly	FJ	Ensemble vissable BNC
FK	Koaxial-UHF-Systemteil	FK	Coaxial UHF screw-in assembly	FK	Ensemble vissable coaxial UHF
FM	Mehrfachstecker, Buchsenleiste	FM	Multipoint connector	FM	Connecteur multiple
FN	Netz-Steckverbindung	FN	AC-supply connector	FN	Connecteur secteur
FQ	Runde Mehrfach-Steckverbindung	FO	Round multipoint connector	FO	Connecteur multipoles rond
FP	Druckschalt-Steckverbindung	FP	Multipoint connector for PC boards	FP	Connecteur multipoles pour cartes imprimées
FR	Fassung für Lampe, Sicherung, usw.	FR	Socket for lamp, fuse, etc.	FR	Douille pour lampe, fusible etc
FT	Schwachstrom-Steckverbindung	FT	LV plug and socket	FT	Connecteur pour faible courant
fυ	Hochspannungs-Steckverbindung	FU	HV plug and socket	FU	Connecteur pour haute tension
FV	Verbinder (z.B. AMP)	FV	Push-on connector	FV	Connecteur à enfichage
FZ	Zubehör für koax. Bauelemente	FZ	Accessories for coax, components	FZ	Accessoires pour composants coax.
н	Software	Н	Software	н	Logiciel
HP	Software-Komponenten und Software- Module	HP	Rights to software components and software modules	HP	Droits d'utilisation de composants et modules logiciel
HS	Auf Informationsträger geladene Software	HS	Software data media	HS	Logiciel sur support d'information
J	Meßinstrumente	J	Indicators	J	Indicateurs
JD	Drehspul-Anzeigeinstrument	JD	Moving-coil meter	JD	Galvanomètre à cadre mobile
JE	Dreheisen-Anzeigeinstrument	JE	Moving-iron meter	JE	Galvanomètre à fer mobile
JF	Frequenzmesser	JF	Frequency meter	JF	Fréquencemètre
JG	Drehspulinstrument mit Gleichrichter	JG	Moving-coil meter with rectifier	JG	Galvanomètre à cadre mobile avec redresseur
JH	Betriebsstundenzahler	JH	Operating-hours counter	JH	Compteur d'heures de fonctionnement
Jj	Impulszähler	JJ	Pulse counter	JJ	Compteur d'impulsions
JK	Kleinst-Instrument, z.B. Abstimmanzeiger	JK	Mini-instrument, e.g. tuning indicator	JK	Petit indicateur, p.ex. indicateur d'accord
JM	Mechanisches Zahlwerk	JM	Mechanical counter	JM	Compteur mecanique
JP	Projektions-Instrument (Leuchtziffer)	JP	Digital display	JP	Afficheur numérique
JQ	Quotientenmesser (Kreuzspulinstrum.)	10	Ratiometer (cross coul)	JQ	Quotientmètre (à cadres croisés)
JU	Uhrwerk	JU	Clockwork	JÜ	Mouvement d'horlogerie
JW	Elektrodyn, Anzeigeinstrument	JW	Electrodynamic meter	JW	Instrument électrodynamique
L	Induktivitäten, Magnetik	L	Inductors, magnetic components	L	Composants inductifs et magnétiques
LB	Blech- und Schnittbandkern mit Zubehör	LB	Laminated and C-cores with accessories	LB	Noyaux feuilletés et noyaux de type C. avec accessoires
LC	Keramische Spule	LC	Ceramic coil	LC	Bobine céramique
LD	Netz-, HF-Drossel, Df-Filter	LD	Choke, lead-through filter	LD	Self de choc, filtre de traversée
LE	Einzelkreis, Bandfilter	LE	Single tuned circuit, bandpass filter	LE	Circuit accordé, filtre passe-bande
LF	Ferritkern mit Zubehör	LF	Ferrite cores with accessories	LF	Noyaux en ferrite avec accessoires
LK	Karbonyleisenkern und elektrischer Kupferkern mit Zubehör	LK	fron carbonyl slugs and copper slugs with accessories	LK	Noyaux en fer carbonyle et en cuivre, avec accessoires
LL	Luftspule	LL	Air-core coils	LL	Bobines à air
LM	Magnetband und -platte	LM	Magnetic tapes and disks	LM	Bandes et disques magnétiques
LS	Schirmbecher	LS	Screening cans	LS	Boitiers de blindage
LT	Netztransformator	LT	Power transformer	LT	Transformateur secteur
LU	NF-Übertrager	LU	AF transformer	LU	Transformateur BF
LV	Variometer	LV	Variometer	LV	Variomètre
LW	Wickelkörper, allgemein	FM	Coil formers, general	LW	Carcasses de bobine, en général

Teile- tamilie	Art des Bauelementes	Parts family	Type of component		Famil-	Type delement
R	Widerstände	R	Resistors		R	Résistances
RD	Drahtwiderstand	RD	Wire-wound resisto	r	RD	Résistance bobinée
RF	Kohleschicht-Widerstand	RF	Carbon-film resistor	•	RF	Résistance à couche de carbone
RG	Metallglasur-Widerstand	RG	Metal-coated resisto	or	RG	Résistance à couche métallique
RJ	Metalloxyd-Widerstand	RJ	Metal-oxide resistor		RJ	Résistance à oxyde métallique
RK	Kaltleiter, Heißleiter, Varistor	ВK	PTC, NTC resistors	, varistors	RK	Résistances CPT, CNT, varistors
RL	Metallfilm-Widerstand	RL	Metal-film resistor		RL	Résistance à film métallique
RN	Widerstandsnetzwerk	RN	Resistor network		RN	Réseau de résistance
RR	Draht-Potentiometer	RR	Wire-wound potenti	ometer	BB	Potentiomètre bobine
RS	Schicht-Potentiometer	RS	Carbon-film potenti		RS	Potentiomètre à couche
RT.	Dämpfungsglied, Abschlußwiderstand		Attenuator, terminal		RT	Atténuateur, charge
 ?V	Drahtwiderstand mit Abgriff	RV	Wire-wound resisto		RV	Résistance bobinée à prise
RW	Wendelpotentiometer	RW	Helical potentiomet		RW	Potentiomètre hélicoidal
3	Schalter, Relais, Sicherungen	s	Switches, relays		s	
			· ·	, luses		Commutateurs, relais, fusibles
88	Drucktastenschalter	SB	Pushbutton switch		SB	Commutateur à touche
SD	Drehschalter	SD	Rotary switch		SD	Commutateur rotatif
SF SH	Kontaktfedersatz HF-Koaxialschalter, -Relais, -Teiler	SF SH	Spring contact asse Coaxial RF switch, I	·	SF SH	Jeu de ressorts de contact Commutateur RF coaxial, relais RF,
			RF attenuator	,		attenuateur RF
K	Kipp-, Wipp- und Schiebeschalter	SK	Toggle switch, slide		SK	Commutateur à bascule, à glissière
SL.	Leistungsschalter Netz/HF	SL	AC supply switch, h	igh-power RF switch	SL	Commutateur secteur, de puissance R
M	Mikroschalter	SM	Microswitch		SM	Microrupteur
N	Elektromagnet, Relais	SN	Electromagnetic rel	ay	SN	Relais électromagnetique
P	Leistungsrelais, Luftschutz	SP	Power relay, air-typ	e contactor	SP	Relais de puissance, contacteur à air
R	Reedrelais	SR	Reed relay		SR	Relais reed
SS	Sicherung, Schutzschalter	SS	Fuse, automatic cut	-out	SS	Fusible, coupe-circuit automatique
ST.	Thermoschalter	ST	Thermal circuit brea	aker	ST	Disjoncteur thermique
SU	Überspannungs-Ableiter	SU	Arrester		SU	Eclateur
SW	Wechselrichter, Naherungsschalter	sw	Inverter (DC-AC), p	roximity switch	SW	Inverseur (DC-AC), commutateur de proximité
SZ	Zeitschalter	SZ	Time switch		sz	Interrupteur horaire
/	Verbindungselemente	٧	Connecting ele	ments	٧	Eléments de raccordement
/K	Klemme, Klemmleiste	VK	Clamp, terminal stri	р	VK	Pince, reglette à bornes
/L	Lötose, Stützpunkt	VL	Soldering lug		VL	Cosse à souder
/S	Schraube, Mutter, Scheibe	vs	Screw, nut, washer		vs	Vís, écrou, disque
Anmer Die Wi elemei nunge	ode für Widerstände und Kondensatoren kung: eflangabe der weitgehend miniaturisierten Ba nite erfolgt überwiegend durch Farbkennzeich n, deren Bedeutung der nachfolgenden Tabel nmen werden kann	Note: The comp	ar code for resistors an electrical values of the onents are mainly identified ing of which can be taken to	largely miniaturized by a colour code, the	Code Rema Les va	couleur pour résistances et condensateur
Hinweis: Im Zuge des technischen Fortschrittes setzt R&S zu- nehmend Metallschichtwiderstande mit 1% Toleranz anstelle von Kohleschichtwiderstanden mit 5% Tole- ranz ein. Metallschichtwiderstande konnen sich dabei an Stellen befinden, an denen gemaß Schaltteilliste Kohleschichtwiderstande vorgesehen sind Etwaige ge- ringlugige Differenzen der Nennwerte zwischen Strom- laufplan, Schaltteilliste und Gerat liegen im zulassigen Toleranzbereich.			ving the state of the art R&S al-film resistors (1% tolerar esistors (5% tolerance). Mo been employed where car led in the parts list. Any all values between circuit ment are within tolerance.	nce) instead of carbon- etal-film resistors may bon-film resistors are slight differences of diagram, parts list and	des re des re resista points liste d nomin circuit	nt le progres technique R&S utilise de plus en pli sistances a film metallique (tolerance 1%) au lie sistances a couche de carbone (tolerance 5%). De inces a film metallique peuvent se trouver en de ou des types a couche de carbone figurent dans es composants. Les differences minimes des valeu lales exctant eventuellement entre le schema et, ta liste des composants et l'appareil sont dans de tolerance.
Farbe/0	Colour/Couleur A B C D	Exam	ordnungsbeispiele für nples for / Exemple paur	Defin	ttion*/C	definition *
Schwar	z/Black/Noir — 0	Widerst	inde (R) Kondensat. (C)	Kennzeichen A (Baut	eilfarbe/	1 Farbring; -1. Zan)
	Prown/Marron 1 1 0 :1%	Resist		Kennzeichen B (Baut Kennzeichen C (Punk Kennzeichen D (Punk	CO Fart	2 Farbring) = 2 Zahl bring) = 3 Zahl = Zahl der Nullen bring} = Toleranz des Nehrwerts in %
	1 Rouge 2 2 00 ±2% /Orange 3 1 3 000	Resista	nce (R) Condensateur (C)	i (Fenk	endes K	oring) = 1 dieranz des Nientwerts in % ennzeichen für D. bedeufet (20%) edeufet, daß die Farbeides Bauteilkorpers die Wertanga
C +1 - 2		i	!	darstellt.	ICHERS D	euculat, dan bier albe des dautenkorpers die Wertanga

Farbe/Colour/Couleur	A	В	. c	; D		Exemple paur		Definition* / Definition *
Schwarz/Black/Noir	_	0	;		Widerstande (R)	Kondensat. (C)	Kennzeichen A	(Bauteilfarbe/1_Farbring) + 1, Zahl
Braun/Brown/Marron	; t	1	10	: 1%	Resistors (R)	Capacitors (C)	Kennzeichen B Kennzeichen C	(Bautellende/2 Farbring) = 2 Zahl (Punkt/3 Farbring) = 3 Zahl = Zahl der Nullen
RovRed Rouge	2	2	:00	± 2%	Resistance (R)	Condensateur (C)	Kennzeichen D	(Punkt/4 Farbring) = Toleranz des Nennwerts in %
Orange/Orange	3	13	.000				Das Fehlen eines	(Fehlendes Kennzeichen für Dibedeutet ±20%) Kennzeichens bedeutet, daß die Farbeides Bauteilkorpers die Wertangabe
Gelb/Yellow/Jaune	4	4	0000	i	1152	4100 ,	derstellt.	
Grun/Green/Vert	5	5	00000	: 0.5*	~mm ≈>		Marking A Marking B	(body colour or first coloured ring) = 1st digit {body end or second coloured ring} = 2nd digit
8lau/Blue/Bleu	6	6	000000	!	1	. ***	Marking C	(dot or third coloured ring) = number of zeroes
Violett/Violet	7	7	! -	±0.1%	نائله		Marking D	(dot or fourth coloured ring) = tolerance on nominal value in % (with no D marking tolerance = 20%)
Grau/Gray/Gris	8	8	-	:		4800	The absence of a r	marking signifies that the body colour gives the corresponding information.
Weiß/White/Blanc	9	9	! _	!		eiiii izo	Repérage A	(couleur du corps ou 1er anneau) = 1er chiffre
Gold/Dore	-	 -	-	: 5%	4	. — — ;	Repérage B Repérage C	(bout du corps ou 2e anneau) = 2e Chiffre (point ou 3e anneau) = nombre de zeros.
Silber/Silver/Argente	ļ	ļ —	: -	± 10%	· • • • • • • • • • • • • • • • • • • •	, — <u>III</u>	Reperage D	(point ou 4e anneau) * tolerance en % de la vateur nominale (L'absence du reperage D signifie ± 20%)
Onne Farbe/No colour/ Pas de couleur	-	-	-	± 20°• i			L'absence de tou valeur correspon	at reperage signifie que la couleur du corps du composant represente ta
1) Toleranzing, hier nicht	t spezifi	ziert			ere not specified, nce, ne pas specifie	+C+	* Siehe auch Dif	N 41 429 und DIN 40 825



Zusammenstellung der lieferbaren Netzkabel List of power cables available Liste des câbles d'alimentation disponibles

Sach-Nr. Stock No. Référence	Schutzkontaktsteckker nach Earthed-contact connector Fiche à contact de protection	Vorzugsweise verwendet in Preferably used in Utilisé de préférence en
DS 006.7013	BS1363: 1967' entsprechend IEC 83: 1975 Standard B2	Großbritannien
	BS1363: 1967' complying with IEC 83: 1975 standard B2	Great Britain
	BS1363; 1967' suivant CEI 83: 1975 norme B2	Grande-Bretagne
DS 006.7020	Typ 12 nach SEV-Vorschrift 1011.1059, Normblatt S 24 507	Schweiz
	Type 12 complying with SEV regulation 1011.1059, standard sheet S 24 507	Switzerland
	Type 12 suivant la norme SEV 1011.1059, feuille S 24 507	Suisse
DS 006.7036	Typ 498/13 nach US-Vorschrift UL 498, bzw. IEC 83	USA/Kanada
	Type 498/13 complying with US regulation UL 498 or with IEC 83	USA/Canada
	Type 498/13 suivant la norme E.U.A. UL 498 ou la norme CEI 83	E.U.A./Canada
DS 006.7107	Typ SAA3 10 A, 250 V, nach AS C112-1964 Ap.	Australien
	Type SAA3 10 A, 250 V, complying with AS C112-1964 Ap.	Australia
	Type SAA3 10 A, 250 V, suivant AS C112-1964 Ap.	Australie
DS 0025.2365 DS 0099.1456	DIN 49 441, 10 A, 250 V, abgewinkelt DIN 49 441, 10 A, 250 V, gerade	Europa (ohne Schweiz)
DS 0025.2365 DS 0099.1456	DIN 49 441, 10 A, 250 V, angular DIN 49 441, 10 A, 250 V, straight	Europe (Switzerland not included)
DS 0025.2365 DS 0099.1456	DIN 49 441, 10 A, 250 V, angulaire DIN 49 441, 10 A, 250 V, droit	Europe (Suisse non comprise)

	:
	:

Cross-Reference List of Class Designation Letters

IEC Publication 113-2 (1971) Item Designations, Letter Codes ANSI Y32.2-1975 (IEEE Std 315-1975), Section 22, Class Designation Letters

Note: The designation letters used in the R&S Manuals correspond to the letter codes of the IEC Standard identified in the first column!

IEC Publication 113-2	Lette	Code	IEC Publication 113-2	Letter	Code
Terminology	IEC	Y32.2	Terminology	IEC	Y32.2
, , , , , , , , , , , , , , , , , , , ,	,				-
Acoustical indicator	Н	L\$	Magnetic tape recorder	D	A
Adjustable resistor	R	R	Maser	A	A
Aerial	W	E	Measuring equipment	Ρ	M
Amplifier	- A	AR.	Microphone	8	MK
Amplifier (with tubes)	A	AR E	Miscellaneous	Ę U	E A
Assemblies	Ā	A,U	Modulator	0	A.U
Auxiliary switch	S	x,0 \$	Motor	M	8
Sattery	G	8T	Optical indicator	н	DS
distable element	Ď	Ü,A	Oscillator	G	Y.G
Brake	Ÿ	MP	Overvoltage discharge device	F	F.E
Busbar	W	W	Parabolic aerial	W	ε
Cable	W	W	Photoelectric cell	8	V
Cable balancing network	Z	Z	Pickup	8	PU
Capacitor	C	C	Plug	X	P
Changer	U	A,B,G,MT	Pneumatic valve	Y	MP
Circuit breaker	Q	C8	Potentiometer	R	R
Clutch	Y	MP	Power switchgear	Q	CB,\$
Coder	Ū	U,A	Protective device	F	f
Compander	Z	A	Pushbutton	S	\$
Connecting stage	\$	Ş	Quartz-oscillator	G	Y
Contactors	K S	K \$	Recording device	Ъ	A,M
Control switch	J U	A,U,MG	Register	D K	A,U,M K
Core, storage	D	E,0,1010	Relay Resistor	R	R
Crystal filter	Z	FL	Resolver	8	8
Crystal transducer	В	Y	Rheostat	R	R
Current transformer	Ť	Ť	Rotating frequency generator	Ğ	G,MG
Delay device	Ď	DL	Rotating generator	Ğ	G
Delay line	Ď	DL	Selector	\$	5
Demodulator	U	A	Selector switch	S	S
Dial contact	S	S	Semiconductor	٧	D.CR,Q
Diode	V	D	Shunt (resistor)	R	R
Dipole	W	E	Signal generator	ρ	A
Disconnecting plug	X	Р	Signaling device	Н	DŞ
Disconnecting socket	X	X	Socket	X	Χ
Discriminator	Ū	A	Soldering terminal strip	X	E,TB
Disk recorder	D	A	Static frequency changer	ņ	Α
Dynamotor	8	MG	Storage device	D	A.U
Electrically operated mechanical device .	Y V	MT V	Subassembly	A G	A A.PS
Electronic tube	Z .	EQ	Supply daviso	G	A.FS
Filter	ž	FL	Supply device	В	В.
Frequency changer	Ū	A,8,G	Synchro Telegraph translator	Ü	A
Fuse	F	F	Terminal	X	E
Gas discharge tube	v	v	Terminal board	X	TB
Generator	Ğ	G	Termination	Ż	AT
Heating device	٤	HR	Test jack	X	£,J
Hybrid	Z	Z	Testing equipment	۶	A
Indicating device	ρ	DS	Thermistor	R	RT
Induction coil	L	L	Thermo cell	8	A,TC
Inductors	٤.	L	Thermoelectric sensor	В	A
Integrating measuring device	Р	M,MT,Z	Thyristor	٧	Q
Inverter	Ü	A,U,PS,MG	Transducer (nonelectrical quantity	•	A DT
Isolator	Q	AT	to electrical quantity)	B T	A,BT T
Jumper wire	w	W NAT A	Transformer	W	W
Laser	A E	MT,A D\$	Transmission path	V	Q
Lighting device	S	5	Tube (electron)	v	V
Limiter	3 Z	MT,RE	Voltage transformer (potential)	Ť	Ť
Line trap	Ĺ	FL,MP,V	Waveguide	w	w
Loudspeaker	В	LS	Waveguide directional coupler	W	ÐC
Magnetic amplifier	Ā	AR			

	J.			
				:
3				
				:
				(9)



XY-Liste

XY List

Erklärung der Spaltenbezeichnungen:

el. Kennz. Bauelement-Kennzeichen

Seite Leiterplatten-Seite, auf der sich das

Bauelement befindet

X/Y Koordinaten (in Millimeter) des Bauelementes auf der

Leiterplatte bezogen auf den Nullpunkt

Planq., Bl. Planquadrat und Seite des Schaltbildes

für das jeweilige Bauelement

Explanation of column designations:

Part Identification of instrument part

Side Side of the PC board on which instrument part is

positioned

X/Y Coordinates (in units of millimeters) of the component

on the PC board in reference to zero point

Sqr, Pg Square and page of the diagram for

the respective instrument part

	:
	5.0
	:

Š	
ē	
ě	/eq
8	seu
ŝ	ts re
ž	g
9	181
ä	nen
ē e	For this document all rights reserved
Ĕ,	Šά
Ĕ	ž
Se	ű
Für diese Unterlage behalten wir uns alle nechte	
ī	

1	Part	Side	^	'	Sqr	Pg			Side	^	,	Sqr	Pg		Part	Side		004	Sqr 12D	<i>Pg</i> 2
B 23 291 10A 2 X8 B 114 148 149 240 14 270 1 2 2 2 2 2 2 2 2 2	C1 C2			262 255		2 2	-13	X7	В	114	178	11D	1	١	X27	В	124	178	10E	1
## April	L1 L2	В	23	291	10A	2					1			. 1	X220	В	114	84	7D	1
## RONDE & SCHWARZ September Page Pag	U1	В	17	263	9A	2		X15							X320					2
Baneannung: ED MOTHERBOARD Sprache: Lang: Ge Blatt: Sh.: 1 - Cit.: 03.00	W20	В	133	321	9B	2		X22	В	101	310	10D	2		X340 X360					2
ROHDE & SCHWARZ Benennung: ED MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD	W28 X 2					2							2		X380	В		285	7D	2
ROHDE & SCHWARZ Benennung: ED MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD																			•	
ROHDE & SCHWARZ Benennung: ED MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD																				
ROHDE & SCHWARZ Benennung: ED MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD																				
ROHDE & SCHWARZ Benennung: ED MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD																				
ROHDE & SCHWARZ Benennung: ED MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD					ļ									ı						
ROHDE & SCHWARZ Benennung: ED MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD																				
ROHDE & SCHWARZ Benennung: ED MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD Designation: MOTHERBOARD																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - C.I.: 03.00																`				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00							1		ŀ											
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - C.I.: 03.00							۱			, , , , , , , , , , , , , , , , , , ,										
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - C.I.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00											-									
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00															:					
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00																A				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00							П													
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00														l						
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sh.: 1 - Ch.: 03.00																				
ROHDE & SCHWARZ Designation: MOTHERBOARD Lang.: de Sn.: 1 - C.I.: 03.00														Ļ						<u></u>
Cooper					B	enennu	ing:	ED MC	OTHE	RBOA	ARD			S	~~~ 1	_	Blatt: Sh.:		Aei:	0.00
Typ: SMIQ Datum: 99-04-15 Abteilung: 1GPK Name: GU Sacnnr.: 1084.9030.01 XY			SCI												_ u		1			
17/20	Typ: Type: S	MIQ		Datum Date:	^{1:} 99	04-15	5	Abteilur Dpt:	ng: 1	GPK	\ \ \	ame: (lame: (3U		S P	acinn. art No	: 108	4.90	30.01	XY



SERVICE INSTRUCTIONS

Front Module with Controller MOD 10

1035.5440

Variation Declaration of the entire Module:

1035.5440.02 SMP

1035.5440.03 SME

1035.5440.04 SMT

1035.5440.05 SMIQ

1025 5440 60

			ı.i	
				:
				\$1 \$1
				:

Contents

. TESTII	NG AND REPAIR OF THE BOARD	5
7.1 Func	tion Description	5
7.1.1	CPU: 80960	6
7.1.2	512K-Byte RAM with Battery-backup	6
7.1.3	Battery Test	6
7.1.4	FLASH-EPROMs (Firmware Update)	7
7.1.5	IEEE-Bus Interface	
7.1.6	SERBUS-Interface	
7.1.7	RS232- / V.24-Interface	
7.1.8	Timer	7
7.1.9	Interrupt Controller	
7.1.10	ACFAIL, SYSRESET	8
	Processing of External Trigger Signals	
7.1.12	LCD Interface	8
	Brightness and Contrast Control for LCD	
7.1.14	Knob Interface	9
7.1.15	Connector for the Keyboard Matrix	9
7.1.16	Diagnostics A/D Converter	9
7.1.17	X-Output	9
	Identification of Variant and Revision 1	
7.1.19	Control Signals, Key Beep	.0
7.1.20	Standby Switch and LED 1	.0
7.2 Test	Instruments and Utilities 1	.0
7.3 Trou	bleshooting1	.1
7.4 Test	ing and Adjustment 1	.1
7.4.1	Checking the Supply Voltage of the DC/AC Converter	.1
	Checking the Contrast Voltage 1	
	Checking the Shaft Encoder 1	
7.4.4	Testing the RESET and the ACFAIL Signal 1	. 2
7.4.5	Checking the Diagnostic Path 1	. 2
7.4.6	Check and Readout of the Diagnostic Test Points 1	2
	Checking the Position of Jumpers 1	
7.5 Remo	oval and Assembly 1	L3
7 6 Fv+a	ernal Interfaces 1	. 4
	Controller Interface	
	Shaft encoder Interface	
	ICD Interface	

PART LIST COORDINATES LIST CIRCUIT DIAGRAM LAYOUT DIAGRAM

7. Testing and Repair of the Board

Caution! ! In the Front Module many data are stored, which are necessary for operation. All data contained in the RAM may be reconstructed by the unit itself. To reconstruct data in the flash EPROM additional tools are necessary. If there is some danger to loose data of the flash EPROM, be shure, you can

- 1) load a new firmware,
- 2) perform a level calibration (refer to section 6.4 of service manual),
- 3) restore calibration data or calibrate the Reference Oscillator (refer to section 2.11.8 of operating manual),
- 4) reconstruct the operational data in the menue UTILITIES/DIAG/PARAM.

To do 3) and 4) the concerned data have to be noted down before work on the module. To restore data of reference oscillator, you got to unlock password protection level 2 (refer to section 2.11.7 of operating manual). The password is 250751. After this in the menue UTILITIES/CALIB/REF OSC the noted calibration data can be keyed in. To construct operational data (4), password protection level 3 is to be unlocked. Please contact your R&S representative to get the password. The menue UTILITIES/DIAG/SET PARAM will appear and allow to key in the noted data.

7.1 Function Description

The front module contains the following components: controller, shaft encoder, keyboard and LC display.

The controller must provide the following functions and features:

- CPU: 80960
- RAM with battery-backup
- 512K-Byte RAM with battery-backup
- Battery test
- Firmware in flash-EPROMs which can be updated
- IEEE-bus interface
- SERBUS interface
- RS232 / V.24 interface
- Timers
- Interrupt controller
 - all interrupts maskable either at the source or at the interrupt controller
- ACFAIL of the power supply triggers maskable interrupt
- Processing of external trigger signals (TRIGGER, AUX-TRIG) polarity selectable
- LCD interface
- brightness and contrast control for LCD
- spinwheel interface
- connector for keyboard matrix
- self diagnostics with 12-bit converter and two diagnostic inputs (±5V & ±15V)
- X-output (0 to 10 V)
- identification of model/variation

1025 E440 60

- various control lines for other modules (MODCTRL-OUT, MODCTRL-IN)
- digital output and input signals (BLANK, MARKER, SWEEP-STOP, KEYBEEP)
- SYS-RESET by the power supply causes system reset

- standby switch and standby LED

7.1.1 CPU: 80960

Due to internal doubling, the processor 80960HD50 (clock rate: 50 MHz) requires a 25-MHz clock signal. This signal is derived from a 50-MHz oscillator by means of a divider. This divider is used like an ASIC (CLKGEN D3) providing several of the clock frequencies used in the system.

As the bus interface of the 80960 is designed for burst access, several CPLDs are used (D300, D402, D950). They serve to control access and access speed of the individual components and to generate the READY signal.

The data-bus drivers D5 and the address drivers D220 to D222 isolate the "periphery bus" from the "memory bus".

7.1.2 512K-Byte RAM with Battery-backup

This memory is composed of four 512kbit SRAM components (D17 to D20). The access to this memory is disabled by the signal RES-P, wobei in den Low-Power-Mode umgeschaltet wird.

7.1.3 Battery Test

The charge of the battery can be tested by connecting a load resistor of 39,2 kOhm to the battery by means of the REED relay, which is controlled by the signal TST-BATT. The voltage at the resistor is applied to the self-diagnostics circuit and thus informs on the discharge degree of the battery.

FLASH-EPROMs (Firmware Update)

The use of FLASH-EPROMs allows for making firmware updates without external access. Four components D1, D2, D11, and D21 of type 28F016 (4M-words), are therefore provided.

The voltage VPP required for programming is generated from +15V by the component D400. This linear controller can be switched on and off by means of the signal VPP-ON.

The firmware update is realized via an RS232 interface at the rear panel of the instrument.

The initial program loader is contained in the BOOT-EPROM (D301). This BOOT-EPROM additionally allows for fitting the FLASH-EPROMs as unprogrammed standard components.

IEEE-Bus Interface 7.1.5

The component TNT4882C (D60) is used as IEEE-bus controller. The complete controller capability of the IEEE-bus can be realized. It is provided with an 40MHz clock frequency via a separate quartz oscillator.

SERBUS-Interface 7.1.6

A serial bus system (SERBUS) developped by R&S is used for control and programming of the individual modules. Two standard ASICs are already available (SERBUS-M and SERBUS-D).

The controller accomodates the bus-master component (SERBUS-M / D87). It is programmed in words and operated at a clock frequency of 20 MHz. 4 MHz are used for serial data transmission to the boards.

RS232- / V.24-Interface

This interface is implemented by controller IC 16C550 (D85). Level conversion from TTL to RS232 is carried out in component LT1181 (D860).

Timer 7.1.8

The component uPD71054 (D61) contains three 16-bit timers. Two of them (timers 1 and 2) are cascaded to achieve a high resolution for long periods of time. The input clock is 1 kHz for timer 0 and 1 MHz for timers 1 and 2.

7.1.9 Interrupt Controller

The interrupt controller used is integrated in the CPU80960. The dynamic interrupt sources are connected directly. The static ones are merged via gate D827 and applied to the Int input XINT7 of the CPU. They can be masked separately and read out via the bus.

7.1.10 ACFAIL, SYSRESET

The signal ACFAIL is generated in the power supply and belongs to those interrupt signals which are not maskable at the source. Masking is carried out as described under 7.1.9. SYSRESET (generated by the power supply, too) is applied to the reset component MAX793 (D15) via D106 and initiates the reset. Simultaneously, the capacitor C55 is discharged via R264 and V4. When the signal SYSRESET assumes HIGH level again, C55 charges via R265 and, subsequent to reaching the threshold voltage of D106, enables the reset input again.

7.1.11 Processing of External Trigger Signals

(TRIGGER, AUX-TRIG) polarity is selectable

The polarity of the trigger signal can be set individually for both trigger signals at port D810 and is generated by an EXOR logic combining the port signal and the trigger signal (D840).

7.1.12 LCD Interface

The LCD controller SED1351F (D90) of SEIKO EPSON is used to address the LC display. The display buffer/video RAM consists of the two SRAMs D960 and D970 and offers memory space for four screen pages (640 \times 200).

Linear addressing of the pixels (pixel 0 is LSB of the lowest address) is achieved by mirroring the data bus at D90 byte by byte.

The data and clock signals for the LCD are routed via D980 to increase the driver capability and to isolate the component D90.

7.1.13 Brightness and Contrast Control for LCD

PC board: Shaft Encoder (1035.5592.01)
Brightness is set via the input voltage of the DC/AC converter for the CFL illumination. The input voltage for this converter may vary between +6V and +10V. Increase of voltage means increase of brightness. The voltage is controlled by means of LM317T (N50), and the output voltage is set using R990.

The input voltage of the converter must assume +10V with switch-on of the instrument in order to ensure ignition of the fluorescent tubes. The circuit consisting of N51 and V52. which shortly provides +10V following switch-on, is available for this purpose. The illumination can be switched off by means of V48 to improve the interference radiation of the AC/DC converter and of the fluorescent tubes.

The contrast is set via the negative supply voltage VEE of the LC display. This voltage is derived from +15V by means of a switch-capacitor-voltage-converter with controller (LT1054/N70) and can be set in the range from -15V to -22V using R995.

Two additional pi-type LC filters are contained on the board for filtering of the interferences radiated by the DC/AC converter and the converter LT1054.

7.1.14 Knob Interface

With each change of level of the signal KNOB2 (CLK), a LOW pulse is generated via the runtime chain consisting of D566C/D and D562B/C at the EXNOR-gate D566B. This pulse is used to store the direction information in the flip-flop D565B and to trigger an interrupt using D565A.

7.1.15 Connector for the Keyboard Matrix

The vertical lines are connected to the register D550, the horizontal lines to the port D560.

If no key is pressed the connected horizontal lines are applied to HIGH potential via the pull-up resistors R90 to R96. The vertical lines are kept at LOW potential by the register outputs. As soon as a key is pressed, the associate horizontal line assumes LOW potential. Subsequent to debouncing, an interrupt is generated, which allows for applying the vertical lines individually to LOW potential. The level indicates, which key was pressed.

7.1.16 Diagnostics A/D Converter

including 12-bit converter and two diagnostic inputs (±5V & ±15V)

The two diagnostic inputs and a few test points of the controller are applied to the A/D converter D704 via the multiplexer D700, the impedance converter N701 and the input amplifier.

The following voltages can be set for maximum range of the A/D converter: +-15V, +-5V and +-1V.

The conversion time (max. 9 us) is indicated by the BUSY output, which can be read in via D570 (port1).

The following voltages can be measured using the self-diagnostics converter for self-diagnostic purposes:

the voltage at the X-output the reference voltage of the D/A converter the battery voltage

Moreover, test cables can be connected instead of the shorting jumper X700 and thus, any test point can be connected to the A/D converter. Make sure, that the test voltage does not exceed +-15V.

7.1.17 X-Output

With sweeping, the X-output generates an output signal of 0V (sweep start) to 10V (end of sweep), which can be used to control external devices. This signal is generated by the processor by setting the D/A converter D706 correspondingly, depending on the sweep. The resistor R223 and the diodes V10 are provided for overvoltage protection.

1035 5440 60

7.1.18 Identification of Variant and Revision

The port D4 is provided for identification of the module. The variant of the module is coded by the configuration of the resistors R592 to R594, the revision by R595 through R598.

7.1.19 Control Signals, Key Beep

The signals MODCNTL-OUT and MODCNTL-IN allow for synchronization between the signal processor of the modulation generator module and the processor.

The output signals BLANK and MARKER as well as the input signal SWEEP-STOP are used for control and synchronization of external devices

The output port D213 supplies the control signal (LAMP-OFF) for switching off the tubular fluorescent lamps.

The piezo-buzzer U1 is provided for generation of a key beep.

7.1.20 Standby Switch and LED

The standby switch fitted to the front panel of the generator is connected directly to the controller and routed to the motherboard via the common ribbon cable.

The standby LED is switched between +15V and VS12-P such that in case of a cut of +15V a current may flow from VS12-P via the LED to the virtual ground of the +15V.

7.2 Test Instruments and Utilities

Oscilloscope		100MHz	e.g.,	BOL
DC multimeter 0	to $+-30V$,	Ri>1MOhm	e.g.,	UDL33
DC voltage source	10V		e.g.,	NGT20

7.3 Troubleshooting

Standby LED does not light up Check the standby voltage at X312.5

Subsequent to switch-on, the Check the voltage of the DC/AC converter acc.to 7.4.1

Setting of contrast not Check the contrast voltage acc. to possible 7.4.2

Shaft encoder does not work Check the pulses of the shaft

encoder acc. to 7.4.3

No display following Check the RESET signal acc. to switch-on 7.4.4

Check the ACFAIL signal acc. to 7.4.4

No voltage at X-AXIS Check the output X-AXIS using diagnostics acc. to 7.4.6

Check the reference voltage using the diagnostics acc. to 7.4.6

平-1

No storage of data after Check the RAM voltage using switching off the instrument diagnostics acc. to 7.4.6

7.4 Testing and Adjustment

7.4.1 Checking the Supply Voltage of the DC/AC Converter

Shaft encoder module:

Measure the DC voltage at the connector X6.4 depending on the position of the brightness control at the front panel of the instrument: rated value: 6V to 10V.

7.4.2 Checking the Contrast Voltage

SHAFT ENCODER module:

Measure the DC voltage at the connectors X7.5 and X10.5 depending on the position of the contrast controller at the front panel of the instrument: rated value: -15V to -22V.

7.4.3 Checking the Shaft Encoder

CONTROLLER module:

Connect an oscilloscope to X35.9 and X35.11. Turn the shaft encoder. There must be 2 signals with different timing.

1035 5440 60 11

7.4.4 Testing the RESET and the ACFAIL Signal

CONTROLLER module:

Connect an oscilloscope to X31.35 and D15 PIN15.

Just upon switching on the instrument, the level of the ACFAIL signal must change from L to H. This change of level must be indicated by the RESET signal (RES-N) after approx. 200 to 300 ms. Both signals must remain HIGH-level with all operating states.

7.4.5 Checking the Diagnostic Path

· Settings:

TPOINT 4

· Apply a DC voltage of 0.5V to X700.

· Check the voltage at P710: 0.5V and P730: 1.5V.

7.4.6 Check and Readout of the Diagnostic Test Points

TPOINT	Voltage	Meaning
0 1 2 3 4 6 7	0mV to 50mV -15V to 15V -15V to 15V 0V to 10V -15V to 15V 4.9V to 5.1V 3.2V to 4.0V	Reference point DIAG -15V DIAG -5V X-AXIS Voltmeter Reference voltage X-D/A Battery voltage

7.4.7 Checking the Position of Jumpers

Jumper	Position	Remark
X105 X106 X111 X112 X300 X2 X85	1 - 2 1 - 2 2 - 3 2 - 3 1 - 2 1 - 2 1 - 2	Clock (periphery) Clock (CPU) addr. flash addr. eprom Battery +5V-voltage Voltmeter
X3 X700	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	Timer-Int Clock (RS232)

T 1

Remove the 4 screws at the front panel of the instrument. Carefully swing out the module to the front, in order to be able to disconnect the cable connections W20, W313 and W314. Subsequent to disconnecting W31 (ribbon cable to the motherboard), the front module can be withdrawn. The metal cover on the rear is fixed by 6 screws. The CONTROLLER board can be removed carefully after unlocking the sockets X316, X317 and separating the two foils as well as the socket at X312. Finally, disconnect the ribbon cable W315 to the ENCODER board.

Removal of the p.c.b. SHAFT ENCODER: remove the rotary knob, and disconnect the connection at X6 (to. DC/AC converter) and X7 (ribbon cable to LCD). Disconnect 12-pin connector support of the cable W10 from the LCD. The p.c.b. can be removed after unscrewing of 4 screws.

Removal of the LCD: disconnect the cable W10 as well as the flat foil to the PCB SHAFT ENCODER from X7. Disconnect the 4-pin connector between the DC/AC converter and the CFL illumination. The LCD is fixed to the cast housing by 4 screws and can be taken out completely.

Assembly has to be carried out in the reverse order. Prior to fixing the cover again, make sure that the PROCESSOR board has locked in place correctly and that the seal cord is correctly applied.

7.6.1 Controller Interface

Pin	Name	Input/Outp	Origin/Destin.	Specified range	Signal description
		ut			
X31.1	VD-5P	Input	A2, POWS	5.10V to 5.25V	Supply voltage, digital
to 6				max. 3000mA	
X31.11	VA15-P	Input	A2, POWS	14.7V to 15.9V	Supply voltage, analog
to 12				max. 660mA	
X31.15	VA15-N	Input	A2, POWS	-15.9V to-14.7V	Supply voltage, analog
				max. 50mA	23 24
X31.27	VS12-P	Input	A2, POWS	11.6V to 12.4V	Standby-voltage
x31.7,8					Ground, digital
9,10,13					,
14,16					Ground, analog
X31.19,					Ground, analog
20			no Bowa		Switch contact
X31.26	POWER-	Output	A2, POWS		Switch Contact
X312.2 X31.25	SWITCH	Output	A2, POWS		Switch contact
X31.25 X312.1	POWER- SWITCH-	σατρατ	AZ, FONS		DW10011 0011000
A314.1	GND	1			1
x312.5	STBY-LED1	Output	A2, POWS		Anode of standby-LED
X312.3	STBY-LED2	Input	A2, POWS		Cathode of standby-LED
X312.4	N.C.	Input	1.27, 2010		Coding
X31.40	SERBUS-	Output		HCMOS level	Serbus Clock
21.40	CTK	Cacpac			
x31.39	SERBUS-	bidir.		HCMOS level	Serbus data
	DAT				
X31.37	SERBUS-	Output		HCMOS level	Serbus synchronization
	SYNC				
x31.38	SERBUS-	Input		HCMOS level	Serbus interrupt
	INT				
X31.28	RES-P	Output		HCMOS level	Reset
X31.44	DIAG-5V	Input		-5V to 5V	Diagnostics
X31.43	DIAG-15V	Input		-15V to 15V	Diagnostics
X31.42	TRIGGER	Input	Rear panel	HCMOS level	Trigger
X31.41	AUX-TRIG	Input	Rear panel	HCMOS level	Trigger
X31.36	SYSRESET	Input	A2, POWS	HCMOS level	System reset
X31.35	ACFAIL	Input	A2, POWS	HCMOS level	Power fail
X31.34	BLANK	Output	Rear panel	HCMOS level	Control signal
X31.33	MARKER	Output	Rear panel	HCMOS level	Control signal
x31.32	SWEEP-	Input	Rear panel	HCMOS level	Control signal
	STOP				
X31.30	MODCTRL-	Output	A5, MGEN X5.2	HCMOS level	Modulation generator control
	OUT				
X31.31	MODCTRL-	Input	A5, MGEN X5.1	HCMOS level	Modulation generator control
	IN			10	7
X31.45	X-AXIS	Output	Rear panel	0 to 10V	Frequprop. voltage
X31.47	DONE	Input	1	HCMOS level	Interrupt signal
X31.17,	1	Input		HCMOS level	
18, 21	INP05				
to 24	- I TOTAL	7		0 to 5 V	Ext. battery connector
X31.46	UBEXT	Input	Shaft encoder	HCMOS level	Keyboard
x37.1	RETO to	Input	phart encoder	TYCTON TEAST	Moyboara
to 7	RET6			L	

x37.8	SCANO to	Output	Shaft encoder	HCMOS level	Keyboard
to 13	SCAN5				
X36.1 to 13	"GND"			1kOhm Pulldown	Keyboard
X33.6	CTS	Input	Rear panel	RS232 level	Serial interface
x33.3	RXD	Input	Rear panel	RS232 level	Serial interface
x33.5	TXD	Output	Rear panel	RS232 level	Serial interface
x33.4,7	RTs	Output	Rear panel	RS232 level	Serial interface
X33.9					Ground, digital

Pin	Name Input/Out Origin/Desti		Origin/Destin	Specified range	Signal description		
X34.1	DIO-1	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.3	DIO-2	bidir.	Rear panel	TTL O.C.	IEEE bus		
x34.5	DIO-3	bidir.	Rear panel	TTL O.C.	IEEE bus		
x34.7	DIO-4	bidir.	Rear panel	TTL O.C.	IEEE bus		
x34.2	DTO-5	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.4	DIO-6	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.6	DIO-7	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.8	DIO-8	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.9	EOI	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.10	REN	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.11	DAV	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.13	NRFD	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.15	NDAC	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.17	IFC	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.19	SRQ	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.21	ATN	bidir.	Rear panel	TTL O.C.	IEEE bus		
X34.12 14,16, 18,20, 22,24					Ground		
X35.2, 4,6,8	VA15-P	Input	SHAFT ENCODER	14.7V to 15.9V max. 650mA	Supply voltage, analog		
x35.18	+5V	Input	SHAFT ENCODER	5.1V5.3V max.20mA	Supply voltage, digital		
X35.1, 20,21, 23,25					Ground		
X35.16	LAMPOFF	Input	SHAFT ENCODER	HCMOS level	Illumination control		
x35.3	POT1	bidir.	SHAFT ENCODER		Conn.1 of contrast control		
X35.5	POT2	bidir.	SHAFT ENCODER		Conn.2 of contrast control		
x35.7	POT3	bidir.	SHAFT ENCODER		Conn.3 of contrast control		
X35.10	POT4	bidir.	SHAFT ENCODER		Conn.1 of brightness control		
X35.12	POT5	bidir.	SHAFT ENCODER		Conn.2 of brightness control		
X35.14	POT6	bidir.	SHAFT ENCODER		Conn.3 of brightness control		
X35.9	KNOB1	Input	SHAFT ENCODER	HCMOS level	Conn.1 of the shaft encoder		
X35.11	KNOB2	Input	SHAFT ENCODER	HCMOS level	Conn.2 of the shaft encoder		
X35.22	LCD-D0	Output	SHAFT ENCODER	HCMOS level	Data LCD		
X35.24	LCD-D1	Output	SHAFT ENCODER	HCMOS level	Data LCD		
X35.26	LCD-D2	Output	SHAFT ENCODER	HCMOS level	Data LCD		
X35.13	LCD-D3	Output	SHAFT ENCODER	HCMOS level	Data LCD		
X35.17	LCD-CP1	Output	SHAFT ENCODER	HCMOS level	Clock1 LCD		
X35.19	LCD-CP2	Output	SHAFT ENCODER	HCMOS level	Clock2 LCD		
X35.15	LCD-CS	Output	SHAFT ENCODER	HCMOS level	Chip-Select LCD		

Shaft encoder Interface

, , , , , ,	ú

Pin	Name	Input/Out	Origin/Destin	Specified range	Signal description	
X5.2,6,			Controller	14.7V to 15.9V max.600mA	Supply voltage, analog	
X5A.18	+5V	Input	CONTROLLER	5.1V5.3V max.20mA	Supply voltage, digital	
X5.1 ,20,21, 23,25					Ground	
X6.4	V-DC/AC	Output	DC/AC converter	6V10V max. 550mA	Supply voltage for illumination	
X6.1	GND-DC/AC		DC/AC- converter			
X10.1	VEE-LCD	Output	LCD	-15V to -22V max. 20mA	Contrast voltage	
X10.2	VDD~LCD	Output	rcd	5.1V to 5.3V max. 20mA	Supply voltage, digital	
X7.6	VSS-LCD				Ground	
X5.22 X7.4	LCD-D0	Input Output	CONTROLLER LCD	HCMOS level	Data LCD	
X5.24 X7.3	LCD-D1	Input Output	CONTROLLER LCD	HCMOS level	Data LCD	
X5.26 X7.2	LCD-D2	Input Output	CONTROLLER LCD	HCMOS level	Data LCD	
X5.13 X7.1	LCD-D3	Input Output	CONTROLLER LCD	HCMOS level	Data LCD	
X5.15 X7.10	LCD-CS	Input Output	CONTROLLER	HCMOS level	Chip-Select LCD	
X5.17 X7.8	LCD-CP1	Input Output	CONTROLLER LCD	HCMOS level	Clock1 LCD	
X5.19 X7.9	LCD-CP2	Input Output	CONTROLLER LCD	HCMOS level	Clock2 LCD	
X5.16	LAMPOFF	Input	CONTROLLER	HCMOS level	Illumination control of	
x5.9	KNOB1	Output	CONTROLLER	O.C. 2,2kOhm	Conn.1 of the shaft encoder	
x5.11	KNOB2	Output	CONTROLLER	O.C. 2,2kOhm	Conn.2 of the shaft encoder	
x5.3,5,	_	bidir.	CONTROLLER		Conn.1,2,3 of contrast contr.	
x5.10, 12, 14	POT4,5,6	bidir.	CONTROLLER		Conn.1,2,3 of brightnes control	

7.6.3 LCD Interface

Pin	Name	Input/Out	Origin/Destin	Specified range	Signal description
CONN2.5	VEE-LCD	Input	SHAFT ENCODER	-15V to -22V	Contrast voltage
CONN2.7	VDD-LCD	Input	SHAFT ENCODER	5.1V to 5.3V	Supply voltage digital
CONN1.6	VSS-LCD				Ground
CONN1.4	LCD-D0	Input	SHAFT ENCODER	HCMOS level	Data LCD
CONN1.3	LCD-D1	Input	SHAFT ENCODER	HCMOS level	Data LCD
CONN1.2	LCD-D2	Input	SHAFT ENCODER	HCMOS level	Data LCD
CONN1.1	LCD-D3	Input	SHAFT ENCODER	HCMOS level	Data LCD
CONN1.1	LCD-CS	Input	SHAFT ENCODER	HCMOS level	Chip-Select LCD
CONN1.8	LCD-CP1	Input	SHAFT ENCODER	HCMOS level	Clock1 LCD
CONN1.9	LCD-CP2	Input	SHAFT ENCODER	HCMOS level	Clock2 LCD



Schaltteillisten numerisch geordnet

Part lists in numerical order

Listes des pièces détachées par numéros de référence

		•
		:
		:

	Comp. No.	Designation		Stock No.	Manufacturer	Designation	contained in
	A31	ED RECHNER		1035.7250.04			
	A31	PROCESSOR BOARD NUR VAR/ONLY MOD: 02 04 ED RECHNER PROCESSOR BOARD		1035.7766.06			
	A31	NUR VAR/ONLY MOD: 03 ED RECHNER ABFS(FC) PROCESSOR BOARD ABFS (FC) NUR VAR/ONLY MOD: 05 13 15		1084.8804.10			
	A34	BV E1256 DC/AC-WANDLER DC/AC-CONVERTER		0840.5698.00	ERG	0840.5698	
	A35	ED DREHGEBER		1035.5592.02			
	A36	SYNCHRO GENERATOR SB SCHALTFOLIE F.34TASTEN KEY PAD		1036.4354.00	HOF_KRIPPN	1036.4354	
	C100	CE 22UF+-20%50V RM2,5	CE	0008.7533.00	PHILIPS_CO	2222 116 11229	
	C101	ELECTROLYTIC CAPACITOR CE 22UF+-20%50V RM2,5 ELECTROLYTIC CAPACITOR	CE	0008.7533.00	PHILIPS_CO	2222 116 11229	
	H2	AF HLMP1719 LED3 GE585N LED	AF	0099.9140.00	QUALITY	HLMP-1719.L31S	1035.5486.00
	P1	BP DMF50161NFUFW FSTN S/W DISPLAY WITH ILLUMINATION		0008.9094.00	OPTREX	DMF50161NFU-FW	
	W10 W11 W11	DY KABEL W10 DF FLEX-STRIPVERB.10P DF FLEX-STRIPVERB.10P. FLEX-STRIP		1035.5686.00 1035.5634.00 1036.4625.00	SUMITUMO	SMCD-10X170-ADX10-P1	1035.5634.00
	X2	SB NETZSCHALTER 2XU O.KN. POWER SWITCH	SB	0007.5143.00	ITT-SEL	NE18 2U E E	1035.5486.00
5							
21112							
			-				

1GPK 887 3PLU ÄI Datum Schaltteilliste für Perts list for Stock No. Blett-Nr. Page

23 07.10.99 ZE FRONTMODUL

1035.5440.01 SA 1-

Für diese Unterlage behalten wir uns alle Rechte vor.

		:	
			4

	Comp. No.	Designation	Stock No.	Menufacturer Designation	contained in
ı	C11	CC 100NF+-10%50V X7R 1206		PHILIPS_CO 2238 581 55649	
	C12	CERAMIC CHIP CAPACITOR CE 10UF+-20%50V RM2,5	CE 0008.7427.00	PHILIPS_CO 2222 116 11109	
	C13	ELECTROLYTIC CAPACITOR CC 100NF+-10%50V X7R 1206	CC 0007.5237.00	PHILIPS_CO 2238 581 55649	
	C50	CERAMIC CHIP CAPACITOR CE 470UF+-20%25V12,5X12,5		NAT_PANASO ECA-1EM471	
	53 C54	ELECTROLYTIC CAPACITOR CC 100NF+-10%50V X7R 1206			
	58	CERAMIC CHIP CAPACITOR	1	PHILIPS_CO 2238 581 55649	
	C59	CC 10NF+-10%50V X7R 1206 CERAMIC CHIP CAPACITOR		PHILIPS_CO 2238 581 16627	
	C60	CE 22UF+-20%50V RM2,5 ELECTROLYTIC CAPACITOR	ryana.	PHILIPS_CO 2222 116 11229	
	C61	CE 47UF+-20%50V RM2,5 ELECTROLYTIC CAPACITOR		PANASONIC ECA-1HFG470I	
	C70	CE 100UF+-20%25V RM2.5 ELECTROLYTIC CAPACITOR		PANASONIC ECA-1EFG101I	
Ì	C71	CE 10UF+-20%50V RM2,5 ELECTROLYTIC CAPACITOR	CE 0008.7427.00	PHILIPS_CO 2222 116 11109	
1	C72	CE 10UF+-20%50V RM2,5 ELECTROLYTIC CAPACITOR	CE 0008.7427.00	PHILIPS_CO 2222 116 11109	
	C73	CE 47UF+-20%50V RM2,5 ELECTROLYTIC CAPACITOR	CE 0008.7479.00	PANASONIC ECA-1HFG470I	
	C74	CE 47UF+-20%50V RM2,5 ELECTROLYTIC CAPACITOR	CE 0008.7479.00	PANASONIC ECA-1HFG4701	
	C75	CC 100NF+-10%50V X7R 1206 CERAMIC CHIP CAPACITOR	CC 0007.5237.00	PHILIPS_CO 2238 581 55649	
	C76	CC 100NF+-10%50V X7R 1206	CC 0007.5237.00	PHILIPS_CO 2238 581 55649	:
	C77	CERAMIC CHIP CAPACITOR CC 2,2NF+-10%50VX7R 1206	CC 0099.8444.00	AVX 1206 5 C 222 KA 3	
	C79	CERAMIC CHIP CAPACITOR CE 10UF +-10% 25V 7343	CE 0007.7246.00	SPRAGUE 293D 106 X9 025 D2W	
		TANTALUM SMD-CAPACITOR	- 1 0000 4750 00		
١	E1	BS UGN3120U HALL-EFF.SW. HALL-EFF.SWITCH	BJ 0336.4750.00		
٠.	E2	BS UGN3120U HALL-EFF.SW. HALL-EFF.SWITCH	BJ 0336.4750.00	ALLEGRO UGN3120U	
	L10		LD 0067.2940.00	DALE IM2	
alse Recote	L50	CHOKE LD 100UH 20% 1A 0,6500HM	LD 0155.9446.00	FASTRON_GE MESC-101M-00	
S SUD	L51		LD 0155.9446.00	FASTRON_GE MESC-101M-00	
Ä		CHOKE			
	N50	BO LM317T +ADJ1A5 VREGL VOLTAGE REGULATOR	0339.4080.00		
ı	N51	BO LM2903D 2XLP COMPAR DUAL		SIGNETICS LM2903(D)	
ı	N70	BO LT1054CS INV SCH.REGL IC SWITCHED CAP. REGULAT	1036.4519.00	LINEAR_TEC LT1054CSW	
ı	R1	RG 2,21KOHM+-1%TK100 1206	RG 0007.5743.00	ROEDERSTEI D25	
	R2	RESISTOR CHIP RG 2,21KOHM+-1%TK100 1206	RG 0007.5743.00	ROEDERSTEI D25	
	R48	RESISTOR CHIP RG 10,0K0HM+-1%TK100 1206	RG 0007.0793.00	ROEDERSTEI D25	
١	R49	RG CHIP RESISTOR RG 10,0KOHM+-1%TK100 1206	RG 0007.0793.00	ROEDERSTEI D25	
	R50	RG CHIP RESISTOR RG 100 DHM+-1%TK100 1206	RG 0006.8884.00	ROEDERSTEI D25	
	R53	CHIP RESISTOR RG 221 OHM+-1%TK100 1206	RG 0007.5614.00	DRALORIC CR 1206	
	R54	RESISTOR CHIP RG 1KO +-1% TK100 1206	RG 0006.7271.00		
	R55	CHIP RESISTOR RG 47,5KOHM+-1%TK100 1206	RG 0007.5950.00		
1	R56	RESISTOR CHIP RG 47,5KOHM+-1%TK100 1206	RG 0007.5950.00		
	R57	RESISTOR CHIP RG O-OHM WIDERSTAND 1206	RG 0007.5108.00		
	R58	RESISTOR CHIP O-OHM RG O-OHM WIDERSTAND 1206	RG 0007.5108.00		
	R59	RESISTOR CHIP 0-0HM RG 243 KOHM+-1%TK100 1206	RG 0007.6010.00		
		RESISTOR CHIP			
1					

Für diese Unterlage behalten wir uns alle Rechte vor.

95,0026~0693

:	
1)	
•	
:	
:	
:	

	Comp. No.	Designat	lon		Stock No.	Manufacturer	Designation	cont	ained in
	R60	RG 1KO +-1% 1 CHIP RESISTOR	FK 100 1206	RG	0006.7271.00	ROEDERSTEI			
	R61	RG 243 OHM+-1%7	TK 100 1206	RG	0007.5620.00	PHILIPS_CO	RCO2		
	R72	RESISTOR CHIP RL 0,60W4,75 OF	HM+-1%TK50	RL	0099.8021.00	PHILIPS CO	MRS 25		
	R73	METALFILMRESIST RG O-OHM WIDERS	TOR		0007.5108.00	_			
	R74	RESISTOR CHIP O)-OHM						
		METALFILMRESIST	OR		0099.8021.00				
	R75	RG 432 KOHM+-1% RESISTOR CHIP		İ	0007.6062.00				
	R76	RG 33,2KOHM+-1% RESISTOR CHIP	TK 100 1206	RG	0007.5914.00	PHILIPS_CO	RCO2		
	R77	RG 39,2KOHM+-1% RESISTOR CHIP	TK100 1206	RG	0007.5937.00	PHILIPS_CO	RCO2		
	R78	RG 20,0KOHM+-1% RESISTOR CHIP	TK 100 1206	RG	0007.5866.00	DRALORIC	CR 1206		
	S1		BED		0006 0040 00				
	31	EM DREHIMPULSGE ROTARY MAGNET	DEK	EM	0336.3348.00				
	V48		45V 800MA	AK	0815.7684.00	PHILIPS	BC337-40 GEGURTET		
	V50	TRANSISTOR AE BZV55/C5V1	O.5W ZDI	ΑE	0006.9839.00	PHILIPS SE	BZV55B5V1 (GEG)		
	V51	ZENER DIODE AE BZV55/C4V3	O.5W ZDI		0709.0168.00				
	V52	ZENER DIODE AK BC337-40 N		1	0815.7684.00		BC337-40 GEGURTET		
	V70	TRANSISTOR	1000V 1A0		0013.0310.00				
	V71	RECTIFIER	1000V 1A0		0013.0310.00				ľ
İ	V75	RECTIFIER AK BC337-40 N			0815.7684.00				
Į	1.0	TRANSISTOR	45V 000MA	AN	0815.7884.00	LUIFIL2	BC337-40 GEGURTET		
.	X5	FP STIFTLEISTE	26P.2REIH.	FP	0520.6544.00	BINDER	11-0213-00-26		
	Х6	CONNECTOR 26P. FP BUCHSENLEIST	E 4POL.	FP	2007.5069.00	DUPONT CON	67232-004		
	X7	ANGLE SOCKET CO FP LEITERPLATTE	NVERB. 10P.		1051.4397.00	MOLEX	5597-10APB(NAPB)		
	X10	CONNECTOR 10POL FP STIFTL.WIN	3P.R2,54	FP	0009.7195.00				
		ANGLE PIN CONNE	CTOR						
l									
1									
1									
۱									
	***************************************				economic				
ı					Language Parker				
-									
1									
۱	:		:						ŀ
ı									
1									l
ſ	MEZ11	887 3PLU	Äl Datum Date		Schaltteilli Parts lis		Sachnummer Stock No.		Blatt-Nr. Page
t									

1035.5592.01 SA

2-

Für diese Unterlage behalten wir uns alle Rechte vor.

ROHDE&SCHWARZ

13 07.10.99

ED DREHGEBER

•
:
:
\$5.
:
-4
:

halten	
beh	
8	•
Unterlage	
뒫	
⋾	
50	
diese	
Ę	

	Comp. No.	Designat	ion			Sto	ck No.	Manufacturer		esignation		ined in
	•	XX VARIANTENER									-	
	C1	CC 100PF+-1% 5	SOVI	NPO 0603	СС	0009	.4680.00	MURATA	GRM	39C0G***F50ZPT		
	C2	SMD-CERAMIC-CAP CC 100PF+-1%					.4680.00		GRM	39C0G***F50ZPT		
	СЗ	SMD-CERAMIC-CAP CC 100NF+-10%16			СС	1097	.6292.00	AVX	CM1	05 X7R104K16AT		
	C4	CERAMIC CHIP CA			cc	0009	.4567.00	MURATA	GRM	39C0G***B50ZPT		
	10 C11	SMD-CERAMIC-CAP CC 47NF+-10%50\			cc	0007	.5195.00	AVX		6 5 C 473 KA 3		
	C12	CERAMIC CHIP CA					. 4567.00			39C0G***B50ZPT		
	C13	SMD-CERAMIC-CAP	AC:	TOR			.4567.00			39C0G***B50ZPT		
	C14	SMD-CERAMIC-CAR	AC:	ITOR			.6292.00			05 X7R104K16AT		
١	C15	CERAMIC CHIP CA	PA(CITOR				NAT_PANASO				
١	17 C18	ELECTROLYTIC CA	PAC	CITOR	loc.		.6292,00			05 X7R104K16AT		
	C19	CERAMIC CHIP CA	PAC	CITOR			.6292.00			05 X7R104K16AT		
	C20	CERAMIC CHIP CA	PA(CITOR						HB 1V 100X		
	22 C23	SMD ELECTROLYTI	C	CAPACIT.				MURATA		39X7R***K50C500		
	C24	SMD-CERAMIC-CAP	AC:	TOR						HB 1V 100X		
١	C25	SMD ELECTROLYTI	C	CAPACIT.						HB 1V 100X		
	C26	SMD ELECTROLYTI	C	CAPACIT.						8 581 55649		
ı	29 C30	CERAMIC CHIP CA	PA(CITOR			.6292.00					l
ĺ	43 C44	CERAMIC CHIP CA	PA(CITOR				PHILIPS_CO		05 X7R104K16AT		
<u> </u>	C45	CERAMIC CHIP CA	PAC	CITOR			.6292.00			05 X7R104K16AT		
2000	48 C49	CERAMIC CHIP CA	PA(CITOR				PHILIPS_CO				
,	C50	CERAMIC CHIP CA	PA(CITOR			.6292.00			05 X7R104K16AT		
	C51	CERAMIC CHIP CA	PAC	CITOR			4844.00			39X7R***K50C500		
	C52	SMD-CERAMIC-CAP	ACI	TOR			.6292.00			05 X7R104K16AT		
	C53	CERAMIC CHIP CA	PAC	CITOR			. 6553 . 00			V100F(G)S		
ı	C54	SMD-ELECTOLYTIC CC 100NF+-10%50	CA	APACIT.				PHILIPS_CO				
1	C55	CERAMIC CHIP CA	PAC				.7281.00			D-106X9 016 C2W		
	C56	TANTALUM CHIP CC 100NF+-10%16	APA	ACITOR			.6292.00			05 X7R104K16AT		
	62 C63	CERAMIC CHIP CA	PAC	CITOR			4680.00			39C0G***F50ZPT		
	C64	SMD-CERAMIC-CAP	AC:	TOR			6292.00			05 X7R104K16AT		
	C65	CERAMIC CHIP CA	PAC	CITOR			6292.00			05 X7R104K16AT		
	C66	CERAMIC CHIP CA	PAC	CITOR				PHILIPS_CO				
	68 C69	CERAMIC CHIP CA	PAC	CITOR			6292.00			05 X7R104K16AT		
	90 C92	CERAMIC CHIP CA CC 22UF-20+80%	PAC	CITOR						325 F 226 ZN		
	C93	CERAMIC CAPACIT CC 22UF-20+80%	OR							325 F 226 ZN		
	C94	CERAMIC CAPACIT	OR.		СС		.6292.00			05 X7R104K16AT		
1	97 C98	CERAMIC CHIP CA	PAC	CITOR				PHILIPS_CO				
	C99	CERAMIC CHIP CA	PAC	CITOR			.6292.00			05 X7R104K16AT		
	112	CERAMIC CHIP CA							• •			
t	1GPK	890 3PLU	ÄI	Datum Date			Schaltteili Parts lis			Sachnummer Stock No.		Blatt-Nr. Page
2000	ren .		^^							1084.8804.01	C A	
7700	ROHD	E&SCHWARZ	Ųβ	12.10.99		D RE	CHNER (FO	J-11)		1004.0004.01	SA	1+

	Kennz. Comp. No.	Benennung Designation	Stock No.	Manufacturer	Designation	contains	d in
	C113	CE 470UF+-20%25V12,5X12,5	0803.0715.00	NAT_PANASO E	CA-1EM471		1
•	C114_	CC 100NF+-10%16V HDK 0603	CC 1097.6292.00	AVX C	M105 X7R104K16AT		
	117 C119	CERAMIC CHIP CAPACITOR CC 220NF+-10%50V X7R 1210	CC 0520.6850.00	AVX 1	210 5C 224KA 11A		
	C121	CERAMIC CAPACITOR CHIP CC 10NF+-10% 50VHDK 0603	CC 0009.4844.00	MURATA G	GRM39X7R***K50C500		
	C122	SMD-CERAMIC-CAPACITOR CC 100PF+-1% 50VNPO 0603	CC 0009.4680.00	MURATA G	RM39COG***F50ZPT		
	125 C126	SMD-CERAMIC-CAPACITOR CC 100NF+-10%16V HDK 0603	CC 1097.6292.00	AVX C	M105 X7R104K16AT		l
	133 C134	CERAMIC CHIP CAPACITOR CC 100NF+-10%50V X7R 1206	CC 0007.5237.00	PHILIPS_CO 2	238 581 55649		
	C135	CERAMIC CHIP CAPACITOR CC 100NF+-10%16V HDK 0603	CC 1097.6292.00		CM105 X7R104K16AT		
	143 C144	CERAMIC CHIP CAPACITOR CC 100PF+-1% 50VNPO 0603	CC 0009.4680.00		GRM39COG***F5OZPT		
	151 C152	SMD-CERAMIC-CAPACITOR CC 1,0NF+-10%50V HDK 0603	CC 0009.4938.00		GRM39X7R***K50C500		
		SMD-CERAMIC-CAPACITOR CC 100PF+-1% 50VNPO 0603	CC 0009.4680.00		GRM39COG***F50ZPT		
	C153 159	SMD-CERAMIC-CAPACITOR	CC 0009.4644.00		GRM39COG***F50ZPT		
	C160 163	CC 47PF+-1% 50VNPO 0603 SMD-CERAMIC-CAPACITOR	CC 0009.4680.00		GRM39COG***F50ZPT		
	C164	CC 100PF+-1% 50VNPO 0603 SMD-CERAMIC-CAPACITOR			GRM39COG***F50ZPT		
	C165	CC 100PF+-1% 50VNPO 0603 SMD-CERAMIC-CAPACITOR	CC 0009.4680.00				
	C166	CC 10NF+-10% 50VHDK 0603 SMD-CERAMIC-CAPACITOR	CC 0009.4844.00		GRM39X7R***K50C500		
	C167 170	CC 100PF+-1% 50VNPO 0603 SMD-CERAMIC-CAPACITOR	CC 0009.4680.00		GRM39CDG***F50ZPT		
	C171	CE 4.7UF+-10% 10V 3528 TANTALUM CHIP CAPACITOR	CE 0007.7275.00	-	293D 475 X9 010 B2T		
	C172 181	CC 100NF+-10%16V HDK 0603 CERAMIC CHIP CAPACITOR	CC 1097.6292.00		CM105 X7R104K16AT	-	
;	C182	CC 100NF+-10%50V X7R 1206 CERAMIC CHIP CAPACITOR	CC 0007.5237.00	PHILIPS_CO	2238 581 55649		
vor.	C183 187	CC 100NF+-10%16V HDK 0603 CERAMIC CHIP CAPACITOR	CC 1097.6292.00		CM105 X7R104K16AT		
Rechte vor.	C188	CC 100NF+-10%50V X7R 1206 CERAMIC CHIP CAPACITOR	CC 0007.5237.00	PHILIPS_CO	2238 581 55649		
alte R	C189	CC 100NF+-10%16V HDK 0603 CERAMIC CHIP CAPACITOR	CC 1097.6292.00	AVX	CM105 X7R104K16AT		:
SUD	191 C192	CC 100PF+-1% 50VNPO 0603 SMD-CERAMIC-CAPACITOR	CC 0009.4680.00	MURATA (GRM39COG***F50ZPT		
×	199 C200 .	CC 100NF+-10%50V X7R 1206	CC 0007.5237.00	PHILIPS_CO :	2238 581 55649		
	C2O1	CERAMIC CHIP CAPACITOR CC 100NF+-10%50V X7R 1206	CC 0007.5237.00	PHILIPS_CO	2238 581 55649		
	C2O2	CERAMIC CHIP CAPACITOR CC 100NF+-10%16V HDK 0603 CERAMIC CHIP CAPACITOR	CC 1097.6292.00	AVX	CM105 X7R104K16AT		
	204 C205	CE 100UF+-20%16V RUND SMD	CE `0009.6553.00	SANYO	16CV100F(G)S		
	207 C208	SMD-ELECTOLYTIC CAPACIT. CC 100PF+-1% 50VNPO 0603	CC 0009.4680.00	MURATA	GRM39COG***F50ZPT		İ
	C209	SMD-CERAMIC-CAPACITOR CC 100PF+-1% 50VNPO 0603	CC 0009.4680.00	MURATA	GRM39COG***F50ZPT		
	C210	SMD-CERAMIC-CAPACITOR CC 100NF+-10%16V HDK 0603	CC 1097.6292.00	AVX	CM105 X7R104K16AT		
		CERAMIC CHIP CAPACITOR	no 1005 0000 00	TAITE	E28F016XS15		
	D1	BC E28F016XS-15 FLASH FILE MEMORY	BC 1085.2080.00		E28F016XS15		
	D2	BC E28F016XS-15 FLASH FILE MEMORY	BC 1085.2080.00				
	D3	BG TH3131 CLKGEN3 ASIC GATEARRAY	1039.1533.00		TH3131		
	D4	BL PC74HCT541T 8XBUSDRIV OCTAL BUFFER/LINE DRIVER	1		(PC)74HCT541(D/T)		
	D5	BL 74ABT16245ADL 16X3S TX IC 16BIT BUS TRANSCEIVER			SN74ABT 16245ADL		
	D6	BL 74ACT32SC 4X2-IN OR IC QUAD 2-INPUT OR GATE	BL 1012.9385.0		CD74ACT32M		
	D7	BL 74ACT2OSC 2X4-IN NAND IC DUAL 4-INPUT NAND GATE	BL 0008.0700.0		CD74ACT2OM		
	D8	BL 74ACTO8SC 4X2-IN AND IC QUAD 2-INP AND GATE	BL 1012.9362.0	OHARRIS	CD74ACTO8M		
		<u> </u>		Illies für	Sachnumme	7	Blatt-Nr.
m	1GPK	890 3PLU ÄI Date		ellliste für list for	Stock No.		Page
5-069	%	06 12.10.9	9 ED RECHNER (FC-II)	1084.8804.0	1 SA	2+
95.0026-0693	ROHE	DE&SCHWARZ					

L	Comp. No.	Designatio	n	- during the second		Stock No.	Manufacturer		signation	conta	ined in
	D9	BJ LT1181ACS RS2				1008.2915.00	LINEAR_TEC	LT1	181ACSW		
	D10	RS-232 TRANSCEIN BC FC80960HD50 FC8096HD50	VEK			1085.2180.00	INTEL	FC80	0960HD50		
	D11	BC E28F016XS-15			вс	1085.2080.00	INTEL	E28F	016XS15		
	D12	FLASH FILE MEMOR BJ LT1181ACS RS2 RS-232 TRANSCEIV	232			1008.2915.00	LINEAR_TEC	LT11	181ACSW		
	D13	NUR VAR/ONLY MOD BL 74ACT32SC 4X2): 2-I	10 N OR	BL	1012.9385.00	HARRIS	CD74	FACT32M		
ı	D14	IC QUAD 2-INPUT BL 74ACT163SC 4E	3 B	INCTR	BL	2032.2576.00	HARRIS	CD74	ACT163M		
١	D15	IC MODULO-16-BIN BO MAX793TCSE U				1104.2528.00	MAXIM	MAX7	793TCSE		
	D16	IC UP VOLTAGE SU BJ LT1181ACS RS2 RS-232 TRANSCEIV	232	2TX2RX		1008.2915.00	LINEAR_TEC	LT11	181ACSW		
	D17	NUR VAR/ONLY MOD BC HM628512L 5) : 12K	10 X8 SRAM	вс	2068.9193.00	SAMSUNG	KM68	34000(B/C)LG-7		
l	20 D21	IC STATIC RAM 5		X8	вс	1085.2080.00	INTEL	E28F	O16XS15		
	D22	FLASH FILE MEMOF BL 74LVC138DB		O8 DEC	BL	1104.2592.00	PHILIPS_SE	74L\	/C138ADB		
l	D23	LINE DECODER BL 74ACT157SC 4>	Κ 2	-IN MUX	BL	1012.9410.00	HARRIS	(CD7	74)ACT157(M)		
	D40	QUAD 2-INP MULTI BJ LT1181ACS RS2	IPL	EXER		1008.2915.00					
	_	RS-232 TRANSCEIN NUR VAR/ONLY MOD	/ER				_ · · · · · · · · _ · · - ·	,			
l	D60	BC TNT4882C IEE4 NUR F.SERV.ZWECK	488	-CONTRL		1050.0700.00	NATIONAL/I	TNT4	1882CAQ		
l	D61	BC UPD71054L10 PROGR.INTERVAL-1		TIMER		1051.5258.00	NEC	(UPE)71054L-10		
l	D72	BL 74ACT32SC 4X2 IC QUAD 2-INPUT	2-1	N OR	BL	1012.9385.00	HARRIS	CD74	ACT32M		
.	D85	BC TL16C550AFN IC WART	0	UART		3527.9354.00	TEXAS	TL16	6C550AFN		
l	D87	BG SERBUS-MZE IC GATEARRAY		ASIC		1066.1976.00	FRAUNH_IFT	SERE	BUSM2E		
l	D90	BC SED1351FOA	L	CD-CTRL		0008.7727.00	SEIKO_EPSO	SED1	1351FOA		
ı	D106	LCD CONTROLLER BL PC74HC132T 4			BL	0520.7811.00	PHILIPS_SE	(PC)	74HC132(D/T)		
ı	D199	QUAD 2-INP NAND BL PC74HCT541T 8	3XB	USDRĮV	BL	1006.4104.00	PHILIPS_SE	(PC)	74HCT541(D/T)		
	D200	OCTAL BUFFER/LIN	ЗХВ	USDRIV	BL	1006.4104.00	PHILIPS_SE	(PC)	74HCT541(D/T)		
l	D213	OCTAL BUFFER/LIN	D−F		BL	1058.0745.00	HARRIS	(CD7	74)ACT273(M)		
	D220	OCTAL D FLIP-FLO	3XB		BL	0843.7240.00	IDT	IDT7	4FCT244ASO		
	D223	OCTAL BUFFER/LIN BL 74FCT138CTSO	1-8		BL	1051.5164.00	IDT	(IDT	74)FCT138C(TSO)		
	D224	IC 1-OF-8 DECODE BL 74FCT138CTSO	1-8	DECODER	BL	1051.5164.00	IDT	(IDT	74)FCT138C(TSO)		
	D226	IC 1-OF-8 DECODE BL 74ACT138SC 3	108		BL	2007.5017.00	HARRIS	CD74	ACT138(M)		
	D227	3-TO-8 DECODER/I BL 74ACT138SC 31	T08	DECOD	BL	2007.5017.00	HARRIS	CD74	ACT138(M)		
	D300	3-TO-8 DECODER/I BC ISPLSI1016-60 IC PROGR LOGIC I	DLT	GAL	вс	2073.8127.00	LATTICE	ISPL	SI1016-60LT		
	D301 D310	HS 1084.8604-SOF BL 74ACT139SC 22	FTW X 1	D3O1. A4DEMUX	BL	1084.8604.00 2000.2412.00	HARRIS	CD74	ACT 139M		ĺ
	D400	IC DUAL 1-OF-4 DBO LP2951CMLOWDE	ROP	+VREGL		1020.0890.00	NSC	LP29	951CM		
	D402	IC VOLTAGE REGUL BC ISPLSI1016E-			вс	1085.1484.00	LATTICE		SI1016E-100LT44		ľ
	D500	IC PROGR LOGIC I BC TL16C55OAFN	DEV	ICE UART		3527.9354.00	TEXAS	TL 16	SC550AFN		
	DE0.	IC WART NUR VAR/ONLY MOI	D:			207 2054 22	TEVAC	T1 44	CCECAEN		
	D501	BC TL16C55OAFN IC WART NUR VAR/ONLY MOI	D:	UART 10		3527.9354.00	IEAAS	; L (SC550AFN		
	D550	BL PC74HCT273T I	BXD	-FF	BL	0007.6610.00	PHILIPS_SE	(PC))74HCT273(D/T)		
	D560	BL PC74HCT541T (OCTAL BUFFER/LI)	8XB	USDRIV	BL	1006.4104.00	PHILIPS_SE	(PC))74HCT541(D/T)		
-	1004	890 3PLU	ا . ــ	Datum		Schaltteill	liste für		Sachnummer		Blatt-Nr.
-	1GPK	890 3PLU	Äl	Date	 	Parts li	st for		Stock No.		Paga
	ROHD	E&SCHWARZ	06	12.10.99		ED RECHNER (F	C-II)		1084.8804.01	SA	3+

44

Saconummer

95.0028-0693

ROHDE&SCHWARZ

Kennz.

Benennung

5	
behalten	ŽÕ.
ğ	Rechte
Unterlage	alle F
diese	Sun
	·š
F	

NO	Comp. No.	Designation	Stock No.	merstener Manufacturer	pazaichnung Dasignation	iten in Ined in
NOO BO OPPTES	N2	l =	1085.2097.00	NSC	LM2596S-ADJ	
N702 BO OP975 LP PREC OPAMP O007.7781.00 CINEAR_TECL T1001(CSS)	N700	BO OP97FS LP PREC OPAMP	1036.4390.00	PMI	OP97F(S)	
N702 PORAND POR	N701	BO OP97FS LP PREC OPAMP	1036.4390.00	PMI	OP97F(S)	
P2 VL EINPRESSTIFT 5.6 VL 0010.7250.00 AMP 1-928776-5 P3 VL EINPRESSTIFT 5.6 VL 0010.7250.00 AMP 1-928776-5 P4 VL EINPRESSTIFT 5.6 VL 0010.7250.00 AMP 1-928776-5 P6 VL EINPRESSTIFT 5.6 VL 0010.7250.00 AMP 1-928776-5 P7 VL EINPRESSTIFT 5.6 VL 0010.7250.00 AMP 1-928776-5 P8 VL EINPRESSTIFT 5.6 VL 0010.7250.00 AMP 1-928776-5 P1 VL EINPRESSSTIFT 5.6 VL 0010.7250.00 AMP 1-92	N702	BO OPO7CS8 OPAMP	0007.7781.00	LINEAR_TEC	LT1001(CS8)	
P2	P1		VL 0010.7250.00	AMP	1-928776-5	
P3	P2	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P4	Р3	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P5	P4	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P6	P5	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P7	P6	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P19	4	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
NUR VAR/ONLY MOD: 10		VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
NUR VAR/ONLY MOD: 10	P20	NUR VAR/ONLY MOD: 10 VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P22 VL EINPRESSSTIFT 5.6	P21	NUR VAR/ONLY MOD: 10 VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P23	P22	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P24 VL EINPRESSTIFT 5.6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5.6 V	P23	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P25	. P24	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P27	P25	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P31	P27	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P46		VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P49		VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P700	P49	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P710 VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P901 VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P902 VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P903 VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P904 VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P91N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P942 VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P943 VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5	P700	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P720	P710	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P730 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P900 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P901 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P902 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P903 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P904 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P932 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P942 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P943 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1A VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5	P720	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P900	P730	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P901 VL EINPRESSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P902 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P903 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P904 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P932 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P943 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1A VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P	P900	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	ĺ
P902 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P903 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P904 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P932 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P943 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P1A VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P1A VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P	P901	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P903 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P904 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P932 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P944 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1A VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1	P902	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P904 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P942 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P943 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1A VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N	P903	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P932 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P943 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1A VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5	P904	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P942 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P943 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1A VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 PIN P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5	P932	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P943 VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1A VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1B VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 P1N VL O010.7250.00 AMP 1-928776-5 P1N Schaltteilliste für Sachnummer Blatt-Nr.	P942	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P1A	P943	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P1B	P1A	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
P1C VL EINPRESSSTIFT 5,6 VL 0010.7250.00 AMP 1-928776-5 1GPK 890 3PLU & Detum Schaltteilliste für Sachnummer Blatt-Nr.	P1B	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
I IMPR DOUGH ALL	P1C	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP	1-928776-5	
I IMPR DOUGH ALL						
	1GPK					

ED RECHNER (FC-II)

06 12.10.99

1084.8804.01 SA

5+

ROHDE&SCHWARZ

Kennz. Comp. No.	Benennung Designation	Sachnummer Stock No.		Bezeichnung Designation	enthalten in contained in
P1D	VL EINPRESSSTIFT 5,6	VL 0010.7250.00		928776-5	
P1E	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9	928776-5	
P1F	PIN VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-9	928776-5	
P1G	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9	928776-5	
P 1H	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9	928776-5	
P1J	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-9	928776-5	
R1 7	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00	PHILIPS_CO RC	22 H	
R8	RG 47K +-1% TK100 0603	0009.7072.00	PHILIPS_CO RC	22 H	
R9	RG 47K +-1% TK100 0603 SMD RESISTOR EIA0603	0009.7072.00	PHILIPS_CO RC	22 H	
R10 18	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00	PHILIPS_CO RC	22 H	
R19	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00	PHILIPS_CO RC	22 H	
R20	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00	PHILIPS_CO RC	22 H	
R21 33	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00	PHILIPS_CO RC	22 H	
R34	RG 10,0K0H+-0,1%TK25 1206	0009.7666.00	PHILIPS_CO MPO	C 01	
R35 37	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00	PHILIPS_CO RC	22 H	
R38	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340,00	PHILIPS_CO RC	22 H	
R39	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00	PHILIPS_CO RC	22 H	
R40 42	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00	PHILIPS_CO RC	22 H	
R43	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00	PHILIPS_CO RC	22 H	
R44	RG 243R +-1% TK100 0603 SMD RESISTOR EIA0603	0010.9800.00	DRALORIC CR	0603	
R45	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00	PHILIPS_CO RC	22 H	
R49	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00	PHILIPS_CO RC	22 H	
R50	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00	PHILIPS_CO RC	22 H	
R51	RG 470R +-1% TK100 0603 SMD RESISTOR EIA0603	0009.6976.00	DRALORIC CR	0603	
R52	RG 10,2KOH+-0,1%TK25 1206 SMD-RESISTOR	0009.7614.00	PHILIPS_CO MPO	C 01	
R53	RG 100R +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5334.00			
R66	RG 1,0 KO +-0,1%TK25 1206 SMD-RESISTOR	0009.7595.00	PHILIPS_CO MPO	C 01	
R67 70	RG 47K +-1% TK100 0603 SMD RESISTOR EIA0603	0009.7072.00	PHILIPS_CO RC	22 H	i
R71 73	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00	PHILIPS_CO RC	22 H	
R74	RG 100R +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5334.00			
R75	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00			
R76 83	RG 47K +-1% TK100 0603 SMD RESISTOR EIA0603		PHILIPS_CO RC		
R84 86	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00			
R87	RG 150R +-1% TK100 0603 SMD RESISTOR EIA0603		PHILIPS_CO RC		
R88 99	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00			
R100	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00		1	
R101	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00			
R102	RG 10R +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5328.00	PHILIPS_CO RC	22 H	
**:	Datum	Schaltteil	liste für	Sachnummer	Blatt-Nr.
1GPK	890 3PLU ÄI Date	Parts li		Stock No.	Page

1084.8804.01 SA

6+

ROHDE&SCHWARZ

06 12.10.99

Comp. No.	Designation		Stock No.	Manufacturer	Designation	contained in
R103	RG 1MO +-1% TK100 C	0603	RG 0009.5370.00	DRALORIC (CR 0603	
D104	SMD RESISTOR EIAO603		DC 0000 E0E7 00	}		
R104	RG 10K +-1% TK100 C SMD RESISTOR EIA0603	0603	RG 0009.5357.00	PHILIPS_CO F	RC 22 H	
R105		603	RG 0009.5357.00	PHILIPS_CO F	RC 22 H	
	SMD RESISTOR EIAO603	ļ				
R106	RG 1KO +-1% TK100 C SMD RESISTOR EIAO603	0603	RG 0009.5340.00	PHILIPS_CO F	RC 22 H	
R107		603	RG 0009.5357.00	PHILIPS CO F	RC 22 H	
114	SMD RESISTOR EIAO603					
R115		603	0009.7072.00	PHILIPS_CO F	RC 22 H	
146 R147	SMD RESISTOR EIAO603 RG 10K +-1% TK100 C	603	RG 0009.5357.00	PHILIPS CO F	RC 22 H	
151	SMD RESISTOR EIAO603					
R152		1206	RG 0007.5608.00	ROEDERSTEI (025	ł
R153	RESISTOR CHIP RG 10K +-1% TK100 C	603	RG 0009.5357.00	PHILIPS CO F	RC 22 H	į
	SMD RESISTOR EIAO603					
R154	l	603	RG 0009.5357.00	PHILIPS_CO F	RC 22 H	
R155	SMD RESISTOR EIAO603 RG 243R +-1% TK100 C	603	0010.9800.00	DRALORIC (CR 0603	
11100	SMD RESISTOR EIAO603					
R156		0603	RG 0009.5334.00	PHILIPS_CO F	RC 22 H	
R157	SMD RESISTOR EIAO603 RG 100R +-1% TK100 C	0603	RG 0009.5334.00	PHILIPS ON R	RC 22 H	
	SMD RESISTOR EIAO603					
R158		0603	RG 0009.5357.00	PHILIPS_CO F	RC 22 H	
R159	SMD RESISTOR EIAO603 RG 100R +-1% TK100 C	0603	RG 0009.5334.00	PHILIPS CO F	RC 22 H	
	SMD RESISTOR EIAO603	-				
R160		0603	0009.7072.00	PHILIPS_CO F	RC 22 H	
162 R163	SMD RESISTOR EIAO603 RG 47R +-1% TK100 C	0603	0009.6924.00	PHILIPS CO F	RC 22 H	
166	SMD RESISTOR EIAO603	-				
R167		0603	RG 0009.5357.00	PHILIPS_CO F	RC 22 H	
R168	SMD RESISTOR EIAO603 RG 2,0KOHM+-0,1%TK25 1	1206	0009.7608.00	PHILIPS CO N	MPC 01	
	SMD-RESISTOR	- 1				
R169	RG O-OHM WIDERSTAND 1 RESISTOR CHIP O-OHM	1206	RG 0007.5108.00	DRALORIC (CR 1206	
R170	RG 10,0 0HM+-1%TK100 1	1206	RG 0006.8649.00	DRALORIC C	CR 1206	
	CHIP -RESISTOR					
R171		206	RG 0007.5108.00	DRALORIC (CR 1206	
R172	RESISTOR CHIP O-OHM RG O-OHM WIDERSTAND 1	1206	RG 0007.5108.00	DRALORIC C	CR 1206	
	RESISTOR CHIP O-OHM					
.R173	RG 88,7KOH+-0,1%TK25 1	206	0009.7650.00	PHILIPS_CO N	MPC 01	
R174	SMD-RESISTOR RG 10K +-1% TK100 C	0603	RG 0009.5357.00	PHILIPS CO F	RC 22 H	
	SMD RESISTOR EIA0603			.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		
R175		1206	RG 0007.5608.00	ROEDERSTEI I	025	
R176	RESISTOR CHIP RG 10K +-1% TK100 C	0603	RG 0009.5357.00	PHILIPS CO F	RC 22 H	
	SMD RESISTOR EIAO603	1				
R177		0603	RG 0009.5340.00	PHILIPS_CO F	RC 22 H	
R178	SMD RESISTOR EIAO603 RG 47K +-1% TK100	0603	0009.7072.00	PHILIPS CO F	RC 22 H	
185	SMD RESISTOR EIAO603			_		
R186	RG 1KO +-1% TK100 C	0603	RG 0009.5340.00	PHILIPS_CO F	RC 22 H	
199 R200	SMD RESISTOR EIAO6O3 RG 47K +-1% TK10O C	0603	0009.7072.00	PHILIPS CO P	RC 22 H	
	SMD RESISTOR EIAO603					
R201		0603	RG 0009.5357.00	PHILIPS_CO F	RC 22 H	
R202	SMD RESISTOR EIAO603 RG 47K +-1% TK100 C	0603	0009,7072.00	PHILIPS CO F	RC 22 H	
1	SMD RESISTOR EIAO603					
R203	1	0603	0009.6953.00	DRALORIC (CR 0603	
R204	SMD RESISTOR EIA0603 RG 220R +-1% TK100 C	0603	0009.6953.00	DRALORIC (CR 0603	
	SMD RESISTOR EIAO603					
R205		0603	RG 0009.5340.00	PHILIPS_CO F	RC 22 H	
R206	SMD RESISTOR EIAO603 RG 47K +-1% TK100 (0603	0009.7072.00	PHILIPS CO F	RC 22 H	
````	SMD RESISTOR EIAO603	ĺ				
R207	RG 47K +-1% TK100 C	0603	0009.7072.00	PHILIPS_CO F	RC 22 H	
R208	SMD RESISTOR EIAO603 RG 1KO +-1% TK100 (	0603	RG 0009.5340.00	PHILIPS CO I	RC 22 H	
1,200	SMD RESISTOR EIA0603		00001001010100		==	
		]				
1GPK		tum ate	Schaltteil Parts li		Sachnummer Stock No.	Blatt-Nr. Page
<u> </u>		-,-	, 4, (3.11		0.00	

1084.8804.01 SA

7+

ROHDE&SCHWARZ

06 12.10.99

	Kennz. Comp. No.	Banannun; Dasignatio				Sachnummer Stock No.	Hersteller Manufacturer		zeichnung signation		contain	
	R209	RG 1KO +-1% TK10	00	_	RG	0009.5340.00	PHILIPS_CO	RC 2	22 H			l
	R210	RG 47K +-1% TK10	00	0603		0009.7072.00	PHILIPS_CO	RC 2	22 H			
	R211	RG 1KO +-1% TK10	00	0603	RG	0009.5340.00	PHILIPS_CO	RC 2	22 H			
	217 R218	RG 47K +-1% TK10	00	0603		0009.7072.00	PHILIPS_CO	RC 2	22 H			ļ
	R219	RG 1KO +-1% TK10	00	0603	RG	0009.5340.00	PHILIPS_CO	RC 2	22 H			
	221 R222	SMD RESISTOR EIA	100	0603		0010.9823.00	PHILIPS_CO	RC 2	22 H			
	R223	SMD RESISTOR EIA	TK 10	00 0603		0009.9130.00	DRALORIC	CR (	0603			
	R224	RG 10K +-1% TK10	00	0603	RG	0009.5357.00	PHILIPS_CO	RC :	22 H			l
	R225	RG 10K +-1% TK10	00	0603	RG	0009.5357.00	PHILIPS_CO	RC :	22 H			
	R226	RG 20,0K0H+-0,1%				0009.7643.00	PHILIPS_CO	MPC	01			
	R227	SMD-RESISTOR RG 5K62 +-1% TK		0603		0010.8433.00	DRALORIC	CR (	0603			
	R228	SMD RESISTOR EIA	100	0603		0009.6982.00	PHILIPS_CO	RC :	22 H			
	R229	SMD RESISTOR EIA				0009.7620.00	PHILIPS_CO	MPC	01	-		
	R230	SMD-RESISTOR RG 100K +-1% TK			RĢ	0009.5363.00	DRALORIC	CR (	0603			
	R231	RG 10K +-1% TK10	00	0603	RG	0009.5357.00	PHILIPS_CO	RC :	22 H			
	R232	RG 47K +-1% TK10 SMD RESISTOR EIA	00	0603		0009.7072.00	PHILIPS_CO	RC :	22 H			İ
	R233	RG 47K +-1% TK10 SMD RESISTOR EIA	00	0603		0009.7072.00	PHILIPS_CO	RC :	22 H			
	R234	RG 10K +-1% TK10 SMD RESISTOR EI	00	0603	RG	0009.5357.00	PHILIPS_CO	RC :	22 H			
	R235 237	RG 47K +-1% TK10 SMD RESISTOR EIA	00	0603		0009.7072.00	PHILIPS_CO	RC :	22 H			
vor.	R238	RG 1KO +-1% TK10 SMD RESISTOR EI	00_	0603	RG	0009.5340.00	PHILIPS_CO	RC :	22 H			
Rechte	R239 243	RG 47K +-1% TK10 SMD RESISTOR EI	00_	0603		0009.7072.00	PHILIPS_CO	RC :	22 H			
318 B	R244	RG 1KO +-1% TK10 SMD RESISTOR EI	00	0603	RG	0009.5340.00	PHILIPS_CO	RC	22 H			
: SED	R245	RG 1KO +-1% TK10 SMD RESISTOR EI	00	0603	RG	0009.5340.00	PHILIPS_CO	RC	22 H			
wir	R246 .	RG 100K +-1% TK SMD RESISTOR EI	100	0603	RG	0009.5363.00	DRALORIC	CR	0603			
	R247	RG 1,0 KO +-0,19 SMD-RESISTOR			i	0009.7595.00	PHILIPS_CO	MPC	01	,		
	R248	RG 1KO +-1% TK1			RG	0009.5340.00	PHILIPS_CO	RC	22 H			
	R249 251	RG 10K +-1% TK10 SMD RESISTOR EI	00	0603	RG	0009.5357.00	PHILIPS_CO	RC	22 H			
	R252	RG 2,21KOHM+-1% RESISTOR CHIP				0007.5743.00						
	R253 259	RG 10K +-1% TK1 SMD RESISTOR EI		0603 03		0009.5357.00						
	R260	RG 100R +-1% TK SMD RESISTOR EI	100	0603		0009.5334.00						
	R261	RG 10K +-1% TK1 SMD RESISTOR EI			ļ	0009.5357.00						
	R262	RG 10K +-1% TK1 SMD RESISTOR EI	A06		RG	0009.5357.00						-
	R263	RG 1,69KOH+-O,1 SMD-RESISTOR EI	A12	:06		0009.9998.00						
	R264	RG 10R +-1% TK1 SMD RESISTOR EI	A06		RG	0009.5328.00						
	R265	RG 22K +-1% TK1 SMD RESISTOR EI	A06			0009.7050.00			0603			
	R266	RG 4K7 +-1% TK SMD RESISTOR EI	A06	603		0009.7020.00						
	R267	RG 18K2+-1% TK1 SMD RESISTOR EI	A06		200	0010.9317.00			0603			
	R268	RG 10K +-1% TK1 SMD RESISTOR EI	A06			0009.5357.00						•
	R269	RG 10K +-1% TK1 SMD RESISTOR EI		0603 303	KG	0009.5357.00	PHILIPS_CC	J KC	22 N			
									ļ.,			
_	1GPK	890 3PLU	ÄI	Datum Date		Schalttei Perts				Sachnummer Stock No.		Blatt-Nr. Page
.0026-0693	<b>(</b>		06	12.10.99		ED RECHNER (F	C-II)		1084	4.8804.0	1 SA	8+
95.002		E&SCHWARZ										
									•	11.000		

Comp. No.	Designation	Stock No.	Manufacturer Des	signation	contain	ad in
R270	RG 47K +-1% TK100 0603	0009.7072.00 P	HILIPS_CO RC 2	22 H		
	SMD RESISTOR EIAO603					
R271	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00 P	HILIPS_CO RC 2	22 H		
288 R289	RG 1KO +-1% TK 100 0603	RG 0009.5340.00 P	HILIPS CO RC 2	22 H		
302	SMD RESISTOR EIAO603			1		
R303	RG 100R +-1% TK100 0603	RG 0009.5334.00 P	HILIPS_CO RC 2	22 H		
305 R306	SMD RESISTOR EIAO603 RG 10K +-1% TK100 0603	RG 0009.5357.00 P	HTLIPS CO RC 2	22 H		
11000	SMD RESISTOR EIAO603					
R307	RG 47K +-1% TK100 0603	0009.7072.00 P	HILIPS_CO RC 2	22 H		
R308	SMD RESISTOR EIAO603 RG 47K +-1% TK100 0603	0009.7072.00 P	י אדו זפי כח פר י	22 H		
K300	SMD RESISTOR EIAO603	0003.7072.00	111E17 5_00 NO 2			
R309	RG 10K +-1% TK100 0603	RG 0009.5357.00 P	HILIPS_CO RC 2	22 H		
2010	SMD RESISTOR EIAO603	DC 0000 F0F7 00 D	אבו דמכ כה מכינ	nn u		
R310	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00 P	TILLES_CO RC 2	22 11		
R311	RG 47K +-1% TK100 0603	0009.7072.00 P	HILIPS_CO RC 2	22 H		
326	SMD RESISTOR EIAO603					
R327	RG 243R +-1% TK100 0603 SMD RESISTOR EIA0603	0010.9800.00 D	RALORIC CR (	0603		
R328	RG 100R +-1% TK100 0603	RG 0009.5334.00 P	HILIPS CO RC 2	22 H		
333	SMD RESISTOR EIAO603					
R334	RG 10K +-1% TK100 0603	RG 0009.5357.00 P	PHILIPS_CO RC 2	22 H		
339 R340	SMD RESISTOR EIAO603 RG 1KO +-1% TK100 0603	RG 0009.5340.00 P	HILIPS CO RC 2	22 H		
	SMD RESISTOR EIAO603	1		i		
R341	RG 1KO +-1% TK100 0603	RG 0009.5340.00 P	PHILIPS_CO RC 2	22 H		
R342	SMD RESISTOR EIAO603 RG 100K +-1% TK100 0603	RG 0009.5363.00 D	RALORIC CR (	2603		
345	SMD RESISTOR EIAO603		AND ON C			
R346	RG 10K +-1% TK 100 0603	RG 0009.5357.00 P	PHILIPS_CO RC 2	22 H		
348	SMD RESISTOR EIAO603 RG O-OHM WIDERSTAND 0603	0009.9369.00 P	ימו וושכ כה פרסי	1 O DHM		
R349	SMD RESISTOR EIAO603	0003.3303.00	TILIFS_CO RC2	i O Orimi		
R350	RG 47K +-1% TK100 0603	0009.7072.00 P	HILIPS_CO RC 2	22 H		
0251	SMD RESISTOR EIAO603	0010 0400 00 0	NOW OBJECT OF C	2602		
R351	RG 39R2 +-1% TK100 0603 SMD RESISTOR EIA0603	0010.9400.00	PRALORIC CR (	7603		
R352	RG O-OHM WIDERSTAND 0603	0009.9369.00 P	HILIPS_CO RC2	1 O OHM		
2020	SMD RESISTOR EIAO603	DO 0000 FOFT 00 P				
R353	RG 10K +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5357.00 P	HILIPS_CU RC 1	22 H		
R354	RG 10K +-1% TK100 0603	RG 0009.5357.00 P	HILIPS_CO RC 2	22 H		
	SMD RESISTOR EIAO603					
.R355	RG 10R +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5328.00 P	PHILIPS_CO RC 2	22 H		
R356	RG 150R +-1% TK100 0603	0009.6947.00 P	HILIPS CO RC 2	22 H		
	SMD RESISTOR EIAO603					
R357	RG O-OHM WIDERSTAND 0603	0009.9369.00 P	PHILIPS_CO RC2	1 O DHM		
362 R363	SMD RESISTOR EIAO603 RG 150R +-1% TK100 0603	0009.6947.00 P	HILIPS CO RC 2	22 H		
	SMD RESISTOR EIAO603		_	ĺ		
R364	RG 4K7 +-1% TK100 0603	0009.7020.00 P	HILIPS_CO RC 2	22 H		
R365	SMD RESISTOR EIAO603 RG 4K7 +-1% TK100 0603	0009.7020.00 P	HILIPS OD RO 3	22 H		
	SMD RESISTOR EIAO603					
R366	RG 680R +-1% TK100 0603	0009.6982.00 P	PHILIPS_CO RC 2	22 H		
R591	SMD RESISTOR EIAO603 RG 1KO +-1% TK100 0603	RG 0009.5340.00 P	אדו דפי כם פר י	_{22 H}		
17001	SMD RESISTOR EIAO603		_	1		
R593	RG 1KO +-1% TK100 0603	RG 0009.5340.00 P	PHILIPS_CO RC 2	22 H		
DEGN	SMD RESISTOR EIAO603 RG 1KO +-1% TK100 0603	RG 0009.5340.00 P	י שם בח בר י	22 H		
R594	SMD RESISTOR EIAO603	0003.3040.00		''		
	NUR VAR/ONLY MOD: 08					
R595	RG 1KO +-1% TK100 0603	RG 0009.5340.00 F	HILIPS_CO RC :	22 H	•	
R596	SMD RESISTOR EIAO603 RG 1KO +-1% TK100 0603	RG 0009.5340.00 F	PHILIPS CO RC	22 H		
	SMD RESISTOR EIAO603	i				
R597	RG 1KO +-1% TK100 0603	RG 0009.5340.00 F	PHILIPS_CO RC :	22 H		
	SMD RESISTOR EIAO603 NUR VAR/ONLY MOD: 10					
R991	RS 0,5W 1K+-10% Q10XH5	2027.1446.00	DIPLOMATIC P67	1K 10%		
	CERMET TRIMMING POTENTIOM	4000 4000 00	1101 OMATTO DOS	2007 107		
R995	RS 0,5W 200K+-10% Q10XH5 POTENTIOMETER	1036,4377.00	DIPLOMATIC P67	200K 10%		
	FULLITITUMETER					
100V	ROO SDI II S. Datum	Schaltteillis		Sachnummer	i i	Blatt-Nr.
1GPK	890 3PLU ÄI Date	Parts list	for	Stock No.		Page
<i>6</i> 2			**\	1084 9904 01	CV	•
	E & COURTA D7   06   12 . 10 . 99	ED RECHNER (FC-	-11)	1084.8804.01	- 3A	9+
KUHU	E&SCHWARZ	1		I	1	

T	Kennz. Comp. No.	Senennung Designation		Stock No.	mensteller Manufacturer	Designation	contains	d In
Ì	U1	EL TONGEBER 6V 7MIA AUDIO DEVICES	SMD	1081.0402.00	C&K	KMI-1240 KINGSTA	ATE .	
	V2	AK BC860B P 45V 2	OOMA A	( 0007.7975.00	MOTOROLA	BC860B		
	V4	TRANSISTOR AD BAS216 75V	UDI	0010.9346.00	PHILIPS_SE	BAS216		
1	7 V8	HIGHSPEED SWITCHING AD BAS216 75V	UDI	0010.9346.00	PHILIPS_SE	BAS216		
	v9	HIGHSPEED SWITCHING	DIODE A			BZV55B5V1 (GEG)		
	V10	ZENER DIODE AD BAV99 75V DU	IO UDI AI	0 0911.0092.00		BAV99		
	V11	HIGH-SPEED DOUBLE DI AK BC850B N 45V 2	ODE	K 0007.7969.00		BC850B		1
	V12	TRANSISTOR AK BC850B N 45V 2		K 0007.7969.00	VALVO	BC850B		
	V13	TRANSISTOR	i	E 0836.8421.00	HEWLETT_PA	HSMS-2800(#L31)		
	20 V22	SCHOTTKY DIODE AD BAS216 75V	UDI	0010.9346.00	PHILIPS_SE	BAS216		1
	V23	HIGHSPEED SWITCHING AG MBRD360 SGL 60V SCHOTTKY RECTIFIER	DIODE 3AO	4024.7875.00	MOTOROLA	MBRD360T4		
	хз	FP STIFTLEISTE 3P.R=	=2 F	P 4039.4360.00	SUYIN	20010S-03G2T		
	X31 X33	CONNECTOR DY BUCHSENLEISTE W31 FP STECKERLEISTE 10F	O.GER	1084.8562.00 0846.4593.00	1	V23535-A2200-A1	02	
	X34	CONNECTOR 10P FP STECKERLEISTE 26F CONNECTOR 26P.		P 0820.8610.00	SIEMENS	V23535-A2200-A2	62	
	X35 X36	DY BUCHSENLEISTE W35 FP LEITERPLATTENVERE		1035.7337.00 0840.6436.00	DUPONT CON	68100-013		
	X37	CONNECTOR  FP LEITERPLATTENVERS	3.13P	0840.6436.00	DUPONT CON	68100-013		
	Х38 .	CONNECTOR FP STECKERLEISTE 10F CONNECTOR 10P		0846.4593.00	SIEMENS	V23535-A2200-A1	02	
uns alle Rechte vor.	X39	NUR VAR/ONLY MOD: 10 FP STECKERLEISTE 10F CONNECTOR 10P	P.GER	0846.4593.00	SIEMENS	V23535-A2200-A1	02	
e Kec	X85	NUR VAR/ONLY MOD: 10 FP STIFTLEISTE 2P.R	0 =2   F	P 1065.8931.00	SUYIN	20010S-02G2T		
nus a	X105	CONNECTOR FP STIFTLEISTE 2P.R	=2 F	P 1065.8931.00	SUYIN	20010S-02G2T		
ž	X106.	CONNECTOR FP STIFTLEISTE 2P.R	=2 F	P 1065.8931.00	SUYIN	20010S-02G2T		
	X111	CONNECTOR FP STIFTLEISTE 3P.R	=2 F	P 4039.4360.00	SUYIN	20010S-03G2T		
	X112	CONNECTOR FP STIFTLEISTE 3P.R	=2 F	P 4039.4360.00	SUYIN	20010S-03G2T		
	х300	CONNECTOR FP STIFTLEISTE 2P.R	=2 F	P 1065.8931.00	SUYIN	20010S-02G2T		
	X312	FP STIFTL.WIN 5P.R	_,_,	FP 0009.7214.00				
	X313	ANGLE PIN CONNECTOR FP STIFTL WIN 3P.R	2,54	FP 0009.7195.00				
	X314	ANGLE PIN CONNECTOR FP E-PRESS STIFTLEI	STE 6P	0048.4741.00				
	X501	CONNECTOR  FP STECKERLEISTE 50	P.R=2	FP 1051.4516.00	BERG_ELEK	T <b>87</b> 131-550		
	X502	CONNECTOR 50P FP STECKERLEISTE 50	)P.R=2	FP 1051.4516.00	BERG_ELEK			
	X700	CONNECTOR 50P FP STIFTLEISTE 2P.R	R=2	FP 1065.8931.0	NIYUZ	20010S-02G2T		
	X900	CONNECTOR FP E-PRESS STIFTLEI	STE 2P	0048.4706.0	0			
	X902	CONNECTOR FP STIFTLEISTE 8P.		FP 0009.6182.0				
	х999	PIN CONNECTOR FP BUCHSENLEISTE 30 SOCKET CONNECTOR	POL.	FP 0283.1830.0	O DUPONT CO	N 76325		
				Cohella	ellliste für	Sa	chnummer	Blatt-Nr.
	1GPK	890 3PLU ÄI	Datum Date		i list for		Stock No.	Page
28-0593	<b>®</b>	06	12.10.99	ED RECHNER (	FC-II)	1084.88	804.01 SA	10-

ROHDE&SCHWARZ



## XY-Liste

## **XY List**

#### Erklärung der Spaltenbezeichnungen:

el. Kennz. Bauelement-Kennzeichen

Seite Leiterplatten-Seite, auf der sich das

**Bauelement befindet** 

X/Y Koordinaten (in Millimeter) des Bauelementes auf der

Leiterplatte bezogen auf den Nullpunkt

Plang., Bl. Planguadrat und Seite des Schaltbildes

für das jeweilige Bauelement

### Explanation of column designations:

Part Identification of instrument part

Side Side of the PC board on which instrument part is

positioned

X/Y Coordinates (in units of millimeters) of the component

on the PC board in reference to zero point

Sqr, Pg Square and page of the diagram for

the respective instrument part

Nicht-Service-Relevante Bautei	ile / Non-Service-Relevant Components
	Bland Bl of Konny Chitol Plans Bl

			ICC-			nte Bai			1011			_	-Rele					_
el. Kennz. <i>Par</i> t	Seite Side	Х	Υ	Planq. Sar	Bl. Pg	el. Kennz Part	Seite Side	х	Y	Planq. Sqr	BI. Pg		el. Kennz. Part	Seite Side	X	Υ	Plang. <i>Sgr</i>	BI. Pg
C1	B	214	7	3B	2	C75	В	27	124	2F	12		C152	A	203	20	2C	2
C2	В	212	7	3B	2	C76 C77	A B	8 4	86   89	2F 3F	12 12		C153 C154	A	204 208	13 20	2C 2D	2
C3 C4	A	221 55	97 104	7C 3B	3 11	C77	B	41	125	4F	12		C155	B	208	7	2D	2
C5	Â	53	104	3B	11	C79	A	25	84	4F	12		C156	A	207	12	3A	2
C6	A	63	102	3B	11	C80 C81	B   B	149 137	38	1F 4B	13 13		C157 C158	B B	210 216	7	3A 3B	2
C7 C8	A	65 68	102 102	3B 3B	11 11	C82	В	142	13	4C	13		C159	В	218	8	3C	2
C9	Α	60	104	3A	11	C83	В	151	13	2E 2E	13 13		C160 C161	A	217 219	20 20	3C 3C	2
C10 C11	B	58 124	104 45	3B 5D	11 14	C84 C85	B B	151 119	23 24	3F	13		C162	Â	221	13	3C	2
C12	A	12	78	5B	12	C86	В	141	46	6B	13		C163	A	221	20	3C	2
C13 C14	A	8 219	78 82	5B 7C	12	C87 C88	ВВ	146 182	38 45	6C 2A	13 13		C164 C165	B	224 224	7 20	3D 5A	2
C14	A B	190	44	3D	3 2	C89	A	144	30	4E	13		C166	Α	317	124	2A	7
C16	В	209	31	3E	2	C90	A	140	30	4F 7B	13 13		C167 C168	A B	212 226	20 9	3A 5A	2
C17 C18	B	190 219	31 77	3D 7C	2 3	C92 C93	B B	147 176	42 47	3B	13		C169	В	230	9	5B	2
C19	В	57	16	3F	15	C94	В	135	52	2F	14		C170	В	228	9	5B	2
C20	В	206	47	3E	2	C95 C96	B B	143 118	59 40	4B 5B	14		C171 C172	B	245 67	82 61	2D 4A	3 16
C21 C22	B B	177 176	36 32	3F 3F	2 2	C97	В	128	39	5B	14		C173	В	277	43	7B	10
C23	Α	102	43	2B	18	C98	A	37	72	2E	21		C174	ВВ	303 276	40 63	8B 8C	10 10
C24 C25	B	275 139	59 59	3B 4C	9	C99 C100	B	102 229	117	4F 8C	16 3		C175 C176	В	302	59	8C	10
C26	A	65	78	1E	16	C101	В	18	59	3A	16		C177	A	248	81	3D	3
C27	A	68	79	1F	16	C102 C103	A B	60 53	65	3F 1F	16  17		C178 C179	ВВ	207 207	120 111	2A 2C	4
C28 C29	A	75 60	76 72	2F 2E	16 16	C104	B	117	128	7B	17		C180	Ā	220	111	2E	4
C30	В	183	25	2D	2	C105	В	135	145	8B	17		C181	В	94	36	2C 4F	18
C31 C32	A	197 207	48 28	4D 2E	2 2	C106 C107	B	136 140	110 126	8B 8B	17 17		C182 C183	A	30 309	51 20	5F	21 8
C33	Â	212	47	4E	2	C108	В	35	142	3F	17		C184	В	247	107	8D	3
C34	В	173	23	3F	2	C109 C110	B	73 105	127 141	4F 2F	17 17		C185 C186	B	248 73	122 109	8D 5F	3 17
C35 C36	A	177 234	43 67	4F 8C	2 3	C111	В	73	118	2F	17		C187	В	161	122	3E	7
C37	В	211	111	2E	4	C112	В	28	7	4F	18		C188	A	14	53	4F	21
C38 C39	B	161 164	75 90	1F 2F	5 5	C113 C114	B B	222 34	31 28	7D 2F	18		C189 C190	A B	15 23	67 61	1F 4A	21 21
C40	В	78	85	3F	5	C115	В	12	28	3F	18		C191	В	45	61	4C	21
C41	В	164	106	2F	5	C116 C117	B	12 37	54	3F 2F	18 18		C192 C193	A	79 75	30 30	8D 8D	21 21
C42 C43	B	123 252	107 42	4F 6B	5 9	C119	В	32	127	2B	12		C194	Â	79	22	8E	21
C44	A	30	76	2F	21	C121	В	266	86	3B	9		C195	A	81	30	8E	21
C45	AB	205 127	80 82	1F	3 6	C122 C123	A	87 90	75 75	7C 7B	16 16		C196 C197	A	101 99	30 30	8A 8A	21 21
C46 C47	В	260	32	6D	9	C124	A	87	83	7B	16		C198	Α	104	22	8B	21
C48	В	144	82	2F	6	C125 C126	A B	91 238	83	7C 8C	16		C199 C200	A	106 20	30 58	8B 3E	21 21
C49 C50	A B	24 292	79 126	2F 2F	21 7	C120	A	245	104	70	3		C201	A	23	58	3F	21
C51	A	167	128	3C	7	C128	A	256	96	7D	3		C202	В	305	80	5F	5
C52 C53	B	334 250	76 23	8B 6D	8 4	C129 C130	A	256 256	76 87	8D 7D	3		C203 C204	A	38 15	67 46	1E 3F	21 21
C54	A	21	78	2E	21	C131	В	200	95	2E	4	ı	C205	В	250	30	6D	4
C55	Α	227	75	2E	4	C132	В	277	109	4B 4B	10		C206 C207	B	86 10	68 75	1F 1E	21
C56 C57	A B	208 334	67 34	1E 8B	8	C133 C134	B	302 52	106 75	2E	21		C207	A	97	21	7C	21
C58	В	334	97	8C	8	C135	В	85	61	6C	15		C209	A	72	20	7C	21
C59	8	334	55	8C	8	C136 C137	B	89 225	68	6C 8D	15	1	C210 D1	B B	105 279	117 66	5E 6C	17 10
C60 C61	B	266 271	91 83	1A 3B	9 9	C138	B	66	49	7C	15	1	D2	В	279	46	3C	10
C62	В	321	121	2F	9	C139	B	247	67	8D	3	ı	D3	В	195	87	2F	4
C63 C64	A B	237	16 126	5B 7D	2 19	C140 C141	B	208	107 82	2F 3F	3 6		D3 D4	B	195	87 115	7A 6C	19
C65	8	194	66	3D	4	C142	В	276	89	4C	10		D4	В	6	115	7D	19
C66	Α	15	73	2F	21	C143	B	301	87	4C 5C	10		D5 D5	B	251 251	119 119	6A 6B	3
C67 C68	A	46	79 78	2E 2E	21	C144 C145	A	234	21	5B	2		D5	В	251	119	7D	3
C69	В	55	114	1F	11	C146	A	187	26	2B	2	1	D6	В	210	103	2A	3
C70	В	87	142	2F	11	C147 C148	A	187 192	21	2B 2B	2		D6 D6	B	210	103	2F 4E	3
C71 C72	ВВ	27	112	3F	11	C149	Α	192	26	2C	2	l	D6	В	210	103	4F	3
C73	В	53	128	4F	11	C150	A	197	21	2C	2	l	D6	В	210	103	6D 1F	3
C74	В	5	104	1F	12	C151	Α	199	25	2C	2	ı	D7	Α	208	87	115	3

ROHDE & SCHWARZ

Benennung: ED RECHNER (FC-II)

Designation: FAST CPU II

Sprache: Lang.: Blatt: Sh.: 1 + Aei: C.I.: 03.03

Typ: Type: SMIQ

Für diese Unterlage behatten wir uns alle Rechte vor. For this document all rights reserved

Datum: 99-05-11

Abteilung: 1GPK

Name: DR *Name:* DR Sachnr.: 1084.8804.01 XY

		:
		:
	1.0	

Nicht-	-ServiceRe	levante Bau	ıteile / Nor	n-Service-R	Relevant C	components

				7		-1 1/	O - 11 -			(D) 1	n 1		al 1/aaa#	Caita			Diana	. Q1 £
el. Kennz.	Seite Side	Х	Υ	Planq. <i>Sqr</i>	Bl. Pg	el. Kennz Part	Seite Side	Х	Y	Planq. <i>Sqr</i>	BI. Pg		el. Kennz. <i>Par</i> t	Side	Χ	Υ	Planq. <i>Sqr</i>	Bl. Pg
Part D7	A	208	87	2A	3	D199	В	121	84	2F	6	ŀ	D570	В	90	132	6B	11
D7	Â	208	87	2B	3	D199	В	121	84	4D	6	1	D621	В	59	10	2B	15
D8	A	208	98	2F	3	D200	В	138	85	1F	6	-	D621	В	59	10	2F	15
D8	Α	208	98	3E	3	D200	В	138	85	4B	6	۱	D621	В	59	10	3E	15
D8	Ą	208	98	3E	3	D213	В	154	85 0.5	2F	6	١	D621	B B	59 59	10 10	3F 5B	15 15
D8	A	208 208	98 98	3F 5D	3	D213 D220	B B	154 174	85 75	6B 1F	6 5	1	D621 D700	В	150	15	2F	13
D8 D9	A	62	96 76	1E	16	D220	В	174	75	2A	5	1	D700	В	150	15	3B	13
D9	Â	62	76	217	16	D220	В	174	75	2B	5	1	D701	В	138	27	3F	13
D9	A	62	76	6B	16	D221	В	174	92	1F	5	1	D701	В	138	27	5B	13
D9	Α	62	76	6B	16	D221	В	174	92	2C	5	ı	D701	В	138	27	5C	13
D9	Α	62	76	6B	16	D221	В	174	92 109	2D 2F	5 5	ŀ	D701 D701	B	138 138	27 27	5C 5D	13 13
D9 D10	A B	62 250	76 101	6C 3A	16 3	D222 D222	B	174 174	109	4C	5		D701	B	121	18	3D	13
D10	В	250	101	8A	3	D222	В	174	109	4D	5	-	D702	В	121	18	3F	13
D11	В	279	113	ЗА	10	D223	В	88	88	3F	5		D702	В	121	18	3B	14
D12	Α	18	76	1F	21	D223	В	88	88	4B	5	١	D703	В	151	28	1F	13
D12	Α	18	76	2F	21	D224	В	102	88	3F	5	1	D703 D704	B B	151 160	28 54	2C 6B	13 13
D12	A	18	76 76	6A 6A	21 21	D224 D226	B	102 125	88 102	4B 3F	5 5		D704 D706	В	132	56 56	2E	14
D12 D12	A	18 18	76	7B	21	D226	В	125	102	6B	5		D706	B	132	56	3C	14
D12	Â	18	76	78	21	D227	В	141	102	4F	5		D810	В	37	132	2B	17
D13	Α	219	120	2F	4	D227	В	141	102	6A	5		D810	В	37	132	3F	17
D13	Α	219	120	3E	4	D300	В	159	125	3C	7		D811	В	55	132	1F	17
D13	A	219	120	3F	4	D301	8	287	132	2F	7	1	D811 D812	B	55 72	132 132	2C 4B	17 17
D13 D13	A	219 219	120 120	3F 4A	4	D301 D310	B	287 324	132 116	6B 4A	5	ı	D812	В	72	132	4F	17
D13	B	217	114	1F	4	D310	В	324	116	1E	9	1	D820	В	75	121	2F	17
D14	В	217	114	3A	4	D310	В	324	116	3D	9	1	D820	В	75	121	3C	17
D15	В	194	69	4D	4	D400	В	268	86	2A	9		D820	В	75	121	3C	17
D16	A	40	76	1E	21	D402	В	256	35	6B	9		D820	В	75	121	3D	17
D16	A	40	76	2E	21	D500 D501	B	23 44	64 64	4A 4C	21 21		D820 D826	B	75 75	121 103	3D 3D	17 17
D16 D16	A	40 40	76 76	6D 6D	21 21	D501	В	7	94	1E	12		D826	В	75	103	3E	17
D16	Â	40	76	7E	21	D550	В	7	94	2C	12	١	D826	В	75	103	3E	17
D16	Α	40	76	7E	21	D560	В	55	118	4F	11	İ	D826	В	75	103	3F	17
D17	В	332	90	4C	8	D560	B	55	118	6C	11	-	D826	В	75	103	4C	17
D17	В	332	90	8B	8	D561	В	29	107 107	2F 5D	11	- 1	D827 D827	A	74 74	119 119	4C 4F	17 17
D18 D18	ВВ	332 332	48 48	6C 8B	8	D561 D561	B	29	107	5D	11	.	D840	B	107	135	1F	17
D19	В	332	111	4A	8	D561	В	29	107	6D	11		D840	В	107	135	3A	17
D19	В	332	111	8C	8	D562	Ā	10	92	2E	12	١	D840	В	107	135	3A	17
D20	В	332	69	6A	8	D562	A	10	92	5E	12		D840	В	107	135	3C	17
D20	В	332	69	8C	8	D562	A	10	92	6C	12		D840	8	107	135	5C	17
D21	В	279	93	6A 4F	10	D562	A B	10	92 119	6C 3E	12 12		D950 D960	B B	107 24	39 9	2B 3F	18 18
D22 D22	ВВ	305 305	71	6C	5	D563 D563	В	43	119	4A	12		D960	В	24	9	7A	18
D23	8	110	120	2A	17	D563	В	43	119	4B	12		D970	В	40	9	4F	18
D23	В	110	120	4E	17	D565	В	7	84	3E	12		D970	В	40	9	7B	18
D40	Α	17	55	3F	21	D565	В	7	84	7B	12		D980	В	23	30	2F	18
D40	Α	17	55	3F	21	D565 D566	B	7 25	84 92	7B 4E	12 12		D980 E2	ВВ	23	30 83	7C 4E	18 2
D40 D40	A	17	55 55	6B 6C	21	D566	A	25	92	6B	12		G3	B	20	49	3A	16
D40	Â	17	55	7C	21	D566	A	25	92	6B	12		G40	В	196	107	2C	4
D40	A	17	55	7Č	21	D566	A	25	92	6C	12		G50	В	196	124	2B	4
D60	В	86	38	4B	15	D566	A	25	92	6C	12		G300	В	326	133	5B	7
D60	В	86	38	7C	15	D567	В	58	108	1F	11		K1	В	333	141	3B	7
D61	В	99	119	3E	16	D567	В	58	108	4B	11	1	K1 L1	B	333 183	141 31	5A 3D	7 2
D61	В	99	119	5D 2B	16	D567 D567	B	58 58	108	4C 4C	11 11		L2	B	203	41	3E	2
D72 D72	A	312	27	2B	8	D567	B	58	108	4C	11		L3	В	170	28	3F	2
D72	Ä	312	27	2C	8	D567	B	58	108	4C	11		L4	В	238	43	7D	4
D72	A	312	27	2C	8	D567	В	58	108	4C	11		L5	В	243	13	5D	4
D72	Α	312	27	4F	8	D568	В	43	107	3F	11		N1	В	179	48	2A	13
D85	В	66	64	4B	16	D568	В	43	107	4D	11		N2 N700	В	265	18	6D	4
D87	В	146	128	6A	17	D568	B	43	107	8B 8C	11 11		N700 N701	B	140	39 15	6C 4B	13 13
D87 D90	8	146 37	128 32	7A 2F	17 18	D568 D568	B B	43 43	107	3C	16		N702	В	126	38	5B	14
D90	B	37	32	4A	18	D568	В	43	107	30	21		N702	В	126	38	5C ·	14
D106	A	208	76	1F	4	D568	В	43	107	3D	21	1	P1	В	329	130	ЗА	7
D106	Α	208	76	2D	4	D569	В	29	119	1E	12	ĺ	P1A	В	329	130	2C	3
D106	Α	208	76	3D	4	D569	В	29	119	2A	12	1	P1B	В	329	130	20	3
D106	A	208	76	4B	4	D569 D570	B	29 90	119	2B 2F	12		P1C P1D	B B	329 329	130 130	2C 2C	3
D106	Α	208	76	4F	4	05/0	0	30	134	AF	1''	L			1023	100		
				-					> 115									

ROHDE & SCHWARZ

Benennung: ED RECHNER (FC-II)

Designation: FAST CPU II

Sprache: Lang.: Blatt: Sh.: 2 + Aei: C.I.: 03.03

Typ: Type: SMIQ

Für diese Unterlage behalten wir uns alte Rechte vor. For this document all rights reserved

Datum: 99-05-11

Abteilung: 1GPK

Name: DR

Sachnr.: 1084.8804.01 XY

	:
	:
	:
	:

alle Rechte vor.	served
ten wir uns alle	ument all rights reserved
behalten	umen

Nicl	nt—	Serv	/ice-	Rele	eval	nte Bai	utei	le/	Non	-Ser	vic	e-	-Relev	var	it Co	mp	oner	ıts
el. Kennz.	Seite	х	Υ	Planq.		el. Kennz	Seite	Х	Y	Plang.	BI.		el. Kennz.	Seite Side	X	Y	Plang. Sgr	BI. Pg
Part P1E	Side B	329	130	Sqr 2C	<i>Pg</i> 3	Part R28	Side B	10	80	Sqr 7A	<i>Pg</i> 12	ŀ	Part R102	B	135	58	4C	14
P1F	В	329	130	2C	3	R29	В	29	115	2B	12		R103	В	147	15	3C	13
P1G	В	329	130 130	2C 2C	3	R30 R31	ВВ	32 39	115	2B 2A	12 12		R104 R105	ВВ	77   57	75 81	4C 5C	16 16
P1H P1J	ВВ	329 329	130	2C	3	R32	В	121	26	3C	13		R106	В	64	61	5C	16
P2	В	194	78	6A	4	R33	В	142	35	5C	13		R107	Α	247	93	5C	3
P3	В	197	78	6A	4	R34	В	137	37	5B	13		R108	B	249 210	93	5C 2B	3
P4 P5	B B	199 204	78 78	6A 6A	4	R35 R36	B	123 125	15 15	2B 2B	14 14		R109 R110	В	212	85	2B	3
P6	В	202	78	6A	4	R37	В	127	15	2B	14		R111	В	215	84	2B	3
P7	В	197	96	7A	4	R38	В	297	114	2B	10	1	R112	В	213	85	2B	3
P8	В	114	115	7C	17	R39	В	280	49	2C	10	H	R113	A	247 249	75   88	2E 2C	3
P9 P10	B	117 114	120 123	6A 6A	17 17	R40 R41	B	95 90	109	4C 4C	16 16		R114 R115	Â	211	128	2D	19
P11	В	117	125	7A	17	R42	В	95	107	4C	16	ı	R116	Α	213	139	2D	19
P12	В	117	123	7D	17	R43	В	298	31	2C	10	ŀ	R117	A	213	129	2D	19
P13	B	114	125	6D 7C	17 17	R44 R45	A	233 144	117	3E 6C	2 17		R118 R119	A	216 221	139	2C 2C	19 19
P14 P15	B	114 222	117	8D	4	R46	Â	137	124	7B	17		R120	À	226	140	2C	19
P16	В	114	120	7C	17	R47	Α	131	134	6A	17		R121	Α	224	129	2C	19
P17	В	117	117	7C	17	R48	B	44	28	4A	18		R122	Α	224	140	2C	19
P18 P19	ВВ	88	109	5D 5B	16 21	R49 R50	B B	299 275	51 65	6C 6C	10 10		R123 R124	A	231 231	128	2B 2B	19
P20	В	55	69	5D	21	R51	Ā	334	123	2A	7		R125	A	229	128	2B	19
P21	В	199	50	4D	2	R52	Α	268	88	3B	9		R126	Α	241	140	2A	19
P22	В	33	58	7B	21	R53 R54	ВВ	68	102	2B 2C	11 11		R127 R128	A	237 234	140	2B 2B	19 19
P23 P24	B	179	47	4E 4F	2 2	R54 R55	В	65	102	2C	11		R129	A	239	140	2B 2A	19
P25	В	33	60	7C	21	R56	В	60	102	2C	11		R130	A	244	140	2A	19
P27	В	77	69	5B	16	R57	В	58	102	2C	11	l	R131	Α	220	66	1D	19
P31	В	270	118	20	3	R58	B	55	102	2C	11 11		R132 R133	A	224 226	54	1D 1D	19 19
P32 P33	ВВ	272 270	116	2C 2C	3	R59 R60	B A	53	102 76	2D 5B	12		R133	Â	231	54	10	19
P46	В	251	37	7C	9	R61	A	10	76	5B	12		R135	Α	229	54	10	19
P49	В	251	34	7C	9	R62	Α	85	73	7C	16		R136	A	228	64	1C	19
P700	ВВ	129	44	5C 4B	14 13	R63 R64	A	92 85	73 85	7B 7B	16 16		R137 R138	A	234	54 54	1C 1C	19 19
P710 P720	В	146	19	3A	13	R65	Â	89	85	7B	16		R139	Â	236	54	1B	19
P730	В	153	43	6C	13	R66	В	135	24	5C	13	H	R140	Α	241	64	1B	19
P900	В	264	23	7D	4	R67	A	132	96	4B	6	lĺ	R141	Α	241	54	1B	19
P901	В	259	23	7C 7D	4 4	R68 R69	A	132	94	4B 4B	6	H	R142 R143	A	246 244	54 54	1B 1B	19 19
P902 P903	ВВ	257 267	23	6D	4	R70	Â	132	89	38	6		R144	Â	249	54	1A	19
P904	В	262	23	6D	4	R71	В	275	92	6A	10		R145	Α	254	54	1A	19
P932	В	154	125	4D	7	R72	В	298	78	6B	10		R146	Α	251	54	1A	19
P942	В	219	74	2D	4	R73	В	297	94 79	5B 2D	10		R147 R148	A	247 245	88 88	2C 2C	3
P943 R1	B	219 77	71	2D 4C	16	R74 R75	A	242	124	4A	3		R149	Â	240	93	2C	3
R2	B	275	112	2A	10	R76	A	20	122	6C	19		R150	Α	243	98	2B	3
R3	В	298	96	2B	10	R77	A	18	122	6C	19		R151	A	228	89	3B	3
R4 R5	ВВ	280	48 48	2C 2D	10	R78 R79	A	15 13	122 122	6C 6C	19 19	Ш	R152 R153	A	238	89 101	3C 3F	3
R6	В	298 298	30	2D	10	R80	Â	11	122	5C	19	Н	R154	A	213	105	4F	3
R7	В	208	75	3B	4	R81	Α	8	122	5C	19	П	R155	Α	233	10	3E	2
R8	Α	132	87	3B	6	R82	A	6	122	5C	19		R156	A	77	32 20	7D 7E	21
R9 R10	A B	132	85 116	3B 1A	6	R83 R84	A B	219	122 121	5C 3B	19 4		R157 R158	В	77 111	143	5C	17
R11	В	297	67	6D	10	R85	A	105	122	2A	17	11	R159	Ā	94	22	7C	21
R12	Α	333	131	2B	7	R86	В	103	122	2A	17	П	R160	Α	211	66	2B	19
R13	В	275	94	6A	10	R87	В	12	54	7D	18		R161	A	218	66	2A 2A	19 19
R14 R15	B	298 83	76 94	6B 4B	10 5	R88 R89	ВВ	219 267	119	3B 1B	9		R162 R163	A	125	119	7C	17
R16	Â	83	91	4B	5	R90	A	58	95	2B	11		R164	Â	140	120	7C	17
R17	В	275	66	6C	10	R91	A	55	95	2B	11		R165	Α	129	120	7C	17
R18	В	299	50	6D	10	R92	A	53	95	2B	11		R166	A	137	120	7C	17
R19 R20	B B	275 298	111	2A 2B	10	R93 R94	A	60 63	95 93	2A 2B	11		R167 R168	B B	219 140	117	2B 5C	13
R21	8	43	128	3A	12	R95	Â	65	93	2B	11	ļ	R169	В	271	52	4B	9
R22	В	48	128	3A	12	R96	A	68	93	2B	11	I	R170	В	135	47	1E	14
R23	В	47	127	3B	12	R97	B	50	114	7B	11		R171	В	119	32	5A 5B	14
R24 R25	B	45 31	127 83	3B 6C	12 12	R98 R99	A	245 242	93	5C 5C	3		R172 R173	B	130 272	41 84	5B 3B	14
R25	A	21	89	4F	12	R100	В	214	9	3B	2		R174	B	219	115	2B	4
R27	В	8	80	7A	12	R101	В	212	9	3B	2	$\prod$	R175	Α	238	86	3C	3
<b>%</b>				l ma	nennur	*			C–II)				prache: ang.:		Blatt: Sh.: ,		Aei: C.I.:	
ROHD	E &	SCH			signati	rasi (			<del></del>				ue		`	3 +	J 03	3.03
Typ: <i>Type:</i> SN	ΛIQ		Datum: Date:	99–0	5-11	Abteilur Dpt:	^{ig:} 10	3PK	N.	ame: D	R		Sa <i>Pa</i>	chnr.: rt No.	108	4.880	04.01	ΧY
- C					<del></del>	1 1 1						_						

:
) 2
-
:
:

	N	İ	C	h	ţ.
١	Kρ	nr	17	Ç	۾

Für diese Unterlage behalten wir uns alle Rechte vor. For Ihis document all rights reserved

Nic	nt–	Serv	vice-	Rel	evar	nte Bai	ute	le/	Non	-Ser	Vic	e–Re	leva	an	t Co	m		
el. Kennz.	ŧ	X	Υ	Planq.	1	el. Kennz	Seite Side	Х	Y	Planq.	Bl.	el. Ker Part	- 1	eite ide	х	i I		
Part R176	Side A	225	123	<i>Sqr</i> 3F	Pg 4	Part R250	A	290	129	Sqr 6B	Pg 7	R324	SI		232	120	:	
R177	Ä	214	20	3A	2	R251	B	89	55	3D	15	R325	Í		232	123	1	
R178	Α	201	54	2B	19	R252	Α	285	4	7E	2	R326	A	١.	230	125	4L	
R179	Α	198	54	2C	19	R253	Α	93	127	5A	11	R327	A		233	6	3E	`L_
R180	A	193	54	2C	19	R254	B	221	123	3B	4	R328	_   A		83   103	32	7E 7A	21
R181 R182	A	196 191	54 54	2C 2D	19 19	R255 R256	B	208 205	71	1D 3D	4	R329 R330			97	32	7A	21
R183	Â	182	116	3D	19	R257	В	209	73	4F	4	R331			102	21	7B	21
R184	A	193	116	3D	19	R258	Ā	197	72	3D	4	R332	<b> </b>		108	32	7B	21
R185	Α	182	119	3D	19	R259	Α	197	70	3D	4	R333	<i>   </i>		73	32	7D	21
R186	В	163	19	2C	13	R260	Α	70	22	7C	21	R334	5		17	82	5C	21
R187	В	159	24	2C	13	R261	A	103	36	1B	18	R335			34	73	4C 4C	21
R188 R189	ВВ	161 230	16   7	2C 5B	13	R262 R263	A	100 256	44 27	1B 7C	18 4	R336 R337	E		21 35	82	5E	21
R190	В	228	7	5A	2	R264	B	212	73	2D	4	R338			56	75	4D	21
R191	В	226	7	5A	2	R265	A	233	75	2E	4	R339	E		35	82	4E	21
R192	В	153	13	3C	13	R266	A	199	76	4D	4	R340	E	3	17	61	5C	21
R193	В	147	17	3C	13	R267	В	205	71	3D	4	R341	E	-	39	61	5E	21
R194	В	157	23	3C	13	R268	A	104	138	5A	11	R342	E		53	61	5D	21
R195	В	152	117	6C	17	R269	ļ Ā	104	136	5A	11	R343	E		50	61	6D	21
R196	ВВ	152 152	115	6C 6C	17 17	R270 R271	A	203 97	93	2B 4C	19 5	R344 R345	A.		31 28	63	5B 6B	21
R197 R198	B	152	1113	6C	17	R271	B	155	106	6B	5 5	R346	Ä		47	111	3C	21
R199	Ā	125	125	8B	17	R273	В	155	104	6B	5	R347	Á		45	112	3D	21
R200	Â	208	54	2B	19	R274	В	136	105	6B	5	R348	E		303	78	6C	5
R201	Α	226	94	2A	3	R275	В	106	101	7D	5	R349	A		94	30	6B	2
R202	Α	206	54	28	19	R276	В	106	105	7D	5	R350	E		106	144	2D	17
R203	A	334	143	3B	7	R277	A	168	93	2D	5	R351	1		223 71	123	4A 6C	4
R204 R205	A	319	125 86	2A 7A	7 2	R278 R279	A	168 116	110	4D 3C	5 6	R352 R353			102	124	2A	17
R206	Â	193	119	3C	19	R280	A	116	88	3C	6	R354	1		105	126	2B	17
R207	l Â	221	54	2A	19	R281	A	116	90	3C	6	R355	E		148	40	7B	13
R208	A	288	133	7C	7	R282	A	116	92	3C	6	R356	E		158	42	4E	13
R209	Α	271	57	ЗА	9	R283	A	116	95	4C	6	R357	A		108	21	7B	21
R210	Α	193	124	3C	19	R284	A	123	95	4C	6	R358	A		99	21	7C	21
R211	A	5	73	5B	12	R285	A	123	93	4C	6	R359			106	21	7C	21
R212 R213	A B	10 137	73 16	5B 4B	12	R286 R287	B	116	83	3C 3F	6 15	R360 R361			84 75	20	7C 7C	21
R214	A	157	50	6B	13	R288	A	250	42	6B	9	R362			81	20	7C	21
R215	Â	170	45	3A	13	R289	Â	236	21	5B	2	R363	l E		162	40	4F	13
R216	В	127	44	5C	14	R290	A	229	21	5B	2	R364			158	40	4E	13
R217	В	127	36	6C	14	R291	A	185	21	2B	2	R365	E		162	42	4F	13
R218	Α	182	129	3C	19	R292	Α	185	26	2B	2	R366	E		178	45	1A	13
R219	Α	20	40	7D	18	R293	A	190	21	2B	2	R591			3	111	5D	19
R220	A	17	31	7D	18	R294	A	190	26	2B	2	R592 R593	6	_	6 7	111	5D 5D	19 19
R221 R222	A	20 339	29 132	6D 4B	18	R295 R296	A	195 199	21	2C 2C	2 2	R594			9	111	5D	19
R223	B	122	36	6C	14	R297	Â	205	20	2C	2	R595	E		13	111	6D	19
R224	A	162	130	3C	7	R298	A	210	20	2D	2	R596	E		14	111	6D	19
R225	Α	163	134	3C	7	R299	В	208	9	2D	2	R597	E		16	111	6D	19
R226	Α	143	41	6B	13	R300	Α	204	10	3A	2	R598	E		18	111	6D	19
R227	B	269	98	2A	9	R301	B	210	9	3A 3B	2	R991 R995			166 182	5	5E 5E	2 2
R228 R229	A B	129 145	125 24	7B 5C	17	R302 R303	ВВ	216 218	9 9	3C	2	U1	É		27	138	8B	6
R230	В	28	126	28	12	R304	A	226	20	5A	2	V2	1		333	126	2A	7
R231	B	273	55	3B	9	R305	В	224	9	3D	2	V4	E		214	75	2D	4
R232	Α	193	126	3C	19	R306	В	255	49	6B	9	V5	A		233	77	2D	4
R233	A	182	126	3C	19	R307	A	205	64	2C	19	V6	1		336	136	5A	7
R234	A	91	127	5A	11	R308	A	199	64	2C	19	V7	1 /		329	127	3A	7
R235	A	195	140	3B 3B	19	R309 R310	ВВ	109 22	117 46	1A 2A	17 16	V8 V9	/	۹. 3	268 332	56 127	3A 3A	9 7
R236 R237	A	193 193	129 140	3B 3B	19 19	R310 R311	A	255	125	4A	19	V9 V10		⇒ 4,	122	36	6C	14
R238	Â	200	83	6B	4	R312	Â	255	123	4A	19	V11		4	339	128	2B	7
R239	A	206	128	3A	19	R313	Â	255	115	4B	19	V12	E		269	94	·2B	9
R240	Α	206	140	3B	19	R314	Α	255	117	4B	19	V13	- 1	4	323	126	2A	7
R241	Α	201	129	3B	19	R315	A	255	120	4A	19	V14	1	4	336	138	3B	7
R242	Α	208	140	3A	19	R316	Α	255	107	4B	19	V15	- 1	4	50	96	3C	12
R243	A	208	128	3A	19	R317	A	255	110	4B	19	V16	Ł	Α Λ	46	96	3C	12
R244 R245	A	200	121 106	1B 2C	4 4	R318 R319	A	255 232	112	4B 4C	19 19	V17 V18		4 3	41 26	96 95	3C	12
R245 R246	B	303	114	3A	10	R320	A	232	110	4C	19	V19		3	26	103	3D	12
R247	A	263	27	7C	4	R321	Â	232	107	4C	19	V20		3	26	99	3D	12
	Â	239	16	5B	2	R322	A	232	112	4C	19	V22	1	Ą	286	9	7E	2
	1	213	116	3A	4	R323	Α	232	117	4C	19	V23		3	229	31	7D	4
R248 R249	Α			I	1 1	1		ــــــا	1	1,			<u> </u>	,	l	1	1	
R248	A		- E	<del>- 1</del>										- 1				
R248 R249	A	.L	ı		nennun	T		•	CII)			Sprache:			Blatt:		Aei:	
R248	<u> </u>	SCH	WAR	l no	nennun signatio			•	C-II)			Sprache: Lang.:	de		Ch.	1 +	01.	3.03
R248 R249	E &	SCH	Datum:	Z De	signatio	·	PU I	1	N	ame: D				ar.:	Sh.: 2		01.	

	- :
	:
	:
	4.

Nic	าt:	Serv	rice-	-Rel	eva	nte E	Baute	ile /	Non	-Ser	Vic	e-	-Rele	van	it Co	mpo	oner	its
el. Kennz.	Seite	v	Υ	Planq.	BI.	el. Ke	nnz Seite	y Y	Y	Planq.	BI.	7	el. Kennz.			Υ	Planq. <i>Sar</i>	Bi.
Part X3	Side B	274	81	Sqr 2E	<i>Pg</i> 3	Part X39	Side B	84	27	Sqr 6C	<i>Pg</i> 2	r	Part X313	В	270	23	3E	Pg 2
X31 X33	B B	173 84	15 78	1A 6A	2 2	X85 X105	B	153 204	24 96	4C 2C	13 4		X314 X501	B B	244 340	35 75	8C 3A	2 20
X34	8 B	105	15 36	8A 7B	2 2	X106 X111		204 99	113 101	2B 6D	4 5	-	X502 X700	ВВ	340 31	23 54	5A 3A	20 16
X35 X36	В	9 68	89	7A	2	X112	В	102	101	7E	5	1	X900	В	179	23	2D	2
X37 X38	B B	68 107	99 27	5C 6B	2 2	X300 X312		329 292	140	4B 7E	7 2	1	X902 X999	B B	111 257	53 133	1A 2A	18 22
												1						
												1						
				:								1				*		
												1						
												1						
							***************************************											
												1						
												١						
															į			
												-						
												1						
												1						
										-		١						
																	į	
												۱						
							***************************************											
																-		
								1				П				1		

Aei: C.I.: 03.03 Benennung: ED RECHNER (FC-II)

Designation: FAST CPU II ROHDE & SCHWARZ Sprache: Lang.: Blatt: Sh.: 5 -Sachnr.: 1084.8804.01 XY Name: DR Datum: 99-05-11 Abteilung: 1GPK Typ: Type: SMIQ

Für diese Unterlage behalten vir uns alle Rechte vor. For this document all rights reserved

	:
	:
	:
	:



**SERVICE INSTRUCTIONS SME** 

Reference/Step-Synthesis

1035.6501.02

1

### Contents

7.	Checking and Repair of the Module	5
7.1	Functional Description	5
7.1.1	Reference Frequencies	5
7.1.1.1	Generation of 100MHz	5
7.1.1.2	REFERENCE-PLL	5
7.1.1.3	Frequency Standards and	
	TUNING TCXO/ROSC	
7.1.1.4	Generation of 600MHz	
7.1.2	Step Synthesis	6
7.1.2.1	600-MHz Divider DIVREF	
7.1.2.2	Mixer and Buffer Amplifier	
7.1.2.3	STEP-PLL CONTROLLER and RAMP CONTROL	
7.1.2.4	STEP-VCO 103 to 117 MHz	
7.1.3	DATA TRANSMISSION and DIAGNOSTICS	
7.2	Measuring Equipment and Accessories	
7.3	Troubleshooting	
7.3.1	Reference Frequencies	
7.3.2	Step Synthesis	
7.4	Checking and Adjustment	
7.4.1	Data Transmission and Power Consumption 1	
7.4.2	100-MHz CRYSTAL VCO	
7.4.3	REFERENCE-PLL for 100-MHz CRYSTAL VCO	
7.4.3.1	Correct Function of the REFERENCE-PLL	
7.4.3.2	Output EXTREF 1	
7.4.3.3	Input OPTREF	
7.4.4	TUNING of TCXO/ROSC	
7.4.4.1 7.4.4.2	Reference Adjustment for D/A Converter 1	
7.4.4.2 7.4.5	External Tuning Voltage	12
7.4.5 7.4.5.1	600-MHz Reference Signal REF600	
7.4.5.1 7.4.5.2	Adjustment of 300-MHz Bandpass 1	13
7.4.5.3	Adjustment of 600-MHz Bandpass 1	13
7.4.5.3 7.4.6		14
7.4.7	LO-STAGE	
7.4.7.1	STEP VCO	
7.4.7.2	Coarse Adjustment of the Tuning Range 1	14
7.4.8	Adjustment of FSTEP Level	L 4
7.4.9	RF and IF STAGES 1	12
7.4.10	Putting the RAMP CONTROL into Operation 1 Locked STEP PLL 1	
7.4.10.1		15
7.4.10.2		l 5 l 6
7.4.10.2	A ===	
7.4.11		16
7.4.12		17 17
7.4.13		i 8
7.5		1 <b>8</b>
7.6		19
7.7		אנ

Part list Coordinates list Circuit diagram Layout diagram

3

			:
J.			
			:
			:
			:

### Functional Description

The Reference/Step-Synthesis Module consists of the two function units Reference Frequencies and Step Synthesis.

The function unit Reference Frequencies generates the required reference frequencies for the remaining synthesis and modulation boards in the instrument.

The function unit Step Synthesis supplies an output signal in the frequency range from 103 to 117MHz, the harmonics of which supply the coarse resolution of the synthesis.

#### 7.1.1 Reference Frequencies

A low-noise 100-MHz crystal oscillator, which is connected to an internal or external frequency standard via a narrow-band PLL, is the nucleus of signal generation. Frequencies of 10, 50, 100 and 600MHz are generated by dividing, direct decoupling and multiplication.

### 7.1.1.1 Generation of 100MHz

The 100-MHz signal is generated in a conventional crystal oscillator (V5) with series resonant circuit. A second stage V35 amplifies the decoupled signal to approx. 17dBm.

The 100-MHz signal is distributed on the module via four gate stages as buffer amplifiers (V60, V70, V80, V90).

#### 7.1.1.2 REFERENCE-PLL

The 100 MHz are divided by dividers down to 1MHz - the reference frequency at the phase detector (D525).

50 MHz are provided for the reference signal REF50 at X72 and 10 MHz for the output of the frequency standard EXTREF at X73.

The reference signal for the phase detector D525 is selected via the multiplexer D520 from IREF (TCXO), EREF (external source) and OREF (ROSC) via the control bits RO and R1.

The subsequent programmable reference divider D510 divides the

input frequencies which may vary between 1 and 16MHz to 1MHz. The output pulses of the digital phase detector pass to a PI controller (N530 with circuitry), which controls the 100-MHz crystal VCO. The control bandwidth of the reference PLL is approx. 10Hz.

#### 7.1.1.3 Frequency Standards and TUNING TCXO/ROSC

The output signal of the TCXO is supplied as TTL signal IREF to the multiplexer D520. The voltage supply to the TCXO is automatically switched off by the gate D535-D via the control bit R1, when the TCXO is not selected as frequency standard.

The frequency of the TCXO is fine-tuned via the D/A converter D555 (resolution: 12 bits) and the subsequent OPs N565 and N562. N562 adds an additional external tuning voltage (input EXTTUNE). OP N550 generates an exact and temperature-stable tuning voltage of 0 to 12 V at the output OPTTUNE for the option ROSC.

E-5

The 10-MHz signals of ROSC and external frequency standards pass via the inputs (OPTREF) and X73 (EXTREF) to the multiplexer D520

as TTL signals OREF and EREF.

Thus, the connector EXTREF (socket X73) adopts a bidirectional function. When the relay K1 is closed, it supplies a 10-MHz signal as frequency standard. When K1 is open, EXTREF functions as input for an external frequency standard (1 to 16 MHz).

### 7.1.1.4 Generation of 600MHz

600 MHz are generated from 100 MHz by means of connecting two differential amplifiers which work as triple amplifier and doubler in series.

Both multiplying stages are followed by steep bandpasses for

selection of the wanted signal.

An inductive power divider (L271) distributes the 600-MHz signal onto the base stage V280 to the step synthesis and the emitter stage V285 to the output REF600.

The output signal REF600 can be decreased by approx. -40dB by means of the pin switch V290/V295 via the control bit SR600 (OP

N290).

### 7.1.2 Step Synthesis

In the Step PLL, a VCO 103 to 117 MHz is down-converted with 100 MHz to 3 to 17 MHz and synchronized to the output signal (3 to 17 MHz) of a programmable divider.

### 7.1.2.1 600-MHz Divider DIVREF

The programmable ECL divider DIVREF (D310) divides the 600-MHz input signal by division factors of 17 to 100 with fractional dividers of min. 1/8.

The resulting output signal of 6 to 34 MHz is divided down to 3 to 17 MHz using the subsequent D flip-flop (D320). It is passed as reference signal SDIV for the Step-PLL via a lowpass to the phase detector N470.

## 7.1.2.2 Mixer and Buffer Amplifier

The relational frequency ZFVCO at the phase detector N470 is generated by down-converting the VCO frequency by 100 MHz. Part of the VCO output signal is routed via the RF stage (N430, N440) to the RF input of the mixer N380.

The LO input of N380 is controlled by the emitter stage V380 by

100 MHz and a level of approx. 16 dBm.

The differential band of 3 to 17 MHz at the IF output of N380 is passed as relational frequency ZFVCO via the IF stage N350 to the phase detector N470. The input and output lowpasses at N350 provide for the required suppression of the 100 MHz LO frequency and higher mixture products.

# 7.1.2.3 STEP-PLL CONTROLLER and RAMP CONTROL

The loop filter following N470 consists of a conventional PI controller (N465 with circuitry) and steep-edge lowpasses at the input and output. The control bandwidth of the loop is 350 kHz. The minimum output voltage VSVCO is limited by V475/V473 to approx. 0.5V.

Sudden frequency changes outside the lock-in range are realized using the analog frequency detector with subsequent ramp control. Analog measurement of the reference frequency (SDIV) and the relational frequency (ZFVCO) is carried out parallel with the phase detector and compared by the OpAmp N460. When a difference of approx. 300 kHz is exceeded, a constant current depending on the sign of the difference is impressed on the integration capacity C473 via the comparator N468-A/B and the analog switch D460-A/B. The voltage ramp thus generated at the output of N465 passes the step VCO to the lock-in range of the PLL and is there switched off again.

Settling must have been terminated after max. 100 µs.

### 7.1.2.4 STEP-VCO 103 to 117 MHz

The step VCO (V408) is a usual FET oscillator designed as drain circuit. V420 amplifies the signal to a specified level and routes it via a resistive power divider to the RF stage in the PLL and to the output stage V435 for the step frequency.

### 7.1.3 DATA TRANSMISSION and DIAGNOSTICS

The module is controlled via the serial interface SERBUS (D610). The diagnostic multiplexers are addressed via strobe 1, which also sets the operating mode of the reference PLL and the tuning voltage for TCXO/ROSC. The time-critical settings for the divider factor of the step PLL and control of the output REF600 are effected via strobe 2.

All output signals of the module as well as various internal signals for functional check and troubleshooting can be called via the diagnostics function.

The control voltages of the two VCOs - VQ100 and VSVCO - are monitored by window comparators (N680-A..D) with subsequent hysteresis loop (D680-A..D). An interrupt is triggered via IRO and IR1 as soon as the loops lock out.

#### 7.2 Measuring Equipment and Accessories

- Spectrum analyzer up to 1.2GHz (e.g., FSA).
- $50-\alpha$  cable with test adaptor for RF test points
- Signal generator 1 to 16MHz, frequency accuracy  $<10^{-6}$  (e.g., SMG).
- Oscilloscope with 100-MHz bandwidth (e.g., BOL).
- Digital storage oscilloscope for 7.4.10.2 (e.g., BOS).
- Multimeter (DC voltage accuracy ±4mV with 4V input voltage = ±0.1%, e.g., UDL44).
- Test voltage source 0 to 20V (e.g., NGT20).
- Service kit (1039.3520).

#### 7.3 Troubleshooting

The subsequent error descriptions give only a rough survey. Localization of errors generally requires signal tracing by means of the circuit diagram. Therefore, the operating points of the transistors and the RF levels have been noted down at the respective test points. The RF test points are DC voltage-free (except for TTL levels) and routed to connectors with ground connection via a  $475-\Omega$  resistor.

Reference PLL does not lock in

Check reference PLL acc. to 7.4.3.1 Check input signals at the phase detector D525 via TPOINTS 203 and 204.

Check the input OPTREF acc. to 7.4.3.3.

Check 100-MHz crystal VCO acc. to 7.4.2.

No output of 10-MHz frequency standard

Check output EXTREF acc. to 7.4.3.2

Fine-tuning of TCXO/ROSC not possible

Make sure that the reference PLL works correctly acc. to 7.4.3.1. Check tuning acc. to 7.4.4.

No signal at REF50

Make sure via TPOINT 209 that the 100-MHz crystal VCO works correctly. Check output REF50 (TPOINT 207) acc. to 7.4.12.

No signal at REF100

Check output REF100 (TPOINT 209) acc. to 7.4.12. Check 100-MHz crystal VCO acc. to 7.4.2.

No signal at REF600

Make sure via TPOINT 209 that the 100-MHz crystal VCO works correctly. Check 300-MHz IF via TPOINT 206 and repeat adjustment acc. to 7.4.5.1, if required. Check output REF600 (TPOINT 210) acc. to 7.4.5.3 repeat adjustment acc. to 7.4.5.2 and 7.4.5.3, if required.

Output signals with extreme phase jitter

All output signals of the module have an extreme phase jitter in the AF range: replace 100-MHz crystal B20.

### 7.3.2 Step Synthesis

Step PLL does not lock in

Check LO signal at the phase detector N470 via TPOINT 213. Check level of the 600-MHz input clock for divider D310 acc. to 7.4.5.3.

Check RF signal at the phase detector N470 via TPOINT 214. Check level at the LO input of N380 acc. to 7.4.6. Check step VCO acc. to 7.4.7.2. Check RF level and IF level acc. to 7.4.8.

Continue troubleshooting as described under *Noise burst on step frequency*.

Noise burst on step frequency

The step frequency can be set, however, reveals a broad noise spectrum.

Check ramp control acc. to 7.4.9.

If no error was found with the above mentioned checks, the comparator N468, the analog switch D460, the phase detector N470 or the OP N465 may be faulty.

Repeat fine adjustment acc. to 7.4.10.1.

Settling problems with the step frequency

Lock-in procedure of the step PLL requires more than 100µs.

Check settling phase of the step PLL acc. to 7.4.10.3. Readjust ramp control acc. to 7.4.10.1.

### 7.4 Checking and Adjustment

The individual test and adjustment procedures mentioned in this Section have to be carried out in the given order for complete adjustment of the module. Test and adjustment points are also mentioned with troubleshooting, Section 7.3.

The board covers which have to be mounted are noted down for each individual point.

RF frequency setting generally have to be carried out in CW mode (MODULATION OFF).

9

### Data Transmission and Power Consumption

• Settings A:

UTILITIES/DIAG/TPOINT/STATE ON

/TEST POINT 202

UTILITIES/REF OSC/SOURCE INT

/ADJUSTMENT STATE ON

/FREQUENCY ADJUSTMENT 2000

• Settings B:

UTILITIES/DIAG/TPOINT/STATE ON

/TEST POINT 213

UTILITIES/REF OSC/SOURCE EXT

/EXT FREQUENCY 7 MHz

▶ Check logic states using the table below:

×-	Subaddress 0			Subaddress 1	
Setting on the SME	D620 (Byte 0) 4 5 6 7 14	D630 (Byte 1) 4 5 6 7 14 12 11	SME setting FREQ	D330 (Byte 0) 4 5 6 7 14 13 12 11	D340 (Byte 1) 4 5 11
A	LHLHL	LHHLHLL	912 MHz	HHHLLLHH	LLH
В	HLHLH	HLLHLHH	877 MHz	LLLHHHLL	HLH
			88 MHz		L H L

The high levels at D620 (Subaddress O/Byte O: Addressing of the

diagnostic points) are not applied statically.

Bytes 3 and 4 of subaddress 0 (tuning voltage TCXO/ROSC) are not accessible via the hardware and are therefore checked with setting A via the diagnostic value indicated:

 $\blacktriangleright$  TPOINT 202 = -6..-4V

### Checking the power consumption:

· The power consumption of the module can be measured by means of soldering out the input inductors L100 to L104 and connecting an ammeter (rated values can be looked up in Section 7.7).

#### 7.4.2 100-MHz CRYSTAL VCO

- Connect test voltage source with a tuning voltage of 7V to X541/X542 (X542=ground).
- Connect voltmeter to P10.
- Connect spectrum analyzer (span 0 to 500 MHz, ref. level 0dBm) to P40/P41 (P41=ground).
- ▶ Adjust voltage at P10 to minimum using L5.
- ▶ Set the voltage at P10 to the same value for both limits of the tuning voltages 1V and 13V such that the change of voltage at P10 becomes minimal across the tuning voltage range 1 to 13V.
- ▶ Absolute voltage at P10 across 1 to  $13\overline{V}$  tuning range = 10.2 to 11.2VVoltage change at P10 across 1 to 13V tuning range < 0.2V

- ▶ Vary the tuning voltage between -1V and +1V: The 100-MHz oscillation must not stop!
- Set tuning voltage to 7V
- ▶ Adjust the 100-MHz signal at P40 to -3dBm+/-0.3dBm.
- ▶ Check, if level at X71 (REF100) is 4 to 6dBm.
- Plug jumper onto X540-X541 after removing the test-voltage source.

#### 7.4.3 REFERENCE-PLL for 100-MHz CRYSTAL VCO

#### 7.4.3.1 Correct Function of the REFERENCE-PLL

• Settings:

UTILITIES/REF OSC/SOURCE INT

/ADJUSTMENT STATE ON /FREQUENCY ADJUSTMENT 2000

- ► Check TPOINT 201 = 2 to 12V
- Connect signal generator with 10MHz/-13dBm to REF (rear panel).
- Settings:

UTILITIES/REF OSC/SOURCE EXT
/EXT FREQUENCY 10 MHz

 Vary the frequency of the signal generator according to the table below and check the control voltage via TPOINT 201:

Frequency in MHz	Rated value TPOINT 201	Error message on SME
10.000000	5 to 10V	_
10.000100 9.999900	<12V >2V	
10.000400 9.999600	>12.5V <-12.5V	Reference Frequency 100MHz VCXO unlocked Reference Frequency 100MHz VCXO unlocked

#### 7.4.3.2 Output EXTREF

- Connect a spectrum analyzer (span 0 to 100 MHz, ref. level 10dBm) to REF (rear panel).
- Settings:

UTILITIES/REF OSC/SOURCE INT

► Level of the 10-MHz frequency standard = 6..10dBm Harmonics < -15dBc

## 7.4.3.3 Input OPTREF

This test instruction can only be executed, if the oven-controlled reference oscillator ROSC (option SM-B1) is fitted to the instrument.

• Settings:

UTILITIES/REF OSC/SOURCE INT ADJUSTMENT STATE OFF

► Check TPOINT 201 = 2 to 12V

# 7.4.4 TUNING of TCXO/ROSC

# 7.4.4.1 Reference Adjustment for D/A Converter

- Connect a highly precise voltmeter to the output OPTTUNE. (motherboard connection: X70 A10). Make sure that there is good ground connection between the voltmeter and the module.
- Settings:

UTILITIES/DIAG/TPOINT/STATE ON

/TEST POINT 202

UTILITIES/REF OSC/SOURCE INT

/ADJUSTMENT STATE ON /FREQUENCY ADJUSTMENT 1333

▶ Adjust V_{OPTUNE} to 4.000V+/-4mV.

▶ Check voltages according to the table below:

Test point	Function of the signal	Rated value for FREQUENCY ADJUSTMENT 1333	Rated value for FREQUENCY ADJUSTMENT 2666
TPOINT 202	Output voltage DAC	-3.33V±0.3V	-6.66V±0.6V
X70 A10	Tuning voltage for ROSC	4V±0.004V	8V±0.010V
P580	Tuning voltage for TCXO	1.6V±0.1V	3.3V±0.2V

# 7.4.4.2 External Tuning Voltage

- Connect test-voltage source to the input TUNE (rear panel).
- · Connect voltmeter to P580.
- Settings:

UTILITIES/REF OSC/SOURCE INT

/ADJUSTMENT STATE ON /FREQUENCY ADJUSTMENT 2000

- Set voltages of -10V, 0V and +10V:
- ▶ Check voltage at P580 acc. to the table below:

Test point	Function of the signal	External TUNE voltage	Rated value
P580	Tuning voltage for TCXO	-10V 0V	2.18 to 2.30V 2.40 to 2.50V
		+10V	2.60 to 2.72V

The cover on the solder side must be fitted. Refer to 7.5!

#### 7.4.5.1 Adjustment of 300-MHz Bandpass

• Settings:

# UTILITIES/DIAG/TPOINT/STATE ON /TEST POINT 206

- ▶ Adjust level at TPOINT 206 (ZF300) to maximum via
  - (1.) L230 (brass core),
  - (2.) L231 (ferrite core),
  - (3.) L234 (ferrite core),
  - (4.) L235 (brass core).

One adjustment per trimmer carried out in the above order is sufficient.

The cores must not be winded out of the coils and get lost (caution with turning counterclockwise!)

▶ Level at TPOINT 206 = 0.1V to 0.4V

## 7.4.5.2 Adjustment of 600-MHz Bandpass

- Connect spectrum analyzer (span 0 to 1GHz, ref. level 10dBm) at output socket REF600.
- Settings:

# FREQ 90 MHz UTILITIES/DIAG/TPOINT/STATE ON /TEST POINT 210

- ▶ Adjust level at TPOINT 210 (REF600) to maximum via
  - (1.) L265 (brass core),
  - (2.) L266 (brass core),
  - (3.) L267 (brass core),
  - (4.) L268 (brass core).

One adjustment per trimmer carried out in the above order is sufficient.

The cores must not be winded out of the coils and get lost (caution with turning counterclockwise!)

#### 7.4.5.3 Adjustment of Level REF600

- Settings and test instruments as under 7.4.5.2.
- ▶ Adjust level to 11dBm+/-0.2dBm using R254. (Module Revision 1 to 3)
- ▶ Adjust level to 14dBm+/-0.2dBm using R254. (Rev. from 4 up)
- ▶ Check level according to the table below:

Test point	Function of the signal	Rated value	Remark
X77 REF600	600-MHz reference frequency 600 MHz switched off	11dBm±0.2dB 14dBm±0.2dB <-25dBm	Rev. 1 to 3 Rev. from 4 up Setting: FREQ < 93.75MHz Setting: FREQ >= 93.75MHz
TPOINT 210	600 MHz via diagnostics	0.2V to 0.6V	Setting: FREQ < 93.75MHz
P255	600-MHz clock for step divider	>-21dBm >-24dBm	Rev. 1 to 4 Rev. from 5 up Measure using a 50-Ω cable

#### 7.4.6 LO-STAGE

- Connect a spectrum analyzer (span 90 to 110MHz, ref.level 0dBm) to P390/P391 (P391=ground, submodule K).
- $\blacktriangleright$  Level at P390 = -10 to -6dBm

#### 7.4.7 STEP VCO

#### 7.4.7.1 Coarse Adjustment of the Tuning Range

- Connect a spectrum analyzer (span 90 to 130MHz, ref. level 10dBm) to the output socket X75 FSTEP.
- Connect test-voltage source to X406/X407 (X407=ground).
- Set tuning voltage to 18V.
- Adjust step frequency to 116 to 118MHz using L406.
- Set tuning voltage to 2V.
- ▶ Adjust step frequency to 102 to 103.5MHz using C400.
- ▶ Repeat adjustment using L406 and C400 until the frequencies mentioned above are adhered to.

# 7.4.7.2 Adjustment of FSTEP Level

- Set VCO frequency to 110MHz.
- ▶ Adjust level to 6dBm+/-0.4dBm using R412.
- ▶ Sweep the frequency from 103 to 117MHz: Permitted level range at X75 FSTEP: 5.2dBm to 6.8dBm Level deviation: < 0.8dB Harmonics: < -20dBc</p>

025 6501 02

#### 7.4.8 RF and IF STAGES

- Test-voltage source remains at X406. Set frequency of the step VCO to 110MHz.
- Connect a spectrum analyzer (span 100 to 120MHz, ref. level 0dBm) to P460/P461.
- ▶ Adjust level to -26dBm+/-0.2dBm using R441.
- ▶ Check level conditions in the above mentioned frequency range:

Test point	Function of the Signal	Rated value	Tuning voltage at X40
P460	RF signal 110MHz RF signal 103 to 117MHz	-26dBm±0.2dBm -27 to -24.5dBm, Variation <1.2dBm	approx. 10V approx. 2 to 18V
P360 (TPOINT 214)	IF signal 3 to 17MHz	-23dBm to -19dBm, Variation <2dBm	approx. 2 to 18V

#### 7.4.9 Putting the RAMP CONTROL into Operation

- Test voltage source remains at X406. Set voltage to 16V.
- Connect voltmeter to P466/465 (P465=ground).
- Plug jumper onto X461-X462.
- ▶ Adjust voltage at P466 to OV+/-5mV using R469.
- ▶ Sweep voltage at X406 from 2 to 18V: Voltage at P466 (TPOINT 208) = -25mV to 25mV
- Subsequently, plug jumper onto X460-X461 and X405-X406.

#### 7.4.10 Locked STEP PLL

• Settings:

The cover on the solder side must be fitted. Refer to 7.5!

#### 7.4.10.1 Fine Adjustment of the RAMP CONTROL

- Connect voltmeter to P466/465 (P465=ground).

/TEST POINT 208

E-5

FREQ 820 MHz (FSTEP 115MHz)

UTILITIES/DIAG/TPOINT/STATE ON

(1333)

▶ Adjust voltage at P466 to OV+/-4mV using R469.

• Settings: FREQ 943 MHz (FSTEP 103.06MHz)
FREQ 895 MHz (FSTEP 110.00MHz)
FREQ 836 MHz (FSTEP 117.27MHz)

▶ The following applies for all three settings: Voltage at P466 (TPOINT 208) = -10mV to 10mV

# 7.4.10.2 Transient behaviour of the STEP PLL


- Connect digital storage oscilloscope to X406/X407 (X407=ground).
- Settings:

SWEEP/FREQ/START FREQ 836MHz (FSTEP 117.27MHz)
/STOP FREQ 943MHZ (FSTEP 103.06MHz)

/STEP LIN 107MHZ /DWELL 20ms

/SPACING LIN /MODE AUTO

▶ The quality of the oscillogram should be as follows:

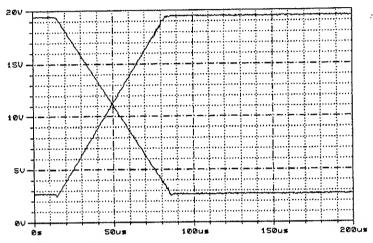

x-Axis: Time

y-Axis: Tuning Voltage Step VC0

The voltage characteristic of both frequency changes (103 to 117MHz, 117 to 103MHz) is simultaneously shown in the oscillogram. Since the board cover is not fitted, the level of the tuning voltage is slightly higher than the level in the adjusted state with cover fitted (103MHz/2V, 117MHz/18V).

▶ Subsequent to switching off the ramp, all settling procedures must have been finished after max. 100µs from start of the ramp.

# 7.4.10.3 Fine Adjustment of the VCO Tuning Range

Both board covers must be fitted. Refer to 7.5!

- Settings:
- UTILITIES/DIAG/TPOINT/STATE ON /TEST POINT 212
- Setting: FREQ 834 MHz (FSTEP 117.02MHz)
- ▶ Set V(TPOINT 212) to 18V±0.2V using L406.
- Setting: FREQ 1149 MHz (FSTEP 103.05MHz)
- ▶ Set V(TPOINT 212) to 2V±0.2V using C400.
- ▶ Repeat adjustment using L406 and C400 until the voltages required are obtained.

#### 7.4.11

#### Spurious Signals of Mixer on FSTEP

Both board covers must be fitted. Refer to 7.5!

- Connect a spectrum analyzer to output FSTEP (X75).
- Connect reference output of the analyzer to REF.
- Settings:

# UTILITIES/REF OSC/SOURCE EXT /EXT FREQUENCY 10 MHz

• Set the following RF frequencies and measure the suppression of spurious signals at the given carrier offsets.

Settings	Step divider	Step frequency (Carrier frequency)	Carrier offset of mixer spuriae	Absolute frequency of the right mixer spuriae
FREQ 916 MHz	23.875	112.5654 MHz	523.56 kHz	113.0890 MHz
FREQ 928.8 MHz	21.125	114.2012 MHz	591.72 kHz	114.7929 MHz
FREQ 930.4 MHz	20.875	114.3713 MHz	598.80 kHz	114.9701 MHz
FREQ 833 MHz	17.875	116.7832 MHz	699.30 kHz	117.4825 MHz

▶ Suppression of spurious signals with the above mentioned carrier frequencies and frequency offsets: < -99dBc.

The suppression of spurious signals in the range of -100dBc can be measured by calibrating the analyzer to the carrier level, then overloading it by 10 dB and varying it by the frequency offset of the spurious signal. The span should be 10kHz. The noise level must be far below 100dBc (measure in AVERAGE mode, if required).

# 7.4.12 Signal Quality REF600, REF100, REF50

Both board covers must be fitted. Refer to 7.5!

▶ Check harmonics and secondary lines according to the table below:

Test point	Spectral Data	Rated value	Remark
X77 REF600	1st harmonic with 1.2GHz 100-MHz secondary lines Interference by divider spectrum Carrier offset 3.0457MHz	<-40dBc <-85dBc <-85dBc	Measuring range: 0 to 1GHz Setting: FREQ 77.5MHz (FSTEP 103.0457MHz) Measuring range: 595 to 605MHz
X71 REF100	Signal level 100MHz Harmonics Suppression of spurious signals	4 to 6d8m <-25dBc <-85dBc	particularly with 1, 10 and 50MHz offset
X72 REF50	Signal level 50MHz Harmonics Suppression of spurious signals	911.5dBm <-25dBc <-85dBc	particularly with 1 and 10 MHz offset

#### 7.4.13 Diagnostic Points

The underlined values listed in the table are corrected automatically by means of the measured value of the diagnostic point 200.

TPOINT	Description	Rated value	Remark
200	10-kOhm reference impedance	-20mV to 20mV	for offset compensation
201	Control voltage of 100-MHz crystal VCO	2 to 12V	
202	Output of D/A converter for tuning-voltage	<u>-10.1 to 0.01V</u>	Value = ADJUSTMENT * (-2.5mV) V(OPTTUNE) = value * (-1.2) U(P580) = value * (-0.5)
203	1-MHz reference signal for reference PLL	1.8 to 5.2V	,
204	1-MHz relational signal for reference PLL	2.0 to 3.0V	
205	Input/output of Frequency standard (EXTREF)	0.8 to 3.5	
206	300-MHz intermediate freq. in the multiplier	0.1 to 0.4V	
207	50-MHz output REF50	0.3 to 1.3V	Terminate by $50\Omega$ .
208	Output voltage of frequency detector	-40mV to 40mV	Step PLL locked in
209	100-MHz output REF100	0.18 to 0.60V	Terminate by $50\Omega$ .
210	600-MHz output REF600	0.2 to 0.6V	RF frequency < 93.75MHz
	•	-20mV to 20mV	Terminate by 50Ω. RF frequency >= 93.75MHz
211	24V-supply voltage	22.5 to 25.5V	
212	Control voltage of step VCO	1 to 20V	
213	Output signal step divider	0.4 to 2.5V	
214	Down-converted VCO signal 3 to 17MHz	0.10 to 0.25V	
215	Output step frequency FSTEP 103 to 117MHz	0.2 to 0.6V	Terminate by 50Ω.

# 7.5 Removal and Assembly

Subsequent to opening the instrument, unlocking the boards and disconnecting the RF connections, the board can be taken out of its slot. Make sure, when removing the screening cover that the cover on the solder side is unscrewed/removed first. With assembly, the screening cover on the component side is the first to be fixed by screws. If this order is not adhered to, the threaded bolts on the board shrink and thus damage the threads of the screws on the component side.

# 7.6 Digital Interface

# Board address: 20

# Subaddress 0 (Strobe 1): static data

Byte	Bit	Latch/Pin	Name	Function
3	7 to 4 3 to 0		- TV11 to TV8	- Tuning voltage for TCXO/ROSC (MSB)
2	7 to 0	D555	TV7 to TV0	Tuning voltage for TCXO/ROSC (LSB)
1	7 6 5 4 3 2 1	D630 11 12 13 14 7 6 5	R1 R0 - ENRO NR3 NR2 NR1 NRO	Selection of 0 1 1 1 frequency standard: 0 TCXO 0 ROSC 1 EXTREF  Socket EXTREF 0 = input (1 to 16MHz) 1 = output (10MHz)  Divider for frequency standard (MSB) in two's complement (1 to 16)  -"- (LSB)
0	7 6 5 4 3 2 1	D620 11 12 13 14 7 6 5 4	- - END1 END0 DA2 DA1 DA0	Selection 0 1 Diagnostic multiplexer: 1 MUX 1 (D650) 0 MUX 2 (D660) Addressing of the diagnostic point (MSB) -" (LSB)

# Subaddress 1 (Strobe 2): dynamic data

Byte	Bit	Latch/Pin	Name 5	Function	
1	7	D340 11	SR600	Control bit for REF600: <b>0</b> = REF600 on <b>1</b> = REF600 of	f
	6	12	-	-	
	5	13	_	-	
	4	14	_	-	
	3	7	SP6	Main divider DIVREF (D310) Bit value in divider factors	28
	2	6	SP5	_"_	27
	1	5	SP4	_H_	26
	0	4	SP3	-"-	25
0	7	D330 11	SP2		24
	6	12	SP1	_#_	23
	5	13	SP0	_*_	22
	4	14	SA1	Auxiliary divider DIVREF (D310)	21
	3	7	SAO		20
ŀ	2	6	SF2	Fractional divider DIVREF (D310)	2-1
	1	5	SF1	_#_	2-2
	0	4	SF0	π	2-3

Pin	Name	Input/Output	Origin/Des	tination	Specified range   Signal description	
X70.A1	EXTTUNE	Input	Rear panel	TUNE	-10 to 10V	external tuning voltage for TCXO (steepness typ. 0.1ppm/V)
X70.A10	OPTTUNE	Output	A71,ROSC	X22.16	012V	Tuning voltage for ROSC
X70.A12	SERBUS-CLK	Input	A3,CPU	X31.40	HCMOS level	Serbus clock
X70.A14 X70.A15	SERBUS-DAT	bidir.	A3,CPU	X31.39	HCMOS level	Serbus data
X70.A16	SERBUS-SYNC	Input	A3,CPU	X31.37	HCMOS level	Serbus synchronization
X70.A17	SERBUS-INT	Output	A3,CPU	X31.38	HCMOS level	Serbus interrupt
X70.A18	RES-P	Input	A3,CPU	X31.28	HCMOS level	Serbus reset
X70.A19	DIAG-5V	Output	A3,CPU	X31,44	-5V to 5V	Diagnostics
X70.A22	VA24-P	Input	A2,POWS1		23.0 to 25.0V 4 to 20mA	Supply voltage, analog
X70.A24	VA15-P	Input	A2,POWS1		14.85V to 15.75V 370 to 450mA	Supply voltage, analog
X70.A26	VA7.5-P	Input	A2,POWS1		7.45V to 7.95V 600 to 750mA	Supply voltage, analog
X70.A28	VD5-P	Input	A2,POWS1		5.15V to 5.25V 3 to 14mA	Supply voltage, digital
X70.A30	VA15-N	Input	A2,POWS1		-15.75V to -14.85V 120 to 250mA	Supply voltage, analog
X71	REF100	Output	A6,FMOD	X65	5±1dBm	100-MHz reference
X72	REF50	Output	A8,DSYN	X81	9±1dBm	50-MHz system reference (connected through)
X73	EXTREF	bidir.	Rear pane	1_REF	7±1dBm 0.1 to 2V _{rms} (-13 to 13dBm)	Output: Frequency standard 10MHz Input: ext. Fstd. 1 to 16MHz (Input impedance 200 Ohms)
X74	OPTREF	Input	A71,ROSC	X711	0 to 13dBm	Frequency standard ROSC 10MHz
X75	FSTEP	Output	A9,SUM	X97	6±1dBm	Step frequency 103 to 117MHz
X77	REF600	Output	A10,0PU1	X105	10±1dBm 13±1.2dBm	(Rev. 1 to 3) 600-MHz reference (Rev. from 4 up)



Schaltteillisten numerisch geordnet

Part lists in numerical order

Listes des pièces détachées par numéros de référence

Ē	
behalte	VO
	÷
Unterlage	Rechte
ē	
5	=
GIBSB	Uns
	*
Ē	

	Comp. No.	Designation	1		Stock No.	Manufacturer	D	esignation	cont	ained in
Ì	B20	EQ 100,000MHZ5.0			1036.4225.00	KVG	EQC	0803.0680 SELEKT.		
		CRYSTAL 100,000								
	C1	CC 10NF+-10%50V CERAMIC CHIP CAP		cc c	0099.8521.00	PHILIPS_CO	223	88 581 16627		
	C3	CC 100NF+-10%50V	X7R 1206	cc c	0007.5237.00	PHILIPS_CO	223	88 581 55649		
ı	C4	CERAMIC CHIP CAP. CC 100NF+-10%50V	X7R 1206	cc c	0007.5237.00	PHILIPS CO	223	88 581 55649		
	C7	CERAMIC CHIP CAP CC 15PF+-1% 50V	ACITOR	1				#42-6COG 150F50ZPT		
ı		CERAMIC CHIP CAP	ACITOR							
	C8	CC 1NF+-1% 50V N SMD CERAMIC CAPA	PO 1206 CITOR	CC C	0007.7398.00	AVX	120	06 5A 102 FATOOJ		
1	C10	CC 10NF+-10%50V CERAMIC CHIP CAP		CC C	0099.8521.00	PHILIPS_CO	223	88 581 16627		
۱	C15	CC 10NF+-10%50V CERAMIC CHIP CAP	X7R 1206	cc c	0099.8521.00	PHILIPS_CO	223	8 581 16627		
١	C20	CC 22PF+-1%50V N	PO 1206	cc o	0099.8396.00	MURATA	GRN	142-6COG 220F50ZPT		
۱	C21	CERAMIC CHIP CAPA CC 180PF+-1%50V I		cc c	099.8844.00	MURATA	GRM	142-6COG 181F50ZPT		
	C22	CHIP CAPACITOR CC 120PF+-1%50V I	NPO 1206					142-6COG 121F50ZPT		
	C23	CERAMIC CHIP CAP CC 390PF+-1%50V	ACITOR							
		CERAMIC CHIP CAP	ACITOR					06 5 A 391 F 3		
	C30	CC 100NF+-10%50V CERAMIC CHIP CAP			007.5237.00			]		
	C32	CC 470PF+-1%50V PCERAMIC CHIP CAPA		CC 0	099.8515.00	AVX	120	6 5 A 471 F 3		
	C33	CC 100NF+-10%50V CERAMIC CHIP CAPA	X7R 1206	cc o	007.5237.00	PHILIPS_CO	223	8 581 55649		
	C38	CC 180PF+-1%50V N		cc o	099.8844.00	MURATA	GRM	42-6COG 181F50ZPT		
۱	C42	CHIP CAPACITOR CC 12PF+-1% 50V	NPO 1206	cc o	099.8744.00	MURATA	GRM	42-6COG 120F50ZPT		
	C51	CERAMIC CHIP CAPA CC 100NF+-10%50V	ACITOR X7R 1206		007.5237.00					
1	C52	CERAMIC CHIP CAPA CC 100NF+-10%50V	ACITOR		007.5237.00					
١	C54	CERAMIC CHIP CAPA	ACITOR	1						
ı	1	CC 18PF+-1% 50VN SMD-CERAMIC-CAPAC	CITOR	1				39C0G***F50ZPT		
	C55	CC 68PF+-1% 50\ SMD-CERAMIC-CAPA(	/NPO 0603 CITOR	cc o	009.9746.00	MURATA	GRM	39COG***F50ZPT		
۱	C56	CC 10NF+-10% 50\ SMD-CERAMIC-CAPAC		cc o	009.4844.00	MURATA	GRM	39X7R***K5C500PT*		
	C65	CC 100NF+-10%50V CERAMIC CHIP CAPA	X7R 1206	cc o	007.5237.00	PHILIPS_CO	223	8 581 55649		
1	C67	CC 18PF+-1% 50VN	1PO 0603	cc o	048.3622.00	MURATA	GRM:	39C0G***F50ZPT		
ı	C68		/NPO 0603	cc o	009.9746.00	MURATA	GRM:	39COG***F50ZPT		
Ī	C69	SMD-CERAMIC-CAPAC CC 1NF+-1% 50V NF	CITOR PO 1206	cc o	007.7398.00			6 5A 102 FATOOJ		
ı	C70	SMD CERAMIC CAPAC CC 10NF+-10%50V X	CITOR		099.8521.00					
	C71	CERAMIC CHIP CAPA CC 10PF+-0,25 50V	CITOR							
		CERAMIC CHIP CAPA	CITOR		099.8480.00			42-6COG 100 C50PT		İ
	C72	CC 10NF+-10% 50V SMD-CERAMIC-CAPAC	CITOR		009.4844.00			39X7R***K5C500PT*		
	C75	CC 100NF+-10%50V CERAMIC CHIP CAPA		€C O	007.5237.00	PHILIPS_CO	2238	8 581 55649		
1	C77	CC 18PF+-1% 50VN SMD-CERAMIC-CAPAC	IPO 0603	CC O	048.3622.00	MURATA	GRM	39C0G***F50ZPT		
	C78	CC 39PF+-1% 50V	NPO 0603	CC O	009.9730.00	MURATA	GRM	39COG***F50ZPT		
	C79	SMD-CERAMIC-CAPAC CC 100NF+-10%50V		cc o	007.5237.00	PHILIPS CO	2238	8 581 55649		
ı	C82	CERAMIC CHIP CAPA CC 10NF+-10% 50V			009.4844.00			39X7R***K5C500PT*		
	C85	SMD-CERAMIC-CAPAC CC 100NF+-10%50V	ITOR							
	i	CERAMIC CHIP CAPA	CITOR		007.5237.00					
	C87	CC 18PF+-1% 50VN SMD-CERAMIC-CAPAC			048.3622.00			39COG***F5OZPT		
	C88	CC 68PF+-1% 50V SMD-CERAMIC-CAPAC	NPO 0603	CC O	009.9746.00	MURATA	GRM	39COG***F50ZPT		
	C92	CC 10NF+-10% 50V SMD-CERAMIC-CAPAC	HDK 0603	CC O	009.4844.00	MURATA	GRM	39X7R***K5C500PT*		
		UND CEINAME CTCAPAC	.1 01/							
1	MEZ1	887 3PLU ÄI	Datum		Schalttellli			Sachnummer		Blatt-Nr.
-			Date		Parts list	tor		Stock No.		Page

1035.6501.01 SA

1+

ROHDE&SCHWARZ

48 07.10.99

48 07.10.99

1035.6501.01 SA

2+

"	
20	
Ω	
∍	
۲.	
8	
3	
≍	
₹.	
ū	

ž.

alle Rechte

Stock No.

Manufacturer

Designation

contained in

Für diese Unterlage behalten wir uns alle Rechte vor.

35.0026-0893

Comp. No.

Designation

	Comp. No.	panannung Designation				Stock		Manufecturer	Des	ignetion		contair	ned In
	C311	CC 10NF+-10%50V	X71		СС	0099.	8521.00	PHILIPS_CO	2238	581	16627		
	C312	CERAMIC CHIP CAP CC 10PF+-0,25 50	VNF	PO 1206 0	СС	0099.	8480.00	MURATA	GRM4	2-6C00	G 100 C50PT		
	C313	CERAMIC CHIP CAP	X7F	₹ 1206   (	CC	0099.	8521.00	PHILIPS_CO	2238	581	16627		
	C315	CERAMIC CHIP CAP	/ NF	0 0603	CC	1051.	4680.00	MURATA	GRM3	9C0G*	**F50ZPT		
	C319	MD-CERAMIC-CAPAC CC 100PF+-1% 50	ÖVNE	0 0603	СС	0009.	4680.00	MURATA	GRM3	9C0G*	**F50ZPT		
	C320	SMD-CERAMIC-CAPA CC 10NF+-10% 50	)VHI	OK 0603 🖟	СС	0009.	4844.00	MURATA	GRM3	9X7R*	**K5C500PT*		
	C321	SMD-CERAMIC-CAPA CC 1,ONF+-10%50V	/ HI	DK 0603	СС	0009.	4938.00	MURATA	GRM3	9X7R*	**K5C500PT*		
	C322	SMD-CERAMIC-CAPA CC 100NF+-10%16V	/ HI	DK 0603 K	СС	1097.	6292.00	AVX	CM10	5 X7R	104K 16AT		
	C323	CERAMIC CHIP CAP CC 100NF+-10%50V	/ X'	7R 1206	СС	0007.	5237.00	PHILIPS_CO	2238	581	55649		
	C324	CERAMIC CHIP CAP CC 10P+-0,1PF50V	/ N	PO 0603	СС	0009.	4567.00	MURATA	GRM3	9C0G*	**B50ZPT		
	C325	SMD-CERAMIC-CAPA CC 100NF+-10%16V	/ H	DK 0603	СС	1097.	6292.00	AVX	CM10	5 X7R	104K 16AT		
	C326	CERAMIC CHIP CAP CC 82PF+-1% 50		ITOR PO 0603	СС	1097.	6363.00	MURATA	GRM3	9CDG*	**F50ZPT		
	C327	SMD-CERAMIC-CAPA CE 22UF+-20%35V		TOR ND SMD	CE	0009.	6253.00	PANASONIC	EEV	HB 1V	220P		
	C328	SMD ELECTROLYTIC CC 100NF+-10%50V		APACIT. 7R 1206	СС	0007.	5237.00	PHILIPS_CO	2238	581	55649		
	331 C350		OVN	PO 0603	СС	1093.	6417.00	MURATA	GRM3	9C0G*	**F50ZPT		j
	C351	SMD CERAMIK CAPA CC 8,2PFO,1PF50V		1	СС	0009.	4550.00	MURATA	GRM3	9C0G*	**B50ZPT		
	C352	SMD-CERAMIC-CAPA	CI.	TOR	СС	0009.	9746.00	MURATA	GRM3	9C0G*	**F50ZPT		
	C353	SMD-CERAMIC-CAPA CC 68PF+-1% 50			СС	0009.	9746.00	MURATA	GRM3	9C0G*	**F50ZPT		
	C354	SMD-CERAMIC-CAPA CC 3,3NF+-10%50V			СС	0099.	8909.00	PHILIPS_CO	2238	581	16621		
vor.	C355	CERAMIC CHIP CAP CC 100NF+-10%50V	V X	ITOR 7R 1206				PHILIPS_CO					
	C356	CERAMIC CHIP CAP CC 100NF+-10%50V	PAC	ITOR				PHILIPS_CO					
le Rechte	C357	CERAMIC CHIP CAR	PAC	ITOR				MURATA			**F50ZPT		
uns alla	C358	SMD-CERAMIC-CAPA CC 8,2PFO,1PF50\	4CI	TOR	СС	0009.	.4550.00	MURATA	GRM3	9C0G*	**B50ZPT		
×	C359	SMD-CERAMIC-CAPA CC 1,0NF+-10%50\	ACI	TOR	СС	0009.	. 4938 . 00	MURATA	GRM3	9X7R*	**K5C500PT*		
	C360	SMD-CERAMIC-CAPA CC 100PF+-1% 50	ACI	TOR			.4680.00				**F50ZPT		1
	C361	SMD-CERAMIC-CAPA CC 10PF+-0,25 50	ACI	TOR			.8480.00		GRM4	2-6C0	G 100 C50PT		
	C362	CERAMIC CHIP CAP	PAC	ITOR			.7398.00				O2 FATOOJ		
	C363	SMD CERAMIC CAPA CC 10NF+-10%50V	ACI	TOR				PHILIPS_CO					
	C366	CERAMIC CHIP CAR	PAC	ITOR			.8227.00				**F50ZPT		
	C367	SMD-CERAMIC-CAPA	ACI	TOR			.6305.00				**F50ZPT		
	C368	SMD-CERAMIC-CAPA	AÇI	TOR			.4680.00				**F50ZPT		
	C380	SMD-CERAMIC-CAPA	ACI	TOR			.4938.00				**K5C500PT*		
	C381	SMD-CERAMIC-CAPA	ACI	TOR				PHILIPS_CO					
	C382	CERAMIC CHIP CAI	PAC	ITOR				PHILIPS_CO					
	C382	CERAMIC CHIP CAI	PAC	ITOR	İ		.6292.00				104K 16AT		
	C384	CERAMIC CHIP CAL CE 2,2UF +-10%	PAC	ITOR				SPRAGUE			X9 025 C2W		
		TANTALUM CHIP C	APA	CITOR			.4609.00				**F50ZPT		
	C385	SMD-CERAMIC-CAP	ACI	TOR			.9323.00				**F50ZPT		
	C386	SMD-CERAMIC-CAP	ACI	TOR	1		.8496.00				G 470F50XPT		
	C387	CC 47PF+-1%50V CERAMIC CHIP CA					.0450.00	BUINA	OWN!		A TOU SUAFT		
	MEZ1	887 3PLU	ÄI	Datum Date			Schalttell Parts li				Sachnummer Stock No.	<u> </u>	Blatt-Nr. Page
)693					$\vdash$					100		1 6 4	
.0026-0693	ROHD	E&SCHWARZ	48	07.10.99		EE RE	FERENZ_S	TEPSYNTHESE		103	85.6501.0°	1 2A	4+

Comp.	No.	Designati	ion		Sto	ck No.	Manufacturer	Desi	gnation	conta	ined In
C38	38	CC 33PF+-1% 50		3 (	CC 0048	.3639.00	MURATA	GRM39	9C0G***B50ZPT		
C40	00	SMD-CERAMIC-CAP CT 9PF 250V LUF AIR TRIMMER		.	CT 0564	.6885.00	TEKELEC	AT 5	276		
C40	01	CC 10PF+-2% CERAMIC CAPACIT	500V PELI	-	CC 0580	.9510.00	ATC	ATC10	OOB 100 GW500XR		
C40	02	CC 4,7PF+-0,1PF		- (	CC 0580	.9540.00	ATC	ATC10	OOB 4R7 BW500XR		
C40	04		SOVNPO OG	оз	CC 0010	.9323.00	MURATA	GRM39	9C0G***F50ZPT		
C40	06		SOVNPO 06	03 0	C 0009	.4609.00	MURATA	GRM39	OCOG***F50ZPT		
C40	80	CC 100NF+-10%16 CERAMIC CHIP CA	SV HDK 06	03 0	CC 1097	.6292.00	AVX	CM109	5 X7R104K16AT		
C41	10	CE 4,7UF+-10% 1	IOV 35	28 (	CE 0007	.7275.00	SPRAGUE	293D	475 X9 O10 B2T		
C41	11	CC 100NF+-10%16 CERAMIC CHIP CA	SV HDK 060	оз (	CC 1097	.6292.00	AVX	CM105	5 X7R104K16AT		
C41	13		SOVNPO 060	03 0	CC 1097	.6363.00	MURATA	GRM39	9C0G***F50ZPT		
C41	14	CC 33PF+-1% 5C SMD-CERAMIC-CAP	ONPO 060	3 (	CC 0048	.3639.00	MURATA	GRM39	9COG***B50ZPT		
C41	17	CC 18PF+-1% 5C SMD-CERAMIC-CAP	OVNPO 060	3	CC 0048	.3622.00	MURATA	GRM39	OCOG***F50ZPT		
C41	18	CC 100NF+-10%50 CERAMIC CHIP CA	V X7R 120	o6 (	CC 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C42	20	CC 100NF+-10%5C	OV X7R 120	o6	CC 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C42	21	CC 100NF+-10%50 CERAMIC CHIP CA	V X7R 120	o6	CC 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C42	23	CC 100NF+-10%5C CERAMIC CHIP CA	V X7R 120	o6	CC 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C42	24	CC 10P+-0,1PF50 SMD-CERAMIC-CAP	V NPO 06	03 0	C 0009	.4567.00	MURATA	GRM39	COG***B50ZPT		
C43	31	CC 470PF+-1%50V CERAMIC CHIP CA	/ NPO 120	3 0	C 0099	.8515.00	AVX	1206	5 A 471 F 3		
C43	32	CC 470PF+-1%50V CERAMIC CHIP CA	/ NPO 120	3 (	cc 0099	.8515.00	AVX	1206	5 A 471 F 3		
C43	34	CC 10P+-0, 1PF50 SMD-CERAMIC-CAP	V NPO 060	03 0	CC 0009	.4567.00	MURATA	GRM39	OCOG***B50ZPT		
C43	35		SOVNPO 060	оз (	C 0009	.9730.00	MURATA	GRM39	COG***F50ZPT		
C43	36	CC 100NF+-10%50 CERAMIC CHIP CA	V X7R 120	D6 (	C 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C43	37	CC 100NF+-10%50 CERAMIC CHIP CA	OV X7R 120	06 (	CC 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C43	39	CC 100NF+-10%50 CERAMIC CHIP CA	OV X7R 12	06 0	CC 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C44	10	CC 470PF+-1%50V CERAMIC CHIP CA	/ NPO 120	5 (	CC 0099	.8515.00	AVX	1206	5 A 471 F 3		
C44	11	CC 470PF+-1%50V CERAMIC CHIP CA	/ NPO 120	3 (	CC 0099	.8515.00	AVX	1206	5 A 471 F 3		
C44	13	CC 100NF+-10%50 CERAMIC CHIP CA	OV X7R 12	06 (	CC 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C44	15	CC 100NF+-10%50 CERAMIC CHIP CA	OV X7R 12	06	CC 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C44	17	CC 1NF+-1% 50V SMD CERAMIC CAP	NPO 120	5	CC 0007	.7398.00	AVX	1206	5A 102 FATOOJ		
C44	18	CC 3,9PF+-0,25 CERAMIC CHIP CA	50VNP012	06	CC 0007	.8207.00	MURATA	GRM42	2-6COG 3R9 C50PT		i
C44	19		SOVNPO 06	os	CC 0009	.8256.00	MURATA	GRM39	COG***F50ZPT		
C45	50	CC 470PF+-1%50V CERAMIC CHIP CA	/ NPO 120	6	CC 0099	.8515.00	AVX	1206	5 A 471 F 3		
C45	53	CC 10PF+-0,25 E CERAMIC CHIP CA	50VNPO 12			.8480.00			2-6COG 100 C50PT		
C45	54	CC 100NF+-10%50 CERAMIC CHIP CA	OV X7R 12	o6	CC 0007	.5237.00	PHILIPS_CO	2238	581 55649		
C45	55	CC 1,ONF+-10%50 SMD-CERAMIC-CAF	OV HDK 06	03	CC 0009	.4938.00	MURATA	GRM39	9X7R***K5C500PT*		
C45	57	CC 220PF+-1%50V CERAMIC CHIP CA	/ NPO 120			.8850.00			A 221 F 3		
C45	58	CC 100NF+-10%50 CERAMIC CHIP CA	OV X7R 12				PHILIPS_CO				
C45	Į	CC 6,8PF+-0,1PF CERAMIC CAPACIT	500V PEL	-		.8565.00			6R8BW 500XR		
C46	50	CC 1,ONF+-10%50 SMD-CERAMIC-CAF	OV HDK 06	03	CC 0009	.4938.00	MURATA	GRM39	9X7R***K5C500PT*		
	ĺ										
ME	EZ1	887 3PLU	Äl Datu			Schaltteil Parts li			Sachnummer Stock No.	1	Blatt-Nr. Page
ļ			Pate		,,,,,	1 4115 7	31 1U1		JUCK HO.	<del></del>	. 684

48 07.10.99

Sachbummer

HRYBICHNIING

6+

ROHDE&SCHWARZ

Kannz

Hanennun

	Comp. No.	Designati	on			Stock	No.	Manufacturer	De	signation	·	conta	ined in
	C525	CC 180PF+-1% 50			cc	1097.	6305.00	MURATA	GRM	39COG	***F50ZPT		
	C526	SMD-CERAMIC-CAP CC 10P+-0,1PF50		1	СС	0009.	4567.00	MURATA	GRM	39C0G*	***B50ZPT		
	ļ	SMD-CERAMIC-CAP	ACITOR	₹									
	C530	CC 680PF+-1% 50 CERAMIC CHIP CA									OG 681F 50PT		
	C531	CC 1NF+-1% 50V SMD CERAMIC CAP	NPO 1	1206	CC	0007.	7398.00	AVX	120	6 5A ·	102 FAT00J		
	C532	CC 10NF+-10%50V	X7R 1	1206	СС	0099.	8521.00	PHILIPS_CO	223	8 581	16627		
	C535	CERAMIC CHIP CA									OG 681F 50PT		
		CERAMIC CHIP CA	PACITO	OR									
	C536	CC 1NF+-1% 50V SMD CERAMIC CAP			CC	0007.	7398.00	AVX	1200	5 5A	102 FA100J		
1	C537	CC 10NF+-10%50V CERAMIC CHIP CA			CC	0099.	8521.00	PHILIPS_CO	223	8 581	16627		
۱	C538	CE 1UF+-20%100V	ALU-C	CHIP	CE	0008.	1787.00	VALVO	222	2 139	69108		
İ	C539	SMD-ELECTROLYTI CE 1UF+-20%100V			CE	0008.	1787.00	VALVO	222	2 139	69108		
١	C540	SMD-ELECTROLYTI CC 100NF+-10%50											
	1	CERAMIC CHIP CA	PACITO	OR				PHILIPS_CO					
	C541	CE 2,2UF+-20%50 SMD ELECTROLYTI			CE	0009.0	5524.00	PANASONIC	EEV	HB 1F	1 2R2R		
	C542	CK 2,2UF+-5% 50	V RD7,		CK	0350.	5944.00	SIEMENS	B32	529-C5	5225-J089		
	C543	POLYESTER CAPAC CK 1UF+-5%50V7,	5X5,5X	(10,5	СК	0099.	2998.00	SIEMENS	B325	529-C5	5105-J189		
	C544	POLYESTER CAPAC CC 100NF+-10%50		1206				PHILIPS_CO					
	548	CERAMIC CHIP CA	PACITO	DR									
I	C552	CE 1UF+-20%100V SMD-ELECTROLYTI	C CAPA	CIT.				VALVO			69108		
I	C555 557	CC 100NF+-10%50 CERAMIC CHIP CA			CC	0007.	5237.00	PHILIPS_CO	2238	3 581	55649		
	C558	CC 15PF+-1% 50	V NPO	1206	CC	0099.8	3750.00	MURATA	GRM4	12-6CC	G 150F50ZPT		
ļ	C560	CERAMIC CHIP CA	V HDK	0603	СС	1097.6	3292.00	AVX	CM10	)5 X7R	R104K16AT		
	C561	CERAMIC CHIP CA CC 10NF+-10% 5									**K5C500PT*		
	C562	SMD-CERAMIC-CAP	ACITOR	≀									
1		CK 2,2UF+-5% 50 POLYESTER CAPAC	ITOR								5225-J089		
	C563	CC 100NF+-10%16 CERAMIC CHIP CA			CC	1097.6	5292.00	AVX	CM10	)5 X7R	104K16AT		
	C564	CE 2,2UF+-20%50 SMD ELECTROLYTI	V RUND	) SMD	CE	0009.6	5524 ⁻ .00	PANASONIC	EEV	HB 1H	1 2R2R		
	C565	CE 10UF+-20%35V	RUND	SMD	CE	0009.5	5605.00	PANASONIC	EEV	HB 1V	100X		
	C566	SMD ELECTROLYTICC 100NF+-10%50	C CAPA V X7R	1206	СС	0007.5	5237.00	PHILIPS_CO	2238	3 581	55649		
	C567	CERAMIC CHIP CA CC 100NF+-10%50	PACITO	OR				PHILIPS_CO					
ĺ		CERAMIC CHIP CA	PACITO	DR									
	C570	CC 10NF+-10%50V CERAMIC CHIP CA	PACITO	DR				PHILIPS_CO	2238	581	16627		
	C574	CC 680PF+-1% 50 CERAMIC CHIP CA	V NPO	1206	CC	0007.	7375.00	MURATA	GRM4	12-6C0	G 681F 50PT		
	C575	CC 100NF+-10%16	V HDK	0603	СС	1097.6	3292.00	AVX	CM10	)5 X7R	104K16AT		
	C576	CERAMIC CHIP CAR CC 1NF+-1% 50V			СС	0007.7	7398.00	AVX	1206	5 5A 1	O2 FATOOJ		
	C577	SMD CERAMIC CAP		₹				PHILIPS_CO					
	1	CERAMIC CHIP CA	PACITO	DR				-					
Ì	C578	CC 10NF+-10% 50 SMD-CERAMIC-CAP		₹			1844.00				**K5C500PT*		
	C579	CC 100NF+-10%50 CERAMIC CHIP CA	V X7R	1206	CC	0007.5	5237.00	PHILIPS_CO	2238	581	55649		
	C580	CC 100NF+-10%16	V HDK	0603	СС	1097.6	292.00	AVX	CM1C	5 X7R	104K16AT		
	C582	CE 1UF +-10% 25	PACI FO V		CE	0007.7	7217.00	SPRAGUE	293	105	X9 025 B2T		
	C595	TANTALUM CHIP C	APACIT		CC :	0009 4	4844.00				**K5C500PT*		
		SMD-CERAMIC-CAP	ACITOR	≀									
	C609	CC 10NF+-10%50V CERAMIC CHIP CA		)R				PHILIPS_CO					
	C610	CC 100NF+-10%50 CERAMIC CHIP CA			CC	0007.5	5237.00	PHILIPS_CO	2238	581	55649		
	C620	CC 100NF+-10%50	V X7R	1206	СС	0007.5	5237.00	PHILIPS_CO	2238	581	55649		
ļ		CERAMIC CHIP CA	PACLIO	אל			ļ						
L										·····			
	MEZ1	887 3PLU		Datum Date			Schaltteilli Parts lis				Sachnummer Stock No.		Blatt-Nr. Page
ŀ											*****	····	

1035.6501.01 SA

7+

ROHDE&SCHWARZ

48 07.10.99

MEZ1 887 3PLU ÄI Date Parts list for Stock No. Pag	Kennz. Comp. No.	Bonannur Designation				Sachnummer Stock No.	Hersteller Manufacturer		ichnung gnation	contain	ed in
CC 100MF+-10X40V HOX 0003   CC 1097.6292.00   AVX		CE 22UF+-20%35V	RUN		CE	0009.6253.00	PANASONIC	EEV I	B 1V 220P		
CC   100MF-10746V   HOX, DOSS   CC   1097.6292.00   AVX	C650	CC 100NF+-10%16	V HD	K 0603	СС	1097.6292.00	AVX	CM109	5 X7R104K16AT		
CEBB C C 100NF-10X16V HDX 0603 (C 1097, 6292.00   AVX	C660	CC 100NF+-10%16	V HE	K 0603   0	CC	1097.6292.00	AVX	CM10	5 X7R104K16AT		
C688 CC 100PF+11X SOWNPO 0603 C689 CC 0009.4680.00 WMRATA GRMSSUCG***150ZPT C690 CC 0009.4680.00 WMRATA GRMSSUCG***150ZPT C691 CC 100NP+10XCDV YZR 1206 C691 CC 100NP+10XCDV YZR 1206 C693 CC 100NP+10XCDV YZR 1206 C695 CD 100NP+10XCDV YZR 1206 C695 CC 100NP+10XCDV YZR 1206 C695 CC 100NP+10XCDV YZR 1206 C696 CC 100NP+10XCDV YZR 1206 C697 CC 1.0NP+10XCDV YZR 1206 C698 CC 1.0NP+10XCDV YZR 1206 C698 CC 1.0NP+10XCDV YZR 1206 C699 CC 1.0NP+10XCDV YZR 1206 C690 CC 22VP+10XCDV XZR 1206 C690 CC 22VP+10XCDV XZR 1206 C691 CC 100NP+10XCDV XZR 1206 C692 CZ 2ZPF+20XZDV XZR 1206 C693 CC 100NP+10XCDV XZR 1206 C693 CC 100NP+10XCDV XZR 1206 C694 CZ 2ZPF+20XZDV XZR 1206 C695 CC 100NP+10XCDV XZR 1206 C696 CZ 2ZPF+20XZDV XZR 1206 C697 CZ 2ZPF+20XZDV XZR 1206 C698 CZ 2ZPF+20XZDV XZR 1206 C699 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C690 CZ 2ZPF-12DZV XZR 1207 C600 CZ 2ZPF-12DZV XZR 1207 C600 CZ 2ZPF-12DZV XZR 1207 C600 CZ 2ZPF-12DZV XZR 1207 C600 CZ 2ZPF-12DZV XZR 1207 C600 CZ 2ZPF-12DZV XZR 1207 C600 CZ 2ZPF-12DZV XZR 1207 C600 CZ 2ZPF-12DZV XZR 1207 C600 CZ 2ZPF-12DZV XZR 1207 C600 CZ 2ZP	C680	CC 100NF+-10%16	V HD	K 0603 (	СC	1097.6292.00	AVX	CM10	5 X7R104K16AT		
C689   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690   C690	C685	CC 100PF+-1% 5	OVNF	0 0603	СС	0009.4680.00	MURATA	GRM39	OCOG***F50ZPT		
CCS 1000F*-10XSDV XPR 1206 CCS 1000F*-10XSDV XPR 1206 CCS 1000F*-10XSDV XPD XPD XPD XPD XPD XPD XPD XPD XPD XPD	C688	CE 22UF+-20%35V	RUN	ID SMD	CE	0009.6253.00	PANASONIC	EEV I	HB 1V 220P		
C695 CC 100PF+10X-10Y-10P 0603 CC 1009F-2629. OD AVX CM105 X7R:04R18A1 CC 10OPF-10X-0APACITOR CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC 10OPF-11X SOVAPO 6603 CC	C690	CC 100NF+-10%50	V X7	7R 1206	СС	0007.5237.00	PHILIPS_CO	2238	581 55649		
C699 CC 100PF-10XSOV HDM C603 C698 CC 1.0NF-10XSOV HDM C603 C698 CCRAMIC CHIP CAPACITOR C690 CERAMIC CHIP CAPACITOR C900 CERAMIC CHIP CAPACITOR C601 CONOR-10XSOV MDM C603 SMC ELECTROLYTIC CAPACITOR C602 CERAMIC CHIP CAPACITOR C603 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CERAMIC CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACITOR C700 CHIP CAPACI	C691	CC 100NF+-10%16	V HE	K 0603	СС	1097.6292.00	AVX	CM10	5 X7R104K16AT		
C698   CC 1, OMF4-10X50V HPO 1206   CC 00094, 4938. 0.00   MUNATA   GRM93Y7R***RSCS0OPI*   CC 0009F-1X50V MPO 1206   CC 470PF-1X50V MPO 1206   CC 470PF-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC 0009F-1X50V MPO 1206   CC	C695	CC 100PF+-1% 5	OVNE	0 0603	СС	0009.4680.00	MURATA	GRM3	9COG***F5OZPT		
C698	C697	CC 1,0NF+-10%50	V HI	OK 0603	СС	0009.4938.00	MURATA	GRM3	9X7R***K5C500PT*		
COOO   CE 22UF+-20X3SV RIND SMD   CE 0009.6253.00   PANASONIC EEV HB 1V 220P	C698	CC 470PF+-1%50V	NP(	1206	СС	0099.8515.00	AVX	1206	5 A 471 F 3		
CC 100NP+-10/SDOV X7R 1206   CC 0007.5237.00   PHILIPS_CD 2238 581 55649	C900	CE 22UF+-20%35V	RUI	ND SMD	CE	0009.6253.00	PANASONIC	EEV I	HB 1V 220P	-0	
D95   D16   D174C745C   2XD-FLIPFL   D10AL D-TYPE FLIPF   D10AL D-TYPE FLIPF   D10AL D-TYPE FLIPF   D10AL D-TYPE FLIPF   D10AL D-TYPE FLIPF   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D10AL D-FLIPFLOP   D1	C901	CC 100NF+-10%50	V X	7R 1206	СС	0007.5237.00	PHILIPS_CO	2238	581 55649		
D95   BL 74AC74SC   2XD-FLIPFL   D920   BL 74AC74SC   2XD-FLIPFL   D920   BL 74AC74SC   2XRSFLIPFLOP   BL 74AC74SC   2XRSFLIPFLOP   BL 74AC74SC   2XRSFLIPFLOP   BL 74AC74SC   2XRSFLIPFLOP   BL 74AC74SC   2XRSFLIPFLOP   BL 74AC74SC   2XRSFLIPFLOP   BL 74AC74SC   2XRSFLIPFLOP   BL 74AC74SC   2XRSFLIPFLOP   BL 74AC74SC   2XRSFLIPFLOP   BL 74AC00SC   AZIN   NAND   CATE   BL 74AC00SC   AZIN   NAND   CATE   BL 74AC0SC   AZIN   NAND   CATE   BL 74AC0SC   AZIN   CAND   BL 74AC161SC   AB BIN   CAND   CATE   BL 74AC0SC   AZIN   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   CAND   C	D31		IVR	F ASIC	ВG	1039.1240.00	SIEMENS	SH10	OE3008		
D320   BL 74ACT74SC 2XRSFLIPFLOP   BL 0008.0680.00   TOSHIBA (TC74)ACT74(FN)	D95	BL 74AC74SC 2		FLIPFL	BL	0820.3602.00	FAIRCHILD	74AC	74SC		:
D330   BL PC74HC4094T BST, BUSREG   D340   BL PC74HC4094T BST, BUSREG   BL PC74HC4094T BST, BUSREG   D430   BL PC74HC4094T BST, BUSREG   D430   BL PC74HC4094T BST, BUSREG   D445   BL 74AC00SC   4X2IN NAND   D445   BL 74AC0SC   4X2IN NAND   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446   D446	D320	BL 74ACT74SC 2X	RSF	_IPFLOP	BL	0008.0680.00	TOSHIBA	(TC7	4)ACT74(FN)		
D340   BL PC74HC4094T 8ST.BUSREG   D3604.0977.00   PHILIPS_SE (PC)74HC4094(D/T)   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PACODEC   PA	D330	BL PC74HC4094T	8ST			0804.0977.00	PHILIPS_SE	(PC)	74HC4094(D/T)		
DA30	D340	BL PC74HC4094T	8ST	.BUSREG		0804.0977.00	PHILIPS_SE	(PC)	74HC4094(D/T)		
Da45   B. T4ACCOSC	D430	BL 74ACOOSC 4		N NAND	BL	0820.3477.00	FAIRCHILD	74AC	oosc		
Da60	D445	BL 74ACOOSC 4	X2I	N NAND	BL	0820.3477.00	FAIRCHILD	74AC	oosc		
DSOO   BL 74AC161SC 4B.BIN CNT	D460	BS DG441DY 4X				1036.4454.00	SILICONIX	DG44	1DY		
D505   BL 74ACOOSC   AX21N NAND   QUAD NAND GATE   BL PC74HC161T   4B. BIN.CNT   BINARY COUNTER   BL PC74HC163T   2X4IN.MUX   DUAL DECADE COUNTER   BL PC74HC153T   2X4IN.MUX   DUAL MULTIPLEXER   BL PC74HC074T   2X2F   DUAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TYPE FLIPFLOP   DLAL D-TY	D500	BL 74AC161SC 4	1B.B	IN CNT	BL	0820.3519.00	NSC	74AC	161(SC)		1
B	D505	BL 74ACOOSC 4	4X2I	N NAND		• • • • • • • • • • • • • • • • • • • •					
D515   BL PC74HC39OT 2XDEC.CNT DUAL DECADE COUNTER BL PC74HC153T 2X4IN.MUX DUAL MULTIPLEXER BL PC74HC153T 2X4IN.MUX DUAL MULTIPLEXER BL PC74HC74T 2XD-FF DUAL D-TYPE FLIPFLOP BL PC74HC00T 4X2IN.NAND QUAD 2INPUT NAND GATE BL PC74HC00T 4X2IN.NAND QUAD 2INPUT NAND GATE BL PC74HC135T 4XBUFF. 3S QUAD LINE DRIVER BL PC74HC125T 4XBUFF. 3S QUAD LINE DRIVER BL PC74HC125T 4XBUFF. 3S QUAD LINE DRIVER BL PC74HC125T 4XBUFF. 3S QUAD LINE DRIVER BL PC74HC4094T BST. BUSREG B-STAGE SHIFT&STORE REG. BL PC74HC4094T BST. BUSREG B-STAGE SHIFT&STORE REG. BL PC74HC4094T BST. BUSREG B-STAGE SHIFT&STORE REG. BL PC74HC4094T BST. BUSREG B-STAGE SHIFT&STORE REG. BL PC74HC405IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANDEL ANAL.MULTIPLEXER BL PC74HC305IT BCH.AN.MUX 8CHANDEL ANAL.MULTIPLEXE	D510	BL PC74HC161T	4B.	BIN.CNT	ВL	0804.0983.00	PHILIPS_SE	(PC)	74HC161(D/T)		
D520   BL PC74HC153T 2X4IN.MUX DUAL MULTIPLEXER BL PC74HC74T 2XD-FF DUAL D-TYPE FLIPFLOP BL PC74HC74T 4X2IN.NAND QUAD 2INPUT NAND GATE BL PC74HC0OT 4X2IN.NAND QUAD 2INPUT NAND GATE BL PC74HC0OT 4X2IN.NAND QUAD 2INPUT NAND GATE BL PC74HC125T 4XBUFF. 3S QUAD LINE DRIVER BL PC74HC125T 4XBUFF. 3S QUAD LINE DRIVER BL PC74HC4094T 8ST.BUSREG 8-STAGE SHIFT&STORE REG. BL PC74HC4094T 8ST.BUSREG 8-STAGE SHIFT&STORE REG. BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MULTIPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MUTTPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANAL.MUTTPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANALMUTTPLEXER BL PC74HC405T1 8CH.AN.MUX 8CHANNEL ANALMUTTPLEXER 8CHANNEL ANALMUTTPLEXER 8CHANNEL ANALMUTTPLEXER 8CHANNEL ANALMUTTPLEXER 8CHANNEL ANALMUTTPLEXER 8CHANNEL ANALMUTTPLEXER 8CHANNEL	0515	BL PC74HC39OT		_ {	BL	0007.5043.00	PHILIPS_SE	(PC)	74HC39O(D/T)		
DUAL D-TYPE FLIPFLOP   BL PC74HCOOT	D520	BL PC74HC153T	2X4		BL	0007.5008.00	PHILIPS_SE	(PC)	74HC153(D/T)		
DS50   BL PC74HCCOOT   4X2IN.NAND   BL   0007.3463.00   PHILIPS_SE   (PC)74HC0OD(T)   DAC8143FS   DAC8143FS   IX12B-DAC   128 SERIAL   D/A-CONVERTER   BL   0007.5395.00   PMI   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8143FS   DAC8145FS   DAC8143FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145FS   DAC8145	D525					0007.3505.00	PHILIPS_SE	(PC)	74HC74D(T)		
DESS   BJ DACB143FS   X12B-DAC   1012.9510.00   PMI   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB143FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS   DACB145FS	D535										
D555   BJ DAC8143FS   1X12B-DAC   12B SERIAL D/A-CONVERTER   BL PC74HCT125T 4XBUFF. 3S   QUAD LINE DRIVER   BG TH3032.1C SERBUSD ASIC   IC GATE ARRAY   BL PC74HC4094T 8ST.BUSREG   8-STAGE SHIFT&STORE REG.   BL PC74HC4094T 8ST.BUSREG   8-STAGE SHIFT&STORE REG.   BL PC74HC4094T 8ST.BUSREG   BL PC74HC4094T 8ST.BUSREG   8-STAGE SHIFT&STORE REG.   BL PC74HC14T   6XINV.SCHM   HEXINV.SCHMITT-TRIGGER   BL PC74HC4051T 8CH.AN.MUX   8CHANNEL ANAL.MULTIPLEXER   BL PC74HC4051T 8CH.AN.MUX   8CHANNEL ANAL.MULTIPLEXER   BL PC74HC132T 4XSCHMITT   QUAD 2-INP NAND SCHMITT   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date   Date	D550	BL PC74HCOOT	4X2	IN.NAND	BL						
D610   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620   D620	D555	BJ DAC8143FS 12B SERIAL D/A	1X CON-	12B-DAC VERTER							
D620	0600	BL PC74HCT125T QUAD LINE DRIV	4XB ER	UFF. 3S							
S-STAGE SHIFT&STORE REG.   BL PC74HC4094T 8ST.BUSREG   8-STAGE SHIFT&STORE REG.   BL PC74HC14094T 8ST.BUSREG   8-STAGE SHIFT&STORE REG.   BL PC74HC14T 6XINV.SCHM   HEXINV.SCHMITT-TRIGGER   BL PC74HC4051T 8CH.AN.MUX   8CHANNEL ANAL.MULTIPLEXER   BL PC74HC4051T 8CH.AN.MUX   8CHANNEL ANAL.MULTIPLEXER   BL PC74HC132T 4XSCHMITT T   QUAD 2-INP NAND SCHMITT   QUAD 2-INP NAND SCHMITT   QUAD 2-INP NAND SCHMITT   QUAD 2-INP NAND SCHMITT   Date   Schalttelliste für   Sachnummer   Stock No.   Blatt-Parts list for   Stock No.   Blatt-Parts list for   Stock No.   Page   Page   Page   Page   Page   Page   Page   PC74HC4094(D/T)   PHILIPS_SE (PC)74HC14094(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14051(D/T)   PHILIPS_SE (PC)74HC4051(D/T)   PHILIPS_SE (PC)74HC4051(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D/T)   PHILIPS_SE (PC)74HC14(D	D610	BG TH3032,1C SI	ERBU		BG						
B	D620	8-STAGE SHIFT&	STOR	E REG.			ļ				
HEXINV.SCHMITT-TRIGGER   BL PC74HC4051T 8CH.AN.MUX   8CHANNEL ANAL.MULTIPLEXER   BL PC74HC4051T 8CH.AN.MUX   8CHANNEL ANAL.MULTIPLEXER   BL PC74HC4051T 8CH.AN.MUX   8CHANNEL ANAL.MULTIPLEXER   BL PC74HC132T 4XSCHMITT T   QUAD 2-INP NAND SCHMITT   BL 0520.7811.00   PHILIPS_SE (PC)74HC4051(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_SE (PC)74HC132(D/T)   PHILIPS_	D630										
D650	D640	BL PC74HC14T HEXINV.SCHMITT	6XI TRI-	NV.SCHM GGER	BL						
BL O520.7811.00 PHILIPS_SE (PC)74HC132(D/T)  MEZ1 887 3PLU ÄI Datum Date Schaltteilliste für Stock No.  BL O520.7811.00 PHILIPS_SE (PC)74HC132(D/T)  BL O520.7811.00 PHILIPS_SE (PC)74HC132(D/T)  Bl O520.7811.00 PHILIPS_SE (PC)74HC132(D/T)		8CHANNEL ANAL.	MULT	IPLEXER			}				
QUAD 2-INP NAND SCHMITT  MEZ1 887 3PLU ÄI Datum Schaltteilliste für Sachnummer Parts list for Stock No. Pag		8CHANNEL ANAL.	MULT	IPLEXER							
MEZ1 887 3PLU AI Date Parts list for Stock No. Pag	D680	QUAD 2-INP NAN	4XSC	CHMITT	BL	. 0520.7811.00	PHILIPS_SC	. (FC	) / 4 MC 132 ( D/ 1 )		
MEZ1 887 3PLU AI Date Parts list for Stock No. Pag		•									
48 07.10.99 EE REFERENZ_STEPSYNTHESE 1035.6501.01 SA 8	MEZ	887 3PLU	Äl							r	Blett-Nr. Page
ROHDE&SCHWARZ	ROH	INE O COLUMN	48	07.10.99		EE REFERENZ_	STEPSYNTHESI	=	1035.6501.0	1 SA	8+

wir uns alle Rechte vor.

Stock No.

1012.9604.00 HAMLIN

Manufacturer

Designation

HE3621A0500

contained in

Für diese Unterlage behalten Wir uns alle Rechte vor. Comp. No.

**K1** 

Designation

SR 5V 500 OHM 1X1 SIL

MEZ1	887 3PLU	ÄI	Datum Date	Schalttellliste für Parts list for	Sachnummer Stock No.	Blatt-Nr. Page
ROHDE	E&SCHWARZ	48	07.10.99	EE REFERENZ_STEPSYNTHESE	1035.6501.01 SA	9+

	Comp. No.	Designation		Stock No.		signation	contains	d in
	L251	LD 91NH SMD Q5, 1H5	0-K	0008.9520.00	COMPONEX E 5	58 HN-10 0100		
	L253	SMD-VHF-COIL LD 0,56UH10%0,500HN	10,550A L	_D 0067.2834.00	DALE IM2			
	L256	CHOKE LD 0,56UH10%0,500HM	10,550A	_D 0067.2834.00	DALE IM2			
	L260	CHOKE LD 10UH 10% 3R3 144	MA L	_D 0026.4184.00	DALE IM2			
	L261		BA 1210 L	_D 6006.0130.00	SIEMENS B82	422-A1102-J(K)100		
	L262		BA 1210 L	_D 0520.7911.00	SIEMENS B82	422-A3221-J(K)100		
	L265	RF CHOKE LD 29NH SMD-ABGL.Q5	5, 1H5	0008.9420.00	COMPONEX E 5	58 AN-10 0040		· l
	268 L271	SMD-VHF-COIL LU HF-UEBERTR. 50-1	700MHZ	1036.4590.00	COMPONEX 616	OB-1017		
	L275	RF TRANSFORMER LD 32NH SMD-ABGL.Q5	5, 1H5	0008.9436.00	COMPONEX E 5	58 CN-10 0020		
	L277	SMD-VHF-COIL LD 56NH SMD Q5,1H5	0-K	0008.9471.00	COMPONEX E 5	58 GN-10 0028		ļ
	L278	SMD-VHF-COIL LD 270NH 10%0,160HN	10,975A	_D 0067.2792.00	DALE IM2			İ
	L280		'A 1210 L	_D 0520.7870.00	SIEMENS B82	422-A1222-J(K)100		
	L281		'A 1210 L	_D 0520.7870.00	SIEMENS B82	422-A1222-J(K)100		l
	L282	RF CHOKE LD 32NH SMD-ABGL.Q5	5,1H5	0008.9436.00	COMPONEX E 5	58 CN-10 0020		
	L285	SMD-VHF-COIL LD 38NH SMD-ABGL.Q5	5, 1H5	0008.9442.00	COMPONEX E 5	58 AN-10 0041		
	L286	SMD-VHF-COIL LD 56NH SMD Q5,1H5	0-к	0008.9471.00	COMPONEX E 5	58 GN-10 0028		ĺ
	L288	SMD-VHF-COIL LD 0,47UH10%0,350HN	10,660A	_D 0067.2828.00	DALE IM2			
	L290	CHOKE LD 32NH SMD-ABGL.Q5	5, 1H5	0008.9436.00	COMPONEX E 5	58 CN-10 0020		
	L291		BA 1210 L	_D 6006.0130.00	SIEMENS B82	422-A1102-J(K)100		
۲٥٢.	L292		BA 1210 L	_D 6006.0130.00	SIEMENS B82	422-A1102-J(K)100		ĺ
alle Hechie Vor.	L320	RF CHOKE LD 2,2UH 10% 0,27 RF CHOKE	'A 1210	_D 0520.7870.00	SIEMENS B82	422-A1222-J(K)100		
3116 KE	L322	LD 2,2UH 10% 0,27	7A 1210 L	_D <b>0520.7870.0</b> 0	SIEMENS B82	422-A1222-J(K)100		
wir uns a	L324	RF CHOKE LD 220NH 10%0,140HN	11,045A	_D 0067.2786.00	DALE IM2			
wir	L325	CHOKE LD 0,82UH10%0,850HN	10,420A L	_D 0067.2857.00	DALE IM2			
	L326	CHOKE LD 1,50UH10%0,220HN	10,560A	_D 0067.2886.00	DALE IM2			i
	F330	CHOKE LD 2,2UH 10% 0,27 RF CHOKE	7A 1210 L	_D 0520.7870.00	SIEMENS B82	422-A1222-J(K)100		
	L350		3A 1210 L	_D 0007.9255.00	SIEMENS B82	422-A1103-J(K)100		
	L351		BA 1210	LD 0007.9255.00	SIEMENS B82	422-A1103-J(K)100		
	L352	LD 0,33UH10%0,220HN CHOKE	1 AOE8, ON	LD 0067.2805.00	DALE IM2			
	L353	LD 270NH 10%0,160HM CHOKE	10,975A I	LD 0067.2792.00	DALE IM2			ŀ
	L359		BA 1210	LD 0008.1693.00	SIEMENS B82	422-A1473-J(K)100		
	L3 <b>6</b> 0	LD 0,39UH10%0,300HN CHOKE	MO,710A	LD 0067.2811.00	DALE IM2			l
	L361	LD 0,33UH10%0,220HN CHDKE	10,830A	LD 0067.2805.00	DALE IM2			
	L380	LD 220NH 10%0,140HM	M1,045A	LD 0067.2786.00	DALE IM2			
	L381		7A 1210	LD 0520.7870.00	SIEMENS B82	422-A1222-J(K)100		
	L382		7A 1210	LD 0520.7870.00	SIEMENS B82	422-A1222-J(K)100		
	L383	LD 220NH 10%0,140HM CHOKE	M1,045A	LD 0067.2786.00	DALE IM2			
	L384	LD 220NH 10%0,140HM	M1,045A	LD 0067.2786.00	DALE IM2			
	L387	LD 120NH 10% 0,090H	HM 1,3A	LD 0067.2757.00	DALE IM2			
		SHORE	THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE P					
,	MEZ1	887 3PLU ÄI	Datum Date	Schaltteil Parts li		Sachnummer Stock No.	В	Blatt-Nr. Page
) ) ) )	ROHD	E&SCHWARZ 48	07.10.99	EE REFERENZ_S	<u></u>	1035.6501.01	SA	10+
,								

08033180	VOr.
	Rechte
o Orteriage	S alle
rus diese	wir uns

Comp. No.	Designation	Stock No.	Manufacturer	Designation	contained in
L388	LD 120NH 10% 0,090HM 1,3A CHOKE	LD 0067.2757.00	DALE 1	M2	
L390	LD 2,2UH 10% 0,27A 1210 RF CHOKE	LD 0520.7870.00	SIEMENS E	382422-A1222-J(K)100	
L391		LD 0520.7870.00	SIEMENS E	382422-A1222-J(K)100	
L392		LD 0067.2905.00	DALE I	.M2	
L393	LD 2,2UH 10%0,40HM 0,415A	LD 0067.2905.00	DALE I	M2	
L394	LD 2,2UH 10% 0,27A 1210 RF CHOKE	LD 0520.7870.00	SIEMENS E	382422-A1222-J(K)100	
L395	LD 2,2UH 10% 0,27A 1210 RF CHOKE	LD 0520.7870.00	SIEMENS E	382422-A1222-J(K)100	
L402	LD 3,3UH 10%0,850HMO,285A	LD 0067.2928.00	DALE I	M2	
L405	CHOKE LD 3,3UH 10%O,850HMO,285A CHOKE	LD 0067.2928.00	DALE I	M2	
L406	LD 180NH 4,5W CM14P FE-K	0303.9024.00	токо з	801-SS-0400	
L408	CHOKE LD 3,3UH 10%0,850HM0,285A	LD 0067.2928.00	DALE I	M2	
L410	CHOKE LD 1,20UH10%0,180HM0,620A	LD 0067.2870.00	DALE I	M2	
L415	CHOKE LD 10UH 10% 3R3 144 MA	LD 0026.4184.00	DALE I	M2	
L418	CHOKE LD 0,39UH10%0,300HM0,710A	LD 0067.2811.00	DALE I	M2	
L420	CHOKE LD 10UH 10% 3R3 144 MA	LD 0026.4184.00	DALE I	M2	
L421	CHOKE LD 90NH SMD-ABGL.Q5,1H5	0008.9513.00	COMPONEX E	558 CN-10 0023	
L435	SMD-VHF-COIL LD 2,2UH 10% 0,27A 1210	LD 0520.7870.00	SIEMENS B	82422-A1222-J(K)100	
L436	RF CHOKE LD 220NH 10%0,140HM1,045A	LD 0067.2786.00	DALE I	M2	
L437	CHOKE LD 0,39UH10%0,300HM0,710A	LD 0067.2811.00	DALE I	M2	
L438	CHOKE LD 0,56UH10%0,500HM0,550A	LD 0067.2834.00	DALE I	M2	
L439	CHOKE LD 0,33UH10%0,220HM0,830A	LD 0067.2805.00	DALE I	M2	
L442	CHOKE LD 38NH SMD-ABGL.Q5,1H5	0008.9442.00	COMPONEX E	558 AN-10 0041	
L448	SMD-VHF-COIL LD 2,2UH 10% 0,27A 1210 RF CHOKE	LD 0520.7870.00	SIEMENS B	82422-A1222-J(K)100	
L450		LD 0520.7870.00	SIEMENS B	82422-A1222-J(K)100	
L463		LD 0067.3201.00	DALE I	M-2	
L464	LD 680UH 10% 600HM 0,030A	LD 0067.3201.00	DALE I	M-2	
L466	CHOKE LD 4,7UH 10% 0,15A 1210	LD 0008.1687.00	SIEMENS B	82422-A1472-J(K)100	
L467		LD 0067.3201.00	DALE II	M-2	
L468	CHOKE LD 680UH 10% 600HM 0,030A	LD 0067.3201.00	DALE II	M-2	
L470	CHOKE LD 47UH 10% 4,50HM 0,11A	LD 0067.3060.00	DALE II	M2	
L475		LD 0067.2940.00	DALE II	M2	
L476	CHOKE LD 10UH 10% 3R3 144 MA CHOKE	LD 0026.4184.00	DALE I	M2	
L480	LD 2,2UH 10% 0,27A 1210	LD 0520.7870.00	SIEMENS B	82422-A1222-J(K)100	
L500	RF CHOKE LD 1UH 10% 0,38A 1210 RF CHOKE	LD 6006.0130.00	SIEMENS B	82422-A1102-J(K)100	
L510		LD 0520.7870.00	SIEMENS BE	B2422-A1222-J(K)100	
L511		LD 0067.2811.00	DALE I	M2	
L513	LD 0,33UH10%0,22DHM0,830A	LD 0067.2805.00	DALE I	M2	
L519	CHOKE LD 1UH 10% 0,38A 1210	LD 6006.0130.00	SIEMENS B	32422-A1102-J(K)100	
L525	RF CHOKE LD 1,8UH 10% 0,30HM 0,48A	LD 0067.2892.00	DALE I	M2	
	CHOKE				
BAS 7.4	OD7 2011 : Datum	Schaltteilli	ste für	Sachnummer	Blatt-Nr.
MEZ1	887 3PLU ÄI Date	Parts list		Stock No.	Page

1035.6501.01 SA

11+

ROHDE&SCHWARZ

48 07.10.99

0026-069

N8DB2

nenennung

...

ROHDE&SCHWARZ

EE REFERENZ_STEPSYNTHESE 48 07.10.99

1035.6501.01 SA

12+

Comp. No.	Designation	Stock No.	Manufacturer	Designation	conta	inad in
P250	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	-928776-5		
P251	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-	928776-5		
P255	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	-928776-5		
P256	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-	-928776-5		
P265	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P266	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-	928776-5		
P325	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P326	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P360	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P361	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-	928776-5		
P390	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P391	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P450	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P451	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P460	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P461	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-	928776-5		
P465	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
P466	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-	928776-5		
P520	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-	928776-5		
P525	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-	928776-5		
P575	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5	:	
P576	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-	928776-5		
P580	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-	928776-5		
R1	RG 2,74K0HM+-1%TK100 1206	RG 0007.5766.00	DRALORIC CR	1206	i	
R2	RESISTOR CHIP RG 4K7 +-1% TK100 0603	0009.7020.00	  PHILIPS_CO RC	22 H		
R4	SMD RESISTOR EIA0603 RG 100 0HM+-1%TK100 1206	RG 0006.8884.00	ROEDERSTEI D2	5		
R6	CHIP RESISTOR RG 47,5 OHM+-1%TK100 1206	RG 0007.5566.00	ROEDERSTEI D2	5		
R7	RESISTOR CHIP RG 392 OHM+-1%TK100 1206	RG 0007.5672.00	DRALORIC CR	1206		
R8	RESISTOR CHIP RG 10,0 OHM+-1%TK100 1206	RG 0006.8649.00		1206		
R10	CHIP -RESISTOR RG 562 OHM+-1%TK100 1206	RG 0006.9068.00	ROEDERSTEI D2	5		
R11	CHIP RESISTOR RG 3,92KOHM+-1%TK100 1206	RG 0007.5808.00	ROEDERSTEI D2	5		
R15	RESISTOR CHIP RG 4K75 +-1% TK100 1206	RG 0007.5820.00	PHILIPS_CO RC	02		ĺ
R16	RESISTOR CHIP RG 3,32KOHM+-1%TK100 1206	RG 0007.5789.00	PHILIPS_CO RC	02		
R17	RESISTOR CHIP RG 33,2 OHM+-1%TK100 1206	RG 0007.5520.00	ROEDERSTEI D2	5		
R21	RESISTOR CHIP RG 4K75 +-1% TK100 1206	RG 0007.5820.00	PHILIPS_CO RC	02		
R22	RESISTOR CHIP RG 475 OHM+-1%TK100 1206	RG 0007.5695.00	ROEDERSTEI D2	5		
R30	RESISTOR CHIP RG 3,32KOHM+-1%TK100 1206	RG 0007.5789.00	PHILIPS_CO RC	02		
R31	RESISTOR CHIP RG 1KO +-1% TK100 1206	RG 0006.7271.00	ROEDERSTEI D2	5		
	CHIP RESISTOR					
MEZ1	887 3PLU ÄI Datum	Schaltteill Parts lis		Sachnummer Stock No.		Blatt-Nr. Page

MEZ1	887	3PLU	ÄI	Datum Date	Schaltteilliste für Parts list for	Sachnummer Stock No.	Blatt-Nr. Page
ROHDE	E&SCHV	VARZ	48	07.10.99	EE REFERENZ_STEPSYNTHESE	1035.6501.01 SA	13+

	Kennz. Comp. No.	Benennung Designation		Stock No.	Manufacturer	Designation	contains	d In
Ī	R35	RG 475 OHM+-1%TK100	1206	RG 0007.5695.00	ROEDERSTEI D2	25		1
	R36	RESISTOR CHIP RG 47,5 OHM+-1%TK10	1206	RG 0007.5566.00	ROEDERSTEI D2	25		- 1
	R38	RESISTOR CHIP RG 68,1 OHM+-1%TK10	1206	RG 0006.8849.00	ROEDERSTEI D2	25		1
	R40	CHIP RESISTOR RG 15.0 OHM+-1%TK10	0 1206	RG 0007.5450.00	PHILIPS_CO RC	002		
	R42	RESISTOR CHIP RG 475 OHM+-1%TK100		RG 0007.5695.00	ROEDERSTEI D2	25		
	R47	RESISTOR CHIP RG 18,2 OHM+-1%TK10		RG 0007.5466.00	PHILIPS_CO RO	002		
	49 R50	RESISTOR CHIP RG 332 OHM+-1%TK100		RG 0007.5650.00	DRALORIC CR	R 1206		İ
	R53	RESISTOR CHIP RG 1,5 KOHM+-1%TK10		RG 0007.5714.00		002		
	R56	RESISTOR CHIP RG 10K +-1% TK100	[	RG 0009.5357.00				
		SMD RESISTOR EIAO60 RG 47R +-1% TK100			PHILIPS_CO RO			
	R57	SMD RESISTOR EIAO60	3	0009.9498.00		R 0603		
	R58	RG 121 OHM+-1%TK100 SMD RESISTOR EIAO60	3	0009.9130.00		R 0603		
ı	R59	RG 182 OHM+-1%TK10 SMD RESISTOR EIAO60	3	RG 0007.5650.00	}	R 1206		
	R65	RG 332 OHM+-1%TK100 RESISTOR CHIP						
	R67	RG 1,5 KOHM+-1%TK10 RESISTOR CHIP		RG 0007.5714.00	1			
	R68	RG 10.0KOHM+-1%TK10 RG CHIP RESISTOR		RG 0007.0793.00				
	R69	RG 10,0KOHM+-1%TK1C	0 1206	RG 0007.0793.00				Ì
	R71	RG 47R +-1% TK100 SMD RESISTOR EIA060	0603 3		PHILIPS_CO RO	C 22 H		
	R72	RG 121 OHM+-1%TK100 SMD RESISTOR EIAO60	0603	0009.9498.00	DRALORIC C	R 0603		
	R73	RG 182 OHM+-1%TK10 SMD RESISTOR EIAO60	0 0603	0009.9130.00	DRALORIC C	R 0603		
vor.	R75	RG 332 OHM+-1%TK100 RESISTOR CHIP		RG 0007.5650.00	DRALORIC C	R 1206		
Rechte	R77	RG 1,5 KOHM+-1%TK10	00 1206	RG 0007.5714.00	PHILIPS_CO R	CO2		
ite Re	R80	RESISTOR CHIP RG 10K +-1% TK100	0603	RG 0009.5357.00	PHILIPS_CO R	C 22 H		
uns alte	R81	SMD RESISTOR EIAO60 RG 100R +-1% TK100	0603	RG 0009.5334.00	PHILIPS_CO R	C 22 H		
¥ír	R82	SMD RESISTOR EIAO60 RG 1KO +-1% TK100	0603	RG 0009.5340.00	PHILIPS_CO R	C 22 H		
	R83	SMD RESISTOR EIAO60 RG 182 OHM+-1%TK10	0603	0009.9130.00	DRALORIC C	R 0603		
	R85	RG 332 DHM+-1%TK100		RG 0007.5650.00	DRALORIC C	R 1206		
	R87	RESISTOR CHIP RG 1,5 KOHM+-1%TK10	00 1206	RG 0007.5714.00	PHILIPS_CO R	CO2		
	R89	RESISTOR CHIP RG 4K7 +-1% TK100	0603	0009.7020.0	PHILIPS_CO R	C 22 H		
	R91	SMD RESISTOR EIAO60 RG 121 OHM+-1%TK100		0009.9498.0	DRALORIC C	CR 0603		
	R92	SMD RESISTOR EIAO6	23	0009.6953.0	DRALORIC C	CR 0603		
	R93	SMD RESISTOR EIAO6 RG 182 OHM+-1%TK1	23	0009.9130.0	DRALORIC C	CR 0603		
	R94	SMD RESISTOR EIAO6 RG 4K75 +-1% TK10	03	RG 0007.5820.0	O PHILIPS_CO R	RC02		
	R96	RESISTOR CHIP RG 47R +-1% TK100	0603	1	O PHILIPS_CO R			
	R97	SMD RESISTOR EIAO6 RG 6K8 +-1% TK100		0009.7037.0		CR 0603		
		SMD RESISTOR EIAO6 RG 150R +-1% TK100	03		O PHILIPS_CO F			
	R98	SMD RESISTOR EIAO6	03	RG 0007.5820.0				
	R99	RESISTOR CHIP		RG 0007.0729.0				
	R100	RG 5,11KOHM+-1%TK1 CHIP RESISTOR		RG 0007.5714.0	}			
	R101	RG 1.5 KOHM+-1%TK1 RESISTOR CHIP		1				
	R105	RG 27,4 OHM+-1%TK1 RESISTOR CHIP	00 1206	RG 0007.5508.0	NO KOEDEKSTET (	Lau		
	MEZ1	887 3PLU ÄI	Datum Date		eilliste für : list for	Sachnumme Stock No.		Blatt-Nr. Page
1693						1035.6501.0	)1 SA	14+
0028-0693	ROH	DE&SCHWARZ 48	07.10.99	EE REFERENZ	STEPSYNTHESE	1039.0301.0	, I GA	147
ō.	1			İ				

Comp. No.	Designat	on			Sto	ck No.	Manufacturer	Di	esignation	cont	ined in
R200	RG 475 OHM+-1%7	K 10	0 1206	RG	0007	.5695.00	ROEDERSTEI				
R201	RESISTOR CHIP RG 10,0 OHM+-1% CHIP -RESISTOR	TK 1	00 1206	RG	0006	.8649.00	DRALORIC	CR	1206		
R202	RG 1,5 KOHM+-1%	(TK 1	00 1206	RG	0007	.5714.00	PHILIPS_CO	RCO	2		
R204		K 10	0 1206	RG	0006	.7271.00	ROEDERSTEI	D25			
R206 208	RG 27,4 DHM+-1% RESISTOR CHIP	KTK 1	00 1206	RG	0007	.5508.00	ROEDERSTEI	D25			
R209	RG 1KO +-1% T CHIP RESISTOR	K 10	0 1206	1			ROEDERSTEI				
R210	RG 1KO +-1% TK1 SMD RESISTOR EI	A06					PHILIPS_CO	RC	22 H		
R212	RL 0,60W 392 OH RESISTOR					.2183.00		MK2			•
R213	RL 0,60W 392 OH RESISTOR						RESISTA	MK2			
R217	RG 3,92KOHM+-1% RESISTOR CHIP			KG			ROEDERSTEI				
R223 R240	RG 470R +-1% TK SMD RESISTOR EI RG 10K +-1% TK1	A06		DC.			DRALORIC		0603		
R241	SMD RESISTOR EI	A060					PHILIPS_CO				
R249	SMD RESISTOR EI	A060	03	الم			PHILIPS_CO DRALORIC		22 H 0603		
R250	SMD RESISTOR EI RG 470R +-1% TK	A060	03				DRALORIC		0603		
R251	SMD RESISTOR EI RG 10,0 0HM+-1%	A060	23	RG			DRALORIC		1206		
R252	CHIP -RESISTOR RG 301R +-1%TK						PHILIPS_CO				
R253	SMD RESISTOR EI RG 301R +-1%TK						PHILIPS_CO				
R254	SMD RESISTOR EI RS 0,25W500 OHM			RS			BI_TECHNOL		·		
R255		K 100	1206				ROEDERSTEI				
R256	CHIP RESISTOR RG 2,21KOHM+-1%	TK 10	00 1206				ROEDERSTEI				
R257	RESISTOR CHIP RG 27,4 OHM+-1%	TK 10	00 1206	RG	0007	.5508.00	ROEDERSTEI	D25			
R258	RESISTOR CHIP RG 10,0 OHM+-1%	TK 10	00 1206	RG	0006	.8649.00	DRALORIC	CR	1206		
R259	CHIP -RESISTOR RG 1KO +-1% T CHIP RESISTOR	K 100	1206	RG	0006	.7271.00	ROEDERSTEI	D25	Transmission of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the Control of the C		
R260	RG 27,4 OHM+-1% RESISTOR CHIP	TK 10	00 1206	RG	0007.	5508.00	ROEDERSTEI	D25			
R261	RG 100 OHM+-1%T CHIP RESISTOR	K 100	1206	RG	0006.	8884.00	ROEDERSTEI	D25			
R262	RG 82,5 OHM+-1% SMD RESISTOR EI				0009.	9052.00	DRALORIC	CR (	0603		
R263	RG 47OR +-1% TK SMD RESISTOR EI	100	0603		0009.	6976.00	DRALORIC	CR (	0603		
R264	RG 100 OHM+-1%T CHIP RESISTOR			RG	0006.	8884.00	ROEDERSTEI	D25			
R265	RG 2,21KOHM+-1% RESISTOR CHIP						ROEDERSTEI				
R266	RG 2,21KOHM+-1% RESISTOR CHIP						ROEDERSTEI				
R267	RG 221 OHM+-1%T RESISTOR CHIP						DRALORIC		1206		
R269	RG 150 OHM+-1%T RESISTOR CHIP			RG			PHILIPS_CO				
R270	RG 200R +-1% TK SMD RESISTOR EI	A060		DC			DRALORIC		0603		
R271 R272	RG 562 OHM+-1%T CHIP RESISTOR			KG			ROEDERSTEI		) 		
R272	RG 47R +-1% TK1 SMD RESISTOR EI RG 27OR +-1% TK	A060	0603 03 0603			:	PHILIPS_CO		}		
R273	SMD RESISTOR EI RG 221 OHM+-1%T	A060	03	P.C			PHILIPS_CO DRALORIC		1206		
R274	RESISTOR CHIP RG 221 OHM+-1%T						DRALORIC		1206		
	RESISTOR CHIP	,	200		0007.	, 50 1-7100	DIVINEUNITO	υit	. 200		
MEZ1	887 3PLU	Äl	Datum Date			Schalttelli Parts lis			Sachnummer Stock No.		Blatt-Nr. Page
		$\neg$		1							

-0200

A B D D J

MADADONIO

Comp. No.	Designation		Stock No.	Manufacturer Designation		- contained in
R326	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00	ROEDERSTEI D2	5	
R327	RG 1KO +-1% TK100	1206	RG 0006.7271.00	ROEDERSTEI D2		
R328	CHIP RESISTOR RG 4K75 +-1% TK100	1206	RG 0007.5820.00	PHILIPS_CO RC	02	
R329	RESISTOR CHIP RG 4K75 +-1% TK100	1206	RG 0007.5820.00	PHILIPS_CO RC	02	
R330	RESISTOR CHIP RG 4K7 +-1% TK100	0603	0009.7020.00	PHILIPS_CO RC	22 H	
R331	SMD RESISTOR EIAO603 RG 4K7 +-1% TK100	0603	0009.7020.00	PHILIPS_CO RC	: 22 H	
R333	SMD RESISTOR EIAO603 RG 10,0 OHM+-1%TK100	1206	RG 0006.8649.00	DRALORIC CR	1206	
R334	CHIP -RESISTOR RG 3,01KOHM+-1%TK100	1206	RG 0007.5772.00	PHILIPS_CO RC	02	
R335		1206	RG 0007.5820.00	PHILIPS_CO RC	02	
R336	RESISTOR CHIP RG 4K75 +-1% TK100	1206	RG 0007.5820.00	PHILIPS_CO RC	02	
R337	RESISTOR CHIP RG O-OHM WIDERSTAND	1206	RG 0007.5108.00	DRALORIC CR	1206	
R338	RESISTOR CHIP O-OHM RG 1KO +-1% TK100	1206	RG 0006.7271.00	ROEDERSTEI D2	5	
R339	CHIP RESISTOR RG O-OHM WIDERSTAND	1206	RG 0007.5108.00	DRALORIC CR	1206	
R341	RESISTOR CHIP O-OHM RG 4K75 +-1% TK100	1206	RG 0007.5820.00	PHILIPS_CO RC	02	
343 R350	RESISTOR CHIP RG 47,5 OHM+-1%TK100	1206	RG 0007.5566.00	_		
R351	RESISTOR CHIP RG 68,1 OHM+-1%TK100	1206	RG 0006.8849.00	ROEDERSTEI D2	5	
R352	CHIP RESISTOR RG 68,1 OHM+-1%TK100	1206	RG 0006.8849.00	ROEDERSTEI D2	5	
R355	CHIP RESISTOR RG 68,1 OHM+-1%TK100	1206	RG 0006.8849.00	ROEDERSTEI D2	5	
R357	CHIP RESISTOR RG 100R +-1% TK100	0603	RG 0009.5334.00	PHILIPS_CO RC	22 H	
R360	SMD RESISTOR EIAO603 RG 475 OHM+-1%TK100	1206	RG 0007.5695.00			
R362	RESISTOR CHIP RG 10,0KOHM+-1%TK100	1206	RG 0007.0793.00	ROEDERSTEI D2:	5	
R363	RG CHIP RESISTOR RG 10,0K0HM+-1%TK100	1206	RG 0007.0793.00	ROEDERSTEI D2	5	
R380	RG CHIP RESISTOR RG 121 OHM+-1%TK100	1206	RG 0006.8903.00	PHILIPS_CO RC	02	
R381	CHIP RESISTOR RG 121 OHM+-1%TK100	1206	RG 0006.8903.00	PHILIPS_CO RC	02	
R382	CHIP RESISTOR RG 33OR +-1% TK100	0603	0009.6960.00	DRALORIC CR	0603	
R383	SMD RESISTOR EIAO603 RG 182 OHM+-1%TK100	0603	0009.9130.00	DRALORIC CR	0603	
R384	SMD RESISTOR EIA0603 RG 825R +-1% TK100	0603	0010.8391.00	PHILIPS_CO RC	22 H	
R385	SMD RESISTOR EIAO603 RG 10R +-1% TK100	0603	RG 0009.5328.00	PHILIPS_CO RC	22 H	
R388	SMD RESISTOR EIAO603 RG 475 DHM+-1%TK100	1206	RG 0007.5695.00	ROEDERSTEI D25	5	
R400	RESISTOR CHIP RG O-OHM WIDERSTAND	1206	RG 0007.5108.00	DRALORIC CR	1206	
R401	RESISTOR CHIP O-OHM RG 100R +-1% TK100	0603	RG 0009.5334.00	PHILIPS_CO RC	22 H	
R405	SMD RESISTOR EIAO603 RG 392R+-1% TK100	0603	0010.9300.00	PHILIPS_CO RC	22 H	
R406	SMD RESISTOR EIAO603 RG 274 DHM+-1%TK100	1206	RG 0007.5637.00	ROEDERSTEI D25	5	
R407	RESISTOR CHIP RG 681 OHM+-1%TK100	1206	RG 0006.9080.00	PHILIPS_CO RC	02	+
R411	CHIP RESISTOR RG 475 OHM+-1%TK100	1206	RG 0007.5695.00	ROEDERSTEI D29	5	
R412	RESISTOR CHIP RG 68,1 OHM+-1%TK100	1206	RG 0006.8849.00	ROEDERSTEI D2	5	
R414	CHIP RESISTOR RS 0,25W200 OHM+-20%	SMD	RS 0007.9590.00	BI_TECHNOL 23	B R TR	
R415	POTENTIOMETER RG 18,2 OHM+-1%TK100	1206	RG 0007.5466.00	PHILIPS_CO RCC	02	
R416	RESISTOR CHIP RG 475 OHM+-1%TK100	1206	RG 0007.5695.00	ROEDERSTEI D2	5	
	RESISTOR CHIP					
	007 0711	) atum	Schalttei	lliste für	Sachnummer	Blatt-Nr.
MEZ1		Date	Parts I		Stock No.	Page

Stock No.

Manufacturer

Designation

contained in

48

ROHDE&SCHWARZ

Š

alle Rechte

Comp. No.

Designation

Comp. No.	Designation			Stock No.	Manufacturer	conte	ined in	
R459	RG 681 OHM+-1%TH CHIP RESISTOR	K100 1206	RG	0006.9080.00	PHILIPS_CO	RCO2		
R460	RG 470R +-1% TK1			0009.6976.00	DRALORIC	CR 0603		
R461	SMD RESISTOR EIA		RG	0007.5950.00	ROEDERSTEI	D25		
R462	RESISTOR CHIP RG 33,2 OHM+-1%1	TK 100 1206	RG	0007.5520.00	ROEDERSTEI	D25		
R463	RESISTOR CHIP RG 332 OHM+-1%TK	K100 1206	RG	0007.5650.00	DRALORIC	CR 1206		
R464	RESISTOR CHIP RG 2,21KOHM+-1%T	TK100 1206	RG	0007.5743.00	ROEDERSTEI	D25		
R465	RESISTOR CHIP RG 475 OHM+-1%TK	K100 1206		0007.5695.00				
R466	RESISTOR CHIP RG 47,5KOHM+-1%T			0007.5950.00				
R467	RESISTOR CHIP RG 18,2 OHM+-1%T			0007.5466.00				
R468	RESISTOR CHIP RG 301 OHM+-1%TK			0007.5400.00	_			
R469	RESISTOR CHIP			0007.9578.00				
	RS 0,25W 50 OHM+							
R470	RG 2,21KOHM+-1%T RESISTOR CHIP			0007.5743.00				
R471	RG 2,21KOHM+-1%T RESISTOR CHIP			0007.5743.00				
R472	RG 1K5 +-1% TK10 SMD RESISTOR EIA	40603		0009.6999.00		CR 0603		
R473	RG 82,5 OHM+-1%T SMD RESISTOR EIA	TK 100 0603 40603		0009.9052.00	DRALORIC	CR 0603		
R474	RG 7K5 +-1% TK1 SMD RESISTOR EIA	100 0603		0010.8440.00	PHILIPS_CO	RC 22 H		
R475	RG 100R +-1% TK1 SMD RESISTOR EIA		RG	0009.5334.00	PHILIPS_CO	RC 22 H		
R476	RG 100R +-1% TK1 SMD RESISTOR EIA	100 0603	RG	0009.5334.00	PHILIPS_CO	RC 22 H		
R477		(100 1206	RG	0006.7271.00	ROEDERSTEI	D25		
R478	RG 330K +-1% TK1 SMD RESISTOR EIA			0009.7114.00	PHILIPS_CO	RC 22 H		
R479	RG 681 OHM+-1%TK		RG	0006.9080.00	PHILIPS_CO	RCO2		
R480	CHIP RESISTOR RG 8K25 +-1% TK1			0010.8456.00	PHILIPS_CO	RC 22 H		
R481	SMD RESISTOR EIA	(100 0603		0009.9498.00	DRALDRIC	CR 0603		
R482	SMD RESISTOR EIA	(100 0603		0009.9498.00	DRALDRIC	CR 0603		
R483	SMD RESISTOR EIA RG 8K25 +-1% TK1	100 0603		0010.8456.00	PHILIPS_CO	RC 22 H		
R484	SMD RESISTOR EIA RG 100 OHM+-1%TK		RG	0006.8884.00	ROEDERSTEI	D25		
R485	CHIP RESISTOR RG 1,82KOHM+-1%T	rK100 1206	RG	0007.5720.00	PHILIPS_CO	RCO2		
R486	RESISTOR CHIP RG 100 OHM+-1%TK	(100 1206	RG	0006.8884.00	ROEDERSTEI	D25		
488 R489	CHIP RESISTOR RG 4K75 +-1% TK			0007.5820.00				Ī
R490	RESISTOR CHIP RG 221 OHM+-1%TK			0007.5614.00		CR 1206		
R491	RESISTOR CHIP RG O-OHM WIDERST			0007.5108.00		CR 1206		
R492	RESISTOR CHIP O- RG 4K75 +-1% TK	-OHM		0007.5820.00				
R493	RESISTOR CHIP RG 47,5 OHM+-1%T			0007.5566.00				
R494	RESISTOR CHIP	(100 1206		0007.3308.00				
R495	CHIP RESISTOR					and the second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second s		
	RG 47,5 OHM+-1%T RESISTOR CHIP			0007.5566.00				
R496	RG 56,2 OHM+-1%T CHIP RESISTOR			0006.8826.00				
R497	RG 56,2 OHM+-1%T CHIP RESISTOR			0006.8826.00				
R498 506	RG 4K75 +-1% TK RESISTOR CHIP			0007.5820.00				
R507	RG 4K7 +-1% TK1 SMD RESISTOR EIA			0009.7020.00	PHILIPS_CO	KC 22 H		
MEZ1	887 3PLU /	Äl Datum Date		Schaltteill Perts lis		Sachnummer Stock No		Blatt-Nr.
		7818	ļ	rents ils	. 101	Stock No.		Page

1035.6501.01 SA

19+

ROHDE&SCHWARZ

48 07.10.99

	Kennz. Comp. No.	Benennung Designation		Sacnnummer Stock No.		esignation	contains	d in
ľ	R509	RG 4K7 +-1% TK100	0603	0009.7020.00	PHILIPS_CO RC	22 H		
	R510	SMD RESISTOR EIA0603 RG 4K75 +-1% TK100	1206	RG 0007.5820.00	PHILIPS_CO RCO	2		1
	R511	RESISTOR CHIP RG 4K7 +-1% TK100	0603	0009.7020.00	PHILIPS_CO RC	22 H		
	R512	SMD RESISTOR EIAO603 RG 4K7 +-1% TK100	0603	0009.7020.00	PHILIPS_CO RC	22 H		
	R513	SMD RESISTOR EIAO603 RG 100R +-1% TK100	0603	RG 0009.5334.00	PHILIPS_CO RC	22 H		
	R514	SMD RESISTOR EIAO603 RG 10,0K0HM+-1%TK100		RG 0007.0793.00	ROEDERSTEI D25	;		
	R515	RG CHIP RESISTOR RG 10,0KOHM+-1%TK100		RG 0007.0793.00	ROEDERSTEI D25	;		
	R516	RG CHIP RESISTOR RG 100R +-1% TK100		RG 0009.5334.00	PHILIPS_CO RC	22 H		
	R517	SMD RESISTOR EIAO603 RG 825 OHM+-1%TK100		RG 0006.7259.00	ROEDERSTEI D25	i l		
	R518	CHIP RESISTOR RG 560R +-1% TK100	0603	0009.9630.00	DRALORIC CR	0603		
	R519	SMD RESISTOR EIAO603	0603	0010.9581.00	PHILIPS_CO RC	22 H		
	R520	SMD RESISTOR EIAO603 RG 4K75 +-1% TK100	3	RG 0007.5820.00				
l	523 R524	RESISTOR CHIP RG 100R +-1% TK100		RG 0009.5334.00		. 1		
		SMD RESISTOR EIAO603 RG 4K75 +-1% TK100	3	RG 0007.5820.00	_			
	R525	RESISTOR CHIP	i	RG 0007.5820.00				
	R526	RG 4K75 +-1% TK100 RESISTOR CHIP		RG 0006.7271.00				
	R527	RG 1KO +-1% TK100 CHIP RESISTOR						
	R528	RG 4K75 +-1% TK100 RESISTOR CHIP		RG 0007.5820.00				
	R529	RG 4K75 +-1% TK100 RESISTOR CHIP		RG 0007.5820.00				
	R530	RG 10,0KOHM+-1%TK100 RG CHIP RESISTOR		RG 0007.0793.00				
vor.	R531	RG 10,0K0HM+-1%TK100 RG CHIP RESISTOR		RG 0007.0793.00				
Rechte	R533	RG 4K75 +-1% TK100 RESISTOR CHIP		RG 0007.5820.00				
a E	R535	RG 10,0K0HM+-1%TK100 RG CHIP RESISTOR		RG 0007.0793.00				
ir uns	R536	RG 10,0K0HM+-1%TK10		RG 0007.0793.00		1		
wir	R540	RG 274 OHM+-1%TK100 RESISTOR CHIP		RG 0007.5637.00				Ì
	R541	RG 475 OHM+-1%TK100 RESISTOR CHIP		RG 0007.5695.00				
	R542	RG 274 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5637.00				
	R543	RG 475 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5695.00		5		
	R544	RG 1,0M0HM+-1%TK100 CHIP RESISTOR	1206	RG 0815.7532.00	DRALORIC CR	C 1206		
	R545	RG 10,0K0HM+-1%TK10 RG CHIP RESISTOR	0 1206	RG 0007.0793.00				
	R546	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00				
	R547	RG 10,0K0HM+-1%TK10 RG CHIP RESISTOR	0 1206	RG 0007.0793.00		1		
	R548	RG 3,01KOHM+-1%TK10 RESISTOR CHIP	0 1206	RG 0007.5772.00				
	R550	RG 475 DHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5695.00		į.		
	R551	RG 10,0KOH+-0,1%TK2 SMD-RESISTOR	1206	0009.7666.00	PHILIPS_CO MP	C 01		
	R552	RG 12,0KOH+-0,1%TK2 SMD-RESISTOR	1206	0009.7620.00	PHILIPS_CO MP	C 01		
	R553	RG 100 OHM+-0,1%TK2 SMD-RESISTOR	25 1206	0009.8033.00	PHILIPS_CO MP	C 01		
	R554	RG 10,0 0HM+-1%TK10	00 1206	RG 0006.8649.00	DRALORIC CR	1206		
	R555	CHIP -RESISTOR RG 4K75 +-1% TK100	1206	RG 0007.5820.00	PHILIPS_CO RO	:02		
	R556	RESISTOR CHIP RG 4K75 +-1% TK100	1206	RG 0007.5820.00	PHILIPS_CO RO	002		
		RESISTOR CHIP						
	11574	887 3PLU ÄI	Datum		illiste für	Sachnummer Stock No.		Blatt-Nr. Page
393	MEZ 1	887 3PLU   ÄI	Date	Parts	list for			
0026-0693	<b>₽</b>	DE&SCHWARZ 48	07.10.99	EE REFERENZ_	STEPSYNTHESE	1035.6501.01	i SA	20+
.0.	NUM	JEQUUTANE		-		Ĭ.,		

Comp. No.	Designation	Stock No.	Manufacturer I	Designation	contained in
R558	RG 4K75 +-1% TK100 1206	RG 0007.5820.00			
560 R561	RESISTOR CHIP RG 20,0KOHM+-1%TK100 1206	RG 0007.5866.00	DRALORIC CR	1206	
R562	RESISTOR CHIP RG 10,0KOHM+-1%TK100 1206				
1	RG CHIP RESISTOR	RG 0007.0793.00			\
R563	RG 10,0KOHM+-1%TK100 1206 RG CHIP RESISTOR	RG 0007.0793.00	ROEDERSTEI D2	5	
R564	RG 27,4 OHM+-1%TK100 1206	RG 0007.5508.00	ROEDERSTEI D2	5	
R565	RESISTOR CHIP RG 162 OHM+-1%TK100 1206	RG 0006.8932.00	PHILIPS_CO RC	02	
R566	CHIP RESISTOR   RG 10,0KOHM+-1%TK100 1206	RG 0007.0793.00			
R567	RG CHIP RESISTOR RG 4K7 +-1% TK100 0603				
	SMD RESISTOR EIAO603		PHILIPS_CO RC		
R568	RG 3,01KOHM+-1%TK100 1206 RESISTOR CHIP	RG 0007.5772.00	PHILIPS_CO RC	02	
R569	RG 1KO +-1% TK100 1206 CHIP RESISTOR	RG 0006.7271.00	ROEDERSTEI D2	5	
R570	RG 4K75 +-1% TK100 1206	RG 0007.5820.00	PHILIPS_CO RC	02	
R571	RESISTOR CHIP RG 475 OHM+-1%TK100 1206	RG 0007.5695.00	ROEDERSTEI D25	5	
R572	RESISTOR CHIP RL 0,40W 68 OHM2% UNGEW.	RL 0092.5933.00		A 0204	
R573	RESISTOR				
	SMD RESISTOR EIAO603	0009.6976.00		0603	
R574	RG 470R +-1% TK100 0603 SMD RESISTOR EIA0603	0009.6976.00	DRALORIC CR	0603	
R575	RG 4K7 +-1% TK100 0603 SMD RESISTOR EIA0603	0009.7020.00	PHILIPS_CO RC	22 H	
R576	RG 100 OHM+-0,1%TK25 1206	0009.8033.00	PHILIPS_CO MPO	C 01	
R577	SMD-RESISTOR RG 100R +-1% TK100 0603	RG 0009.5334.00	PHILIPS CO RC	22 H	
R578	SMD RESISTOR EIAO603 RG 6K8 +-1% TK100 0603	0009.7037.00	_	0603	
R579	SMD RESISTOR EIAO603				
	SMD RESISTOR EIAO603		PHILIPS_CO RC		
R580	RG 10,0KDHM+-1%TK100 1206 RG CHIP RESISTOR	RG 0007.0793.00	ROEDERSTEI D25	5	
R581	RG 10,0K0HM+-1%TK100 1206 RG CHIP RESISTOR	RG 0007.0793.00	ROEDERSTEI D25	5	Ì
R582	RG 6K8 +-1% TK100 0603	0009.7037.00	DRALORIC CR	0603	
R583	SMD RESISTOR EIAO603 RG 270R +-1% TK100 0603	0010.9581.00	PHILIPS_CO RC	22 H	
R584	SMD RESISTOR EIAO603 RG 39,2KOH+-0,1%TK25 1206	0009.8027.00	PHILIPS_CO MPC	. 01	
R587	SMD-RESISTOR RG O-OHM WIDERSTAND 0603		PHILIPS_CO RC2		1
	SMD RESISTOR EIAO603				İ
R588	RS 0,25W 5KOHM +-20% SMD POTENTIOMETER	RS 0007.9632.00	BI_TECHNOL 23	B R TR	ľ
R589	RG 475 OHM+-1%TK100 1206 RESISTOR CHIP	RG 0007.5695.00	ROEDERSTEI D25	5	
R590	RG 22,1 OHM+-1%TK100 1206 RESISTOR CHIP	RG 0007.5489.00	ROEDERSTEI D25	j	
R591	RG 33K +-1% TK100 0603	0009.7066.00	PHILIPS_CO RC	22 H	
R592	SMD RESISTOR EIA0603 RG 100R +-1% TK100 0603	RG 0009.5334.00	PHILIPS CO RC	22 H	
R593	SMD RESISTOR EIA0603 RG 470R +-1% TK100 0603	0009.6976.00	_	0603	
1	SMD RESISTOR EIAO603				
R597	RG 27K4 +-1% TK100 0603 SMD RESISTOR EIA0603	1097.6392.00		0603	
R598	RG 27K4 +-1% TK100 0603 SMD RESISTOR EIA0603	1097.6392.00	DRALORIC CR	0603	-
R599	RG 1KO +-1% TK100 0603 SMD RESISTOR EIA0603	RG 0009.5340.00	PHILIPS_CO RC	22 H	
R600	RG 47R +-1% TK100 0603	0009.6924.00	PHILIPS_CO RC	22 H	
602 R603	SMD RESISTOR EIAO603 RG 100R +-1% TK100 0603	RG 0009.5334.00	PHILIPS_CO RC	22 H	İ
R604	SMD RESISTOR EIA0603 RG 470R +-1% TK100 0603	0009.6976.00	_	0603	
	SMD RESISTOR EIAO603				
R605	RG 4K7 +-1% TK100 0603 SMD RESISTOR EIA0603	0009.7020.00	PHILIPS_CO RC	22 M	1
1					
MEZ1	887 3PLU Äl Datum	Schaltteillis	ste für	Sachnummer	Blatt-Nr.
	OB/ SPLU Al Date	Parts list		Stock No.	Page

Blatt-Nr. 1035.6501.01 SA 22+ EE REFERENZ_STEPSYNTHESE 48 07.10.99 ROHDE&SCHWARZ

ยลกลภกแก

Jel

Comp. No.	Designe	tion			Stock No.	Manufacturer	C	esignation	contain	ed in
R688	RG 121K +-1% T SMD RESISTOR E				1097.6340.00	PHILIPS_CO	RC	22 H		
R690	RG 221 KOHM+-1 RESISTOR CHIP			RG	0007.6004.00	PHILIPS_CO	RCC	)2		
R691	RG 12K1 +-1% T SMD RESISTOR E				0010.8462.00	DRALORIC	CR	0603		
R692	RG 470R +-1% T SMD RESISTOR E	K 10	0 0603		0009.6976.00	DRALORIC	CR	0603		
R693	RG 68K +-1% TK SMD RESISTOR E	100	0603		0009.7089.00	PHILIPS_CO	RC	22 H		
R694	RG 4K7 +-1% TI SMD RESISTOR E	K 10	0 0603		0009.7020.00	PHILIPS_CO	RC	22 H		
R697	RG 3,3MOHM+-5% CHIP RESISTOR				0007.9990.00	ROEDERSTEI	D 2	25		
R698	RG 1,0MOHM+-1% CHIP RESISTOR	TK 1	00 1206	RG	0815.7532.00	DRALORIC	CRO	1206		
V5	AK BFR93A NPN	1	2V 35MA	AK	0007.7030.00	VALVO	BFF	93A		
V10	6 GHZ WIDEBAND AE HSMS2810		ANSISTOR CHOTTKY		0520.7340.00					
V14	SCHOTTKY DIODE AE BB909B 2	5/	3PF CDI	AE	0092.9600.00			09B		
V35	TUNING DIODE AK BFR96S N	15	V 100MA		0644.0830.00	İ	BFR	965		
V60		-D	25V JFET		1036.4577.00					
V69	JUNCTION FET AE HSMS2810	S	СНОТТКҮ		0520.7340.00					
V70	SCHOTTKY DIODE AM SST310 N	-D	25V JFET		1036.4577.00					
V80		-D :	25V JFET		1036.4577.00			į		
V90	JUNCTION FET AM SST310 N-	-D :	25V JFET		1036.4577.00					
V95		12	V 100MA	AK	0007.3434.00		BSV			
V105		N 6	OV 4AO	AL	0010.1645.00	SGS-THOMSO	BD4	39		
V205	TRANSISTOR AK BFG97 NPN	15			0008.1741.00	PHILIPS	BFG	97		
V206	5 GHZ WIDEBAND AK BFG97 NPN	15	/ 100MA		0008.1741.00	PHILIPS	BFG	97		
V240	5 GHZ WIDEBAND AE HSMS2810	_	ANSISTOR CHOTTKY		0520.7340.00	HEWLETT_PA	HSM	S-2810		ĺ
V255	SCHOTTKY DIODE AK BFG97 NPN		/ 100MA		0008.1741.00	PHILIPS	BFG	97		
V260	5 GHZ WIDEBAND AK BFG97 NPN	151	/ 100MA		0008.1741.00	PHILIPS	BFG	97		
V262	5 GHZ WIDEBAND AE HSMS2810		CHOTTKY		0520.7340.00	HEWLETT_PA	HSM	S-2810		
V263	AE HSMS2810	S	CHOTTKY		0520.7340.00	HEWLETT_PA	HSM	S-2810		ı
V265	SCHOTTKY DIODE AK BSR13 N	301	/ 800MA	AK	0007.2209.00	VALVO	BSR	13		1
V279		1 0	.3W ZDI	AE	0303.9160.00	SEMITRONIC	1N4	696		j
V280	ZENER DIODE AK BFG97 NPN E GHZ WIDERAND	15\	/ 100MA		0008.1741.00	PHILIPS	BFG	97		
V285	5 GHZ WIDEBAND AK BFG97 NPN 5 GHZ WIDEBAND	15\	/ 100MA	-	0008.1741.00	PHILIPS	BFG	97		
V290	5 GHZ WIDEBAND AE BAR14-1 DUAL PIN DIODE		NSISIUR 100V PIN		0820.3283.00	SIEMENS	BAR	14-1 (-A772)		
V295	AE BAR14-1 DUAL PIN DIODE	- '	100V PIN		0820.3283.00	SIEMENS	BAR	14-1 (-A772)		
V299	AE HSMS2810 SCHOTTKY DIODE	s	CHOTTKY		0520.7340.00	HEWLETT_PA	HSM.	S-2810		
V320	AK BSR12 P TRANSISTOR	15\	/ 100MA	AK	0007.2067.00	PHILIPS_SE	BSR	12		
V321	AK BSR12 P TRANSISTOR	15\	/ 100MA	AK	0007.2067.00	PHILIPS_SE	BSR	12		
V322	AE HSMS2810 SCHOTTKY DIODE	s	CHOTTKY		0520.7340.00	HEWLETT_PA	HSM.	5-2810		
V323	AE HSMS2810 SCHOTTKY DIODE	S	CHOTTKY		0520.7340.00	HEWLETT_PA	HSM.	S-2810		- 1
V325	AE HSMS2810 SCHOTTKY DIODE	S	CHOTTKY		0520.7340.00	HEWLETT_PA	HSM	S-2810		
	JOHOTTKI DIODE									
			,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,							
MEZ1	887 3PLU	Äl	Datum Date		Schaltteilli Parts lis			Sachnummer Stock No.	5	iatt-Nr. Page
I				ı						

1035.6501.01 SA

23+

ROHDE&SCHWARZ

48 07.10.99

	Kennz. Comp. No.	Benennung Designation		Stock No.	Manufacturer	Desig	ation	containe	d In
	V361	AE HSMS2810 SCHOTTI	KY	0520.7340.00	HEWLETT_PA H	HSMS-	2810		
	V380	SCHOTTKY DIODE AK BFR93A NPN 12V 3		K 0007.7030.00	VALVO E	BFR93	<b>\</b>		
	V383	6 GHZ WIDEBAND TRANSISTAE 1N4691 6V2 0.3W Z	DI A	E 0568.1220.00	AMERICAN_P	1N469	1		
	V400	ZENER DIODE AE BBY40 30/05PF VHF-0		E 0007.2109.00	VALVO I	BBY40			
	V401	VHF VARIABLE CAPAC. DIE AE BB620 45/03PF C		0848.5251.00	SIEMENS I	BB620			
	V402	TUNING DIODE AE BB620 45/03PF C	DI	0848.5251.00	SIEMENS I	BB620			
	V403	TUNING DIODE AE BBY40 30/05PF VHF-		E 0007.2109.00	VALVO I	BBY40			
	V404	VHF VARIABLE CAPAC. DI AE BBY40 30/05PF VHF-	CDI A	E 0007.2109.00	VALVO I	BBY40			
	V405	VHF VARIABLE CAPAC. DI AE BB620 45/03PF C		0848.5251.00	SIEMENS	BB620			
	V406	TUNING DIODE AE BB620 45/03PF C	ID	0848.5251.00	SIEMENS	BB620			
	V407	TUNING DIODE AE BBY40 30/05PF VHF-		E 0007.2109.00	VALVO	BBY40			
	V408	VHF VARIABLE CAPAC. DI AM SST310 N-D 25V J		1036.4577.00	SILICONIX	SST31	0-Т1		
	V418	JUNCTION FET AE BZV55/C5V1 0.5W Z	DI A	E 0006.9839.00	PHILIPS_SE	BZV55	B5V1 (GEG)		
	V420	ZENER DIODE AK BFS17 N 15V 25		K 0010.6460.00	VALVO	BFS17			
	V422	1 GHZ WIDEBAND TRANSIS AE BZV55/C5V1 0.5W Z	DI A	E 0006.9839.00	PHILIPS_SE	BZV55	B5V1 (GEG)		
	V424	ZENER DIODE AE BZV55/C5V1 0.5W Z	DI A	E 0006.9839.00	PHILIPS_SE	BZV55	B5V1 (GEG)		
	V425	ZENER DIDDE AE HSMS2800 SCHOTT	KY A	E 0836.8421.00	HEWLETT_PA	HSMS-	2800(#L31)		
	V426	SCHOTTKY DIODE AE HSMS2800 SCHOTT	KY A	E 0836.8421.00	HEWLETT_PA	HSMS-	2800(#L31)		
	V435	SCHOTTKY DIODE AK BFQ81 N 16V 30	AMC	0920.1717.00	SIEMENS	BFQ81	(-F1049)		
vor.	V437	TRANSISTOR AE HSMS2810 SCHOTT	'KY	0520.7340.00	HEWLETT_PA	HSMS-	2810		
Rechte	V460	SCHOTTKY DIODE AE BZV55/C5V1 0.5W Z	DI A	E 0006.9839.00	PHILIPS_SE	BZV55	B5V1 (GEG)		
alle Re	V466	ZENER DIODE AE HSMS2813 2XSCHOTT	KY A	E 0824.3542.00	HEWLETT_PA	HSMS2	813 L31		
SCI	V473	SCHOTTKY DIODE AE HSMS2800 SCHOTT SCHOTTKY DIODE	rky A	AE 0836.8421.00	HEWLETT_PA	HSMS-	2800(#L31)		
¥	V475	AK BSR13 N 30V 800 TRANSISTOR	AMC AMC	AK 0007.2209.00	VALVO	BSR 1	3		
	V514	AE HSMS2810 SCHOTT SCHOTTKY DIODE	rky	0520.7340.00	HEWLETT_PA	HSMS-	2810		
	V518	AK BSV52 N 12V 100 TRANSISTOR	A AMC	AK 0007.3434.00		BSV52			
	V530	AE HSMS2810 SCHOTT SCHOTTKY DIODE	ļ	0520.7340.00		HSMS-	-2810		
	V531	AE BZV55/C4V7 0.5W Z ZENER DIODE	ZDI /	AE 0006.9822.00		BZV55			
	<b>V5</b> 35	AE HSMS2810 SCHOT		0520.7340.00					
	V536	AE BZV55/C4V7 0.5W ZENER DIODE		AE 0006.9822.00		BZV59			
	V540	AE HSMS2800 SCHOT		AE 0836.8421.00					
	V555	AE BZV55/10V 0,5W I		AE 0006.9880.00					
	V566	AD BAS32 75V HIGH-SPEED DIODE		AD 0006.7288.00			2 (L)		
	V570	AE BZV55/C5V6 0.5W ZENER DIODE		AE 0006.9845.00			5B5V6		•
	V571	AE HSMS2800 SCHOT SCHOTTKY DIODE		AE 0836.8421.00					
	V575	AE BZV55/C3V9 0,5W ZENER DIODE		AE 0006.9816.00					
	V582	AK BSV52 N 12V 10 TRANSISTOR		AK 0007.3434.0		BSV5			
	V583	AE HSMS2800 SCHOT SCHOTTKY DIODE	Ì	AE 0836.8421.0					
	V584	AE HSMS2800 SCHOT SCHOTTKY DIODE	TKY	AE 0836.8421.0	U HEWLETT_PA	I IISBIS	2800(#231)		
	MEZ1		atum Date		illiste für list for		Sachnummer Stock No.		Blett-Nr. Page
5.0026-0893	ROHI	DE&SCHWARZ 48 07.	10.99	EE REFERENZ_	STEPSYNTHESE		1035.6501.0	1 SA	24+
5.0						ļ			

	Comp. No.	Designation	$\Box$	Stack No.	Manufacturer	Designation	contained in
	V585	AK BSV52 N 12V 100MA TRANSISTOR	Ai	K 0007.3434.00		BSV52	
	V586	AK BSV52 N 12V 100MA	A	K 0007.3434.00	PHILIPS	BSV52	A
	V587	TRANSISTOR AE HSMS2810 SCHOTTKY		0520.7340.00	HEWLETT_PA	HSMS-2810	
	V590	SCHOTTKY DIODE AK BSV52 N 12V 100MA	A	K 0007.3434.00	PHILIPS	BSV52	
	V660	TRANSISTOR AE BZV55/C5V6 O.5W ZDI	A	E 0006.9845.00	PHILIPS	BZV55B5V6	
	V697	ZENER DIODE AE HSMS2800 SCHOTTKY	A	E 0836.8421.00	HEWLETT_PA	HSMS-2800(#L31)	
	V698	SCHOTTKY DIODE AE HSMS2800 SCHOTTKY	A	E 0836.8421.00	HEWLETT_PA	HSMS-2800(#L31)	
		SCHOTTKY DIODE		- *=			
	W1	DX KABEL W1		1035.6599.00			
	X70	FP STECKERLEISTE 32POL. CONNECTOR 32P.				16 8457 064 002 027	
	X71 75	FJ EINBAUSTECKER F.GS SMI ANGLE CONNECTOR		J 0602.8804.00		81.1524.201	
	X77	FJ EINBAUSTECKER F.GS SME ANGLE CONNECTOR		J 0602.8804.00		81.1524.201	
	X330	VL EINPRESSSTIFT 5,6 PIN		L 0010.7250.00		1-928776-5 ,	
	X331	VL EINPRESSSTIFT 5,6 PIN		L 0010.7250.00		1-928776-5	
	X405 407	VL EINPRESSSTIFT 5,6 PIN		L 0010.7250.00		1-928776-5	
	X460 462	VL EINPRESSSTIFT 5,6 PIN		L 0010.7250.00		1-928776-5	
	X540 542	VL EINPRESSSTIFT 5,6 PIN	VL	L 0010.7250.00	AMP	1-928776-5	
	Z1	LD T-FILTER 3,3NF SMI	,	1039.1362.00	MURATA	NFM61R2OT332T1	
_	Z95	SMD-FILTER LD T-FILTER 3,3NF SMI	,	1039.1362.00		NFM61R2OT332T1	
raften 'or.	Z100	SMD-FILTER LD T-FILTER 3,3NF SMI		1039.1362.00		NFM61R2OT332T1	
ge ber chta v	104 Z210	SMD-FILTER LD T-FILTER 3,3NF SMC		1039.1362.00		NFM61R2OT332T1	
ese Unterlage behalten uns alle Rechte vor.	Z280	SMD-FILTER LD T-FILTER 3,3NF SME		1039.1362.00		NFM61R20T332T1	
uns a	Z382	SMD-FILTER LD T-FILTER 3,3NF SMI		1039.1362.00		NFM61R2OT332T1	
Für diese t wir uns	Z384	SMD-FILTER LD T-FILTER 3,3NF SME		1039.1362.00		NFM61R20T332T1	
_	Z390	SMD-FILTER LD T-FILTER 3,3NF SME		1039.1362.00		NFM61R20T332T1	
	392 Z550	SMD-FILTER LD T-FILTER 3,3NF SMD		1039.1362.00		NFM61R20T332T1	
	<b>Z560</b>	SMD-FILTER LD T-FILTER 3,3NF SMI		1039.1362.00		NFM61R20T332T1	
	Z600	SMD-FILTER LD T-FILTER 100PF SME		1039.1356.00		NFM61R00T101T1	
	604 Z605	SMD-FILTER LD T-FILTER 3,3NF SME		1039.1362.00		NFM61R20T332T1	
	Z650	SMD-FILTER LD T-FILTER 100PF SMD		1039.1356.00		NFM61R00T101T1	
		SMD-FILTER		1000	lino (cr	Na mo inco i i o i i	•
							<b>!</b>
	i (						
	i l						
						The state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the s	
	<u> </u>		-				

95.0026-0693

MEZ1	887 3PLU	Äl	Datum Date	Schaltteilliste für Parts list for	Sachnummer Stock No.	Blatt-Nr. Page
ROHDE &	SCHWARZ	48	07.10.99	EE REFERENZ_STEPSYNTHESE	1035.6501.01 SA	25-

2				
		<i>y</i> -		
				-4
				1



# XY-Liste

# **XY List**

## Erklärung der Spaltenbezeichnungen:

el. Kennz. Bauelement-Kennzeichen

Seite Leiterplatten-Seite, auf der sich das

**Bauelement befindet** 

X/Y Koordinaten (in Millimeter) des Bauelementes auf der

Leiterplatte bezogen auf den Nulipunkt

Planq., Bl. Planquadrat und Seite des Schaltbildes

für das jeweilige Bauelement

## **Explanation of column designations:**

Part Identification of instrument part

Side Side of the PC board on which instrument part is

positioned

X/Y Coordinates (in units of millimeters) of the component

on the PC board in reference to zero point

Sqr, Pg Square and page of the diagram for

the respective instrument part

2			
			0.3

Part	Side	X	Y	Sqr	Pg	Part	Side	Х	Y	Sqr	Pg	Part	Side	X	Y	Sqr	₽g
		20	126	3D	2	N100	В	91	63	4B	2	P575	 В	88	97	12F	<b>-</b>
B20 C400	В	182	58	7D	5	N380		164		11E	4	_	В	88	95	12F	6
D31A		231	43	4D	4	N570	В		114			P580		82	141	10E	6
D610		130	52	5F	7	P10	В		107	2E	2	R254		284		6C	3
K1-A	В		23	8C	6	P40	В	23	77	5D	2	R414		184	39	8C	5
	В	57	2.5	8C	6	P41	В	25	77	5D	2	R441		154	61		5
K1-B	70	37	107	2E	2	P200		199		2E	3	R469		262	95	2D	5
L5			120	4D	2	P201		199		2E	3	R588	В		138	6E	6
L20	В		87	5E	2	P201			139	3E	3	X70A		189	11	7D	
L35	В		133	3E	3	P221			142	3E	3	X70B		189	11	2C	2
L206					3	P250		281		5E	3	X71	B		15	9C	2
L230			132	4D		!				5E	3	X72	В		15		2
L231			119	4E	3	P251		284				X72   X73	В		15	7C	6
L234			125	4D	3	P255		272		11E	3	!	В	55	15	7B	6
L235			138	5D	3	P256		272		11E	3	X74		245		12C	
L251			136	5D	3	P265			111	7E	3	X75					
L265		291	98	8E	3	P266			114	7E	3	X77		271		12C	
L266		275	91	8F	3	P360			107		4	X330		247	62	5E	
L267		280	88	8E	3	P361			107		4	X331		250	62		
L268		291	85	8E	3	P390			111		4	X405		193	73		
L275		281	63	9E	3	P391			111		4	X406		196	73	8E	
L277		281	43		3	P450		172	36	7A	5	X407		198	73		
L282	В	278	45		3	P451	В	172	38	7A	5	X460		231	78	1B	
L285	В	298	52	8C	3	P460		163	90	11E	5	X461		231	81		
L286	В	290	28	8C	3	P461	В	163	88	12E	5	X462		231	83		
L290	В	290	18	9C	3	P465	В	249	88	4E	5	X540			134		
					_	1 5466	12	246	88	4E	5	X541	В	54	134	6C	6
L406	В	203	60	7D	5	P466						1					
L421 L442 	B B	181	33 19	8B 9C	5 5	P520 P525 P525 PFFFFFFFFFFFFFFFFFFFFFFFFFFFF	B B  uteil	67 67  e /	67 74  Non	3C 4C  -Ser	6 6  vice	X542   + -Releva	B	51 Compo	134  onen	6C  ts	
L421 L442	B B  Nicht	181 215 	33 19  rvic	8B 9C  e-Re:	5 5  leva	P520 P525 P525 P525 PFFFFFFFFFFFFFFFFFFFFFFF	B B  uteil	67 67  e /	67 74  Non	3C 4C  -Ser	6 6  vice	X542   + -Releva +	B	51 Compo	134  onen	6C  ts 	
L421 L442	B B  Nicht	181 215 	33 19  rvic	8B 9C  e-Re:	5 5  leva	P520 P525 P525 P525 PFFFFFFFFFFFFFFFFFFFFFFF	B B  uteil	67 67  e /	67 74  Non	3C 4C  -Ser	6 6  vice	X542   + -Releva	B	51 Compo	134  onen	6C  ts 	
L421 L442  Part	B B  Nicht	181 215 	33 19  rvic	8B 9C  e-Re: Sqr	5 5  leva	P520 P525 P525 P525 PFFFFFFFFFFFFFFFFFFFFFFF	B B  uteil  Side	67 67 -e /	67 74  Non	3C 4C  -Ser  Sqr	6 6  vice	X542   + -Releva +	B	51 Compo	134  onen  Y	6C  ts 	Po
L421 L442	B B  Nicht  Side	181 215 	33 19  rvice  Y	8B 9C  e-Re: Sqr	5 5  leva Pg	P520   P525 + nte Bar +   Part	B B uteil	67 67  e /  e X	67 74  Non  Y	3C 4C  -Ser  Sqr 8E	6 6  vice  Pg 	X542 	B ant ( Side	51 Compo	134  onen  Y	6C  ts  Sqr 	 Pg
L421 L442  Part	B B Nicht	181 215  	33 19  rvice  Y	8B 9C  e-Re: Sqr 1D 2E	5 5 Leva Pg	P520   P525 + nte Bar +   Part +   C55	B B uteil Side	67 67  e / X  188 176	67 74  Non  Y 	3C 4C  -Ser  Sqr  8E 7E	6 6  vice  Pg  2	X542 	B ant (	51 Compo	134  onen  Y  43 42	6C  ts  Sqr  10B 9B	Pg
L421 L442 Part	B B  Nicht  Side  A B	181 215 	33 19  rvic  Y  118 116	8B 9C  e-Re: Sqr 1D 2E 2E	5 5 leva Pg 2	P520   P525 + nte Bar +   Part +   C55   C56	B B uteil Side B B	67 67  e / X  188 176 184	67 74  Non  Y  139	3C 4C  -Ser  Sqr  8E 7E 8E	6 6  vice  Pg 2 2	X542 	B ant (	51 Compo	134  onen  Y  43 42 68	6C  ts  Sqr  10B 9B 4B	Pc 2
L421 L442  Part C1 C3 C4	B B  Nicht Side  A B A	181 215  	33 19  rvice  Y  118 116 100	8B 9C  e-Red Sqr 1D 2E 2E 2D	5 5 leva  Pg 2 2	P520   P525 +   Part   C55   C56   C65	B B uteil Side B B A B	67 67  e / X  188 176 184 188	67 74  Non  Y  139 136 123	3C 4C  -Ser  Sqr  8E 7E 8E	6 6  vice  Pg  2 2 2 2	X542 	B ant ( Side A A B	51 Compo X 47 40	134  onen  Y  43 42 68 52	6C  ts  Sqr  10B 9B 4B 3C	Pg
L421 L442 Part C1 C3 C4	B B Nicht Side	181 215 	33 19  rvice Y  118 116 100 118	8B 9C e-Rel Sqr 1D 2E 2E 2D 2D	5 5 leva Pg 2 2 2	P520   P525 +   Part   C55   C56   C65   C67	B B uteil Side B B A B	67 67  e / X  188 176 184 188	67 74  Non  Y  139 136 123 118	3C 4C  -Ser  Sqr  8E 8E 8E	6 6 vice Pg 2 2 2 2	X542 	B ant C Side A A B B	51 Compo X 47 40 101 114	134  onen Y  43 42 68 52 41	6C  ts  Sqr  10B 9B 4B 3C 2C	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442 Part C1 C3 C4 C7	B B Nicht Side	181 215 	33 19  rvice  Y  118 116 100 118 106	8B 9C e-Rel Sqr 1D 2E 2E 2D 2D 3E	5 5 leva Pg 2 2 2 2	P520   P525 + nte Bar +   Part +   C55   C56   C65   C67   C68	B B uteil Side B B A B	67 67  E X  188 176 184 185 21	67 74  Non  Y  139 136 123 118	3C 4C  -Ser  Sqr 8E 7E 8E 8E 8D 8D	6 6 vice  Pg  2 2 2 2 2	X542 	Bant Constitution BAAABBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB	51 Compo X 47 40 101 114 114	134  onen Y  43 42 68 52 41 64	6C  ts  Sqr  10B 9B 4B 3C 2C 2B	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442 Part C1 C3 C4 C7 C8	B B Nicht Side A B A A	181 215 	33 19  rvic-  Y  118 116 100 118 106	8B 9C e-Rel Sqr 1D 2E 2E 2D 2D 3E 3C	5 5 leva  2 2 2 2 2 2	P520   P525 + nte Bar +   Part +   C55   C56   C65   C67   C68   C69	B B uteil Side B B A B B	67 67 67 8 X 188 176 184 188 185 21	67 74  Non  139 136 123 118 21 140	3C 4C  -Ser  8E 7E 8E 8E 8D 8D	6 6 vice Pg 2 2 2 2 2	X542 	Bant Constitution BAAABBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB	51 Compo X 47 40 101 114 114	134  onen Y  43 42 68 52 41 64 75	6C  ts  Sqr  10B 9B 4B 3C 2C 2B 2B	Pc 22 22 22 22 22 22 22 22 22 22 22 22 22
L421 L442 Part C1 C3 C4 C7 C8 C10 C15	B B Nicht Side A B A A A	181 215 	33 19  rvic- Y  118 116 100 118 106 107	8B 9C  e-Rel Sqr 1D 2E 2E 2D 2D 3E 3C 4D	5 5 1eva Pg 2 2 2 2 2 2	P520   P525 + nte Bar +   C55   C56   C65   C67   C68   C69   C70	B B uteil Side B B A B A A	67 67 67 8 / 188 176 184 188 185 21 59	67 74  Non  139 136 123 118 21 140	3C 4C  -Ser  8E 7E 8E 8E 8D 8D 8D	6 6  vice  2 2 2 2 2 2 2	X542 	Bant Considerable BAABBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB	51 Compo E X 47 40 101 114 114 114	134  onen  43 42 68 52 41 64 75	6C  ts  Sqr  10B 9B 4B 3C 2C 2B 2B	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442 Part C1 C3 C4 C7 C8 C10 C15 C20	B B Nicht Side A A A A A	181 215 	33 19  rvic  118 116 100 118 106 107 101 115 121	8B 9C  sqr 1D 2E 2E 2D 2D 3E 3C 4D 4D	5 5 1eva  2 2 2 2 2 2 2 2	P520   P525   P525   P525   Part   Part   C55   C56   C65   C67   C68   C69   C70   C71	B B uteil Side B B A B A A	67 67 67 8 / 188 176 184 188 185 21 59	67 74  Non  139 136 123 118 118 21 140 25	3C 4C  -Ser  8E 7E 8E 8E 8D 8D 8D	6 6  vice  2 2 2 2 2 2 2 2	X542 	Bant (Side	51 Compo X 47 40 101 114 114 112 102	134  onen Y  43 42 68 52 41 64 75 49	6C ts Sqr 10B 9B 4B 3C 2C 2B 2B 2B	Po 22 22 22 22 22 22 22 22 22 22 22 22 22
L421 L442 Part C1 C3 C4 C7 C8 C10 C15 C20 C21	B B Nicht Side A A A A A	181 215 	33 19  rvic  Y  118 116 100 118 106 107 101 115 121 124	8B 9C  e-Re: Sqr 1D 2E 2E 2D 2D 3E 3C 4D 4D	5 5 	P520   P525   P525   P525   Part   C55   C56   C65   C67   C68   C69   C70   C71	B B Uteil Side B B A B A A	67 67  e / 188 176 184 188 185 21 59 12 176 20	67 74  Non  139 136 123 118 21 140 25 121 39	3C 4C  -Ser  8E 7E 8E 8D 8D 8D 7D	6 6  vice  2 2 2 2 2 2 2 2 2	X542 	Bant (Side AABBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB	51 Compo X 47 40 101 114 114 112 102 110	134  onen Y  43 42 68 52 41 64 75 49	6C ts Sqr 10B 9B 4B 3C 2C 2B 2B 2A 11C	Po 22 22 22 22 22 22 22 22 22 22 22 22 22
L421 L442 Part C1 C3 C4 C7 C8 C10 C15 C20 C21 C22	B B C C C C C C C C C C C C C C C C C C	181 215  	33 19  rvic-  Y  118 116 100 118 106 107 101 115 121 124 119	8B 9C 	5 5 1eva Pg 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   Part   C55   C56   C65   C67   C68   C69   C70   C71   C72   C75	B B Uteil Side B B A B A A A	67 67 67 67 6 / 8 X 188 176 184 185 21 59 12 176 20	67 74  Non  139 136 123 118 21 140 25 121 39 23	3C 4C 4C  Sqr  8E 7E 8E 8D 8D 8D 7D 7D 8C	6 6  vice  Pg 2 2 2 2 2 2 2 2 2	X542 	Bant (Side AABBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB	51 Compo X 47 40 101 114 114 112 102 110 56	134  onen  43 42 68 52 41 64 75 49 84	6C ts 10B 9B 4B 3C 2C 2B 2B 2B 2B 2A 11C	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442 Part C1 C3 C4 C7 C8 C10 C15 C20 C21 C22 C23 C30	B B CONTRIBUTION  Side A A A A A A A A A A A A A A A A A A A	181 215 	33 19  rvic  118 116 100 118 106 107 101 115 121 124 119 81	8B 9C e-Rei e-Rei Sqr 1D 2E 2E 2D 2D 3E 3C 4D 4D 4D 4E	5 5 1eva 2 2 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   P525   C56   C55   C65   C67   C68   C69   C70   C71   C72   C75   C77	B B uteil Side B B A B A B A A B	67 67 67 6 / 6 X 188 176 184 185 21 59 12 176 20 17	67 74 Non 139 136 123 118 21 140 25 121 39 23 20	3C 4C 4C  Sqr 8E 7E 8E 8D 8D 8D 7D 8C 8C	6 6  vice  Pg 2 2 2 2 2 2 2 2 2 2 2	X542 	Bant (Side A A B B B B B B A A A	51 Compo  X 47 40 101 114 114 112 102 110 56 199 201	134  onen  43 42 68 52 41 64 75 49 84 52 124	6C ts Sqr 10B 9B 4B 3C 2C 2B 2B 2B 2A 11C 2D	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442 Part C1 C3 C4 C7 C8 C10 C15 C20 C21 C22 C23 C30 C32	B B COLUMN	181 215 	33 19  rvic  118 116 100 107 101 115 121 124 119 81	8B 9C e-Rel e-Rel Sqr 1D 2E 2E 2D 2D 3E 3C 4D 4D 4D 4E 5D	5 5 1eva 2 2 2 2 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   Part   Part   C55   C66   C65   C67   C68   C69   C70   C71   C72   C75   C78   C79	B B uteil Side B B A B B A B B B B B	67 67 67 67 8 / 188 176 184 185 21 59 12 176 20 17 16	67 74 Non 139 136 123 118 118 21 140 25 121 39 23 20 47	3C 4C 4C  Sqr 8E 7E 8E 8D 8D 7D 7D 8C 7D	6 6 	X542 	Bant Constitution Side A A B B B B B B B B A A A A	51 Compo X 47 40 101 114 112 102 110 56 199 201 216	134 onen 43 42 68 52 41 64 75 49 84 52 124	6C ts 10B 9B 4B 3C 2C 2B 2B 2B 2A 11C 2D 3D	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442 Part C1 C3 C4 C7 C8 C10 C15 C20 C21 C22 C33 C30 C32 C33	B B COLUMN	181 215  18 25 24 15 14 43 44 36 41 31 29	33 19  rvic  118 116 100 118 106 107 101 115 121 124 119 81 86 79	8B 9C e-Rei sqr 1D 2E 2E 2D 3C 4D 4D 4D 4D 4E 5D	5 5 1eva 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   P525   Part   C55   C66   C65   C67   C68   C69   C70   C71   C72   C75   C77   C78   C79   C82	B B Side Side B B A B B A A B B A B B A B B A B B B B B B B B B B B B B B B B B B B B	67 67 67 68 7 188 176 184 185 21 59 12 176 20 176 18	67 74 Non 139 136 123 118 118 21 140 25 121 39 23 20 47 42	3C 4C 4C  Sqr 7E 8E 8E 8D 8D 7D 7D 8C 7D	6 6 	X542 	B Side A A B B B B B B A A A A	51 Compo X 47 40 101 114 112 102 110 56 199 201 216	134 onen 43 42 68 52 41 64 75 49 84 52 124 120 125	6C ts Sqr 10B 9B 4B 3C 2C 2B 2A 11C 2D 2C 3D 2E	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442 Part C1 C3 C4 C7 C8 C10 C15 C20 C21 C22 C23 C33 C33 C38	B B C C C C C C C C C C C C C C C C C C	181 215  18 25 24 15 14 43 44 36 41 31 29 37	33 19  rvic  118 116 100 118 106 107 101 115 121 124 119 81 86 79	8B 9C e-Rei sqr 1D 2E 2E 2D 3E 4D 4D 4D 4D 5E 5D	5 5 1eva 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   P525   Part   Part   C55   C66   C67   C68   C69   C70   C71   C72   C75   C77   C78   C79   C82   C85	B B B B B B B B B B B B B B B B B B B	67 67 67 8 / 188 176 184 185 21 59 12 176 20 17 18 17 18	67 74 Non 139 136 123 118 118 21 140 25 121 39 23 20 47 42 61	3C 4C 4C 4C 4C 4C 5C 4C 5C 7C 8E 8E 8D 8D 7D 7D 8C 7C 7C 7C 7C 7C	6 6 7 9 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	X542 	Bant (Side	51 Compo X 47 40 101 114 114 112 102 110 56 199 201 216 222 102	134 onen 43 42 68 52 41 64 75 49 84 52 124 120 125 137 59	6C ts Sqr 10B 9B 4B 3C 2B 2B 2A 11C 2D 2C 3D 2E 5E	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442  Part  C1 C3 C4 C7 C8 C10 C15 C20 C21 C22 C33 C30 C32 C33 C38 C42	B B Control B B Control B B A A A A A A A A A A A A A A A A A	181 215 	33 19  rvic  118 116 100 118 106 107 101 115 121 124 119 81 86 79 89	8B 9C e-Re: sqr 1D 2E 2E 2D 3E 3C 4D 4D 4D 4E 5D 5E	5 5 1eva Pg 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   P525   Part   C55   C66   C67   C68   C69   C70   C71   C72   C75   C77   C78   C79   C82   C85   C87	B B B B B B B B B B B B B B B B B B B	67 67 67 	67 74 Non 139 136 123 118 118 21 140 25 121 39 23 20 47 42 61 67	3C 4C 4C 4C 4C 4C 4C 4C 4C 4C 4C 4C 4C 4C	6 6 7 9 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	X542 	B ant ( Side A A B B B B B A A A B B B B B B B A A A B B B B B B A A A B B B B B B B B B B B B B B B B B B B B	51 Compo X 47 40 101 114 114 112 102 110 56 199 201 216 222 102	134 onen 43 42 68 52 41 64 75 49 84 52 124 120 125 137 59 44	6C ts Sqr 10B 9B 4B 3C 2B 2B 2A 11C 2D 3D 2E 5E	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442 Part C1 C3 C4 C7 C8 C10 C15 C20 C21 C22 C23 C30 C32 C33 C42 C38	B B Control Side A A A A A A A A A A A A A A A A A A A	181 215 	33 19  rvic  118 116 100 118 106 107 101 115 121 124 119 81 86 79 89 94	8B 9C 	5 5 1eva Pg 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   P525   Part   C55   C56   C67   C68   C69   C70   C71   C72   C75   C77   C78   C79   C82   C85   C87   C88	B B B B B B B B B B B B B B B B B B B	67 67 67 	67 74 Non 139 136 123 118 21 140 25 121 39 23 20 47 42 61 67 70	3C 4C 4C 4C 4C 4C 4C 4C 4C 4C 4C 4C 4C 4C	6 6 7 9 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	X542 	B AABBBBBBAAABBA	51 Compo X 47 40 101 114 114 112 102 110 56 199 201 216 222 102 204	134 onen Y 43 42 68 52 41 64 75 49 84 120 125 137 59 44 138	6C ts 10B 9B 4B 3C 2B 2B 2B 2A 11C 2D 2C 3D 2E 5E 3C	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442  Part  C1 C3 C4 C7 C8 C10 C15 C20 C21 C22 C33 C30 C32 C33 C38 C42	B B Control Side A A A A A A A A A A A A A A A A A A A	181 215 	33 19  rvic  118 116 100 101 105 121 124 119 81 86 79 89 94 129 137	8B 9C e-Red e-Red 1D 2E 2D 2D 3E 3C 4D 4D 4D 5E 5E 7F 8F	5 5 1eva 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   Part   Part   C55   C66   C65   C67   C68   C70   C71   C72   C75   C77   C78   C79   C82   C85   C87   C88   C92	B B B B B B B B B B B B B B B B B B B	67 67 67 	67 74 Non 139 136 123 118 21 140 25 121 39 23 20 47 42 61 67 70 66 58	3C	6 6 7 9 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	X542 	B ant C B A A B B B B B B B A A A B B B A A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A A B B A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A B B A A A A A B B A A A A B B A A A A A B B A A A A A B B A A A A A B B A A A A A B B A A A A B B A A A A A B B A A A A A B B A A A A A B B A A A A A A B B A A A A A B B A A A A A B B A A A A A B B A A A A A A B B A A A A A A B B A A A A A A A A B B A A A A A A B B A A A A A A A A A A B B A A A A A A A A A A A A A A A A A A A A	51 Compo X 47 40 101 114 114 112 102 102 201 201 202 204 205 222	134 onen 43 42 68 52 41 64 75 49 84 120 125 137 59 44 138 140 127	6C ts 10B 9B 4B 3C 2B 2B 2B 2A 11C 2D 2C 3D 2E 5E 3C 3E	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442  Part  C1 C3 C4 C7 C8 C10 C15 C20 C21 C22 C33 C30 C32 C33 C38 C42 C51 C52 C54	B B Control Side A B A A A A A A A A A A A A A A A A A	181 215  18 25 24 15 14 43 44 36 41 31 29 37 188 188 184	33 19  rvic  118 116 100 107 101 115 121 124 119 81 86 79 89 94 129 137	8B 9C e-Re e-Re 1D 2E 2D 2E 2D 3C 4D 4D 5E 5E 7F 8E 	5 5 1eva 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   P525   P525   C56   C65   C67   C68   C69   C70   C71   C72   C75   C77   C78   C79   C82   C85   C88   C92   C98	B B B B B B B B B B B B B B B B B B B	67 67 67 67 8 7 188 176 184 185 21 25 176 20 17 18 23 25 17	67 74 Non 139 136 123 118 118 21 140 25 121 39 23 20 47 42 61 67 70 66 58	3C	6 6	X542 	B A A B B B B B B A A A A B B A A A A B B B B B B B B B B B B B B B B B B B B	51 Compo  47 40 101 114 114 112 102 110 56 199 201 216 222 102 204 205 222	134 onen 43 42 68 52 41 64 75 49 84 120 125 137 59 44 138 140 127 -+	6C ts 10B 9B 4B 3C 2B 2B 2B 2A 11C 2D 2C 3D 2E 5E 3C 3E	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
L421 L442  Part  C1 C3 C4 C7 C8 C10 C15 C20 C21 C22 C33 C30 C32 C33 C38 C42 C51 C52 C54	B B Control Side A B A A A A A A A A A A A A A A A A A	181 215 	33 19  rvic  118 116 100 118 106 107 101 115 124 119 81 86 79 89 94 129 137	8B 9C e-Red sqr 1D 2E 2E 2D 3E 3C 4D 4D 4D 5E 5D 5E 7F 8F 8E  Date	5 5 leva 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	P520   P525   P525   P525   Part   Part   C55   C66   C65   C67   C68   C70   C71   C72   C75   C77   C78   C79   C82   C85   C87   C88   C92	B B B B B B B B B B B B B B B B B B B	67 67 67 67 8 / 188 176 184 188 185 21 176 20 176 18 177 18 23 25 177 176	67 74 74 74 77 Non 7 139 136 123 118 118 21 140 25 121 39 23 20 47 42 61 67 70 66 58	3C	6 6	X542 	B ant ( Side A A B B B B B B B A A A B B B B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B A A A B B B B B B B B B B B B B B B B B B B B	51 Compo X 47 40 101 114 112 102 110 56 199 201 216 222 102 204 205 222	134 onen 43 42 68 52 41 64 75 49 84 120 125 137 59 44 138 140 127 -+	6C ts 10B 9B 4B 3C 2B 2B 2A 11C 2C 3D 2E 5E 3C 3E 3E 3C 3E 3E 3E	Po 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2

	Part Si	.de X	Y				ide X							Sqr :	Pg
					+									8B	5
								37	10C	3	C414	B 175	38	7B	5
Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Section   Sect					:			35	11C	3 j	C417	B 175	34	7B	5
231   244   17										3	C418	A 171	43	8C	5
2232 B 240 126 4D 3   C311					:					3	C420	A 175	46	8C	5
2233   239   129   40   3   C312   A 262   43   224   C424   B 197   47   75   C235   B 256   137   50   3   C315   B 219   66   52   4   C424   B 197   47   75   C236   B 261   137   50   C315   B 219   66   52   4   C431   B 162   42   9E   5   C236   A 264   126   48   3   C319   B 238   73   66   4   C431   B 162   42   9E   5   C236   A 264   126   48   3   C319   B 238   73   66   4   C433   B 162   42   9E   5   C240   B 266   125   50   3   C322   B 231   62   60   4   C434   B 218   20   9C   5   C241   B 296   123   50   3   C322   B 231   62   60   4   C436   A 153   63   105   5   C250   B 273   136   50   3   C322   B 231   62   60   4   C436   A 153   63   105   5   C251   B 274   137   50   3   C322   B 231   62   60   4   C436   A 153   63   105   5   C252   A 276   139   60   3   C324   B 233   66   50   4   C437   A 159   68   10F   5   C253   B 290   47   103   3   C326   B 232   75   6E   4   C440   B 154   56   10E   5   C253   B 290   47   103   3   C326   B 232   75   6E   4   C440   B 154   56   10E   5   C255   A 296   53   66   3   C327   B 244   67   20   4   C443   A 225   16   10D   5   C255   A 296   133   6B   3   C328   A 255   31   3F   4   C445   A 235   19   10C   5   C255   A 296   133   6B   3   C330   A 211   58   4A   4   C448   A 234   14   10C   5   C257   A 266   130   7D   3   C329   A 251   28   74   4   C449   B 240   13   11C   5   C261   A 299   126   78   3   C350   B 172   106   70   4   C450   B 159   80   11E   5   C264   B 286   107   78   3   C350   B 172   106   70   4   C450   B 159   80   11E   5   C264   B 286   100   8B   3   C353   B 188   98   80   4   C455   B 216   87   20   C266   B 281   98   8B   3   C355   A 195   98   90   4   C458   A 155   79   11F   5   C264   B 283   70   8B   3   C356   A 203   100   9D   4   C459   A 262   95   20   5   C270   B 297   80   80   3   C356   A 203   100   9D   4   C459   A 262   95   20   5   C270   B 297   80   80   3   C356   A 203   100   9D   4   C458   A 257   103   30   5   C270   B 297   80   80   3										4	C421	A 196	31	<b>A</b> 8	5
2334   B 255 128   4D 3   C313   A 248   44   2E   4   C424   B 197   47   70   5   C235   B 256 137   5D 3   C315   B 219   66   5E   4   C431   B 162   42   9E   50   C236   A 264   126   4B   3   C319   B 238   73   6E   4   C432   B 188   47   9E   5   C240   B 286 125   5C   3   C320   B 235   62   6D   4   C432   B 188   47   9E   5   C240   B 286 125   5C   3   C320   B 235   62   6D   4   C435   B 210   31   9C   5   C251   B 271   136   5D   3   C322   B 214   47   2A   4   C435   B 210   31   9C   5   C251   B 274   137   5D   3   C323   A 234   29   5F   4   C436   A 153   63   10E   5   C251   A 276   139   6D   3   C324   B 223   66   5D   4   C439   A 218   29   10D   5   C252   A 276   139   6D   3   C326   B 221   64   5E   4   C440   B 154   65   10E   5   C255   A 279   139   6C   3   C327   B 244   67   2C   4   C443   A 225   16   10D   5   C255   A 279   139   6C   3   C327   B 244   67   2C   4   C443   A 225   16   10D   5   C255   A 279   139   6C   3   C327   B 244   67   2C   4   C443   A 225   16   10D   5   C256   B 263   56   9B   3   C328   A 255   31   3F   4   C445   A 231   17   10C   5   C257   A 286 130   7D   3   C329   A 251   28   3F   4   C447   A 231   17   10C   5   C258   A 296 133   6E   3   C330   A 211   58   A4   4   C447   A 231   17   10C   5   C260   A 299   14   7C   3   C351   B 183   104   8C   4   C447   A 231   17   10C   5   C262   B 266   117   7E   3   C351   B 183   104   8C   4   C445   A 255   15   11C   5   C263   B 294   135   6B   3   C350   B 172   106   7C   4   C453   A 255   15   11C   5   C264   B 288   10C   28   3   C355   B 181   104   8C   4   C455   A 255   15   11C   5   C266   B 281   107   8E   3   C355   B 181   104   8C   4   C455   A 255   15   11C   5   C266   B 281   98   8E   3   C355   A 195   98   90   4   C455   B 216   87   2C   5   C267   B 298   100   8E   3   C355   B 181   104   8C   4   C455   B 216   87   2C   5   C266   B 281   98   8E   3   C355   B 181   104   8C   4   C455   B 216   87   2C   5   C266   B 283   64										- 1			34	8B	5
2235 B 256 137 5D 3   C315 B 219 66 5E 4   C431 B 162 42 9E 5 C236 A 264 126 4B 3 C319 B 238 73 6E 4   C432 B 158 47 9E 5 C2360 B 268 125 5C 3   C320 B 235 62 6D 4   C435 B 210 20 9C 5 C241 B 296 123 5C 3   C320 B 235 62 6D 4   C435 B 210 21 9C 5 C251 B 273 136 5D 3   C322 B 214 47 2A 4   C435 B 210 21 9C 5 C252 B 276 139 6D 3   C324 B 223 66 5D 4   C435 B 210 31 9C 5 C252 A 276 139 6D 3   C324 B 223 66 5D 4   C437 A 159 68 10F 5 C252 A 276 139 6D 3   C324 B 223 66 5D 4   C447 A 159 68 10F 5 C253 B 290 47 10R 3   C325 B 221 64 5E 4   C441 B 157 67 10E 5 C253 B 290 47 10R 3   C326 B 222 75 6E 4   C441 B 157 67 10E 5 C255 A 279 139 6C 3   C327 B 244 67 2C 4   C444 B 157 67 10E 5 C255 A 279 139 6C 3   C328 A 255 31 3F 4   C447 A 221 17 10C 5 C256 A 299 114 7C 3   C330 A 211 58 4A 4   C447 A 221 17 10C 5 C257 A 286 130 7D 3   C325 B 212 106 7C 4   C444 B 234 14 10C 5 C261 A 299 126 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5 C262 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5 C263 B 294 135 6B 3   C352 B 182 106 7C 4   C450 B 159 80 11E 5 C264 B 288 102 BS 3   C352 B 183 104 8C 4   C455 B 216 87 2C 5 C265 B 286 100 8E 3   C355 B 182 106 7C 4   C450 B 159 80 11E 5 C266 B 288 108 8E 3   C355 A 195 98 90 4   C457 A 243 77 3E 5 C266 B 288 108 8E 3   C355 A 195 98 90 4   C457 A 243 77 3E 5 C266 B 288 198 8E 3   C355 A 195 98 90 4   C457 A 243 77 3E 5 C266 B 288 198 8E 3   C355 A 195 98 90 4   C457 A 243 77 3E 5 C266 B 288 198 8E 3   C356 B 208 104 10C 4   C461 A 257 14 11C 5 C267 B 279 100 8E 3   C350 B 208 101 10C 4   C461 A 257 14 11C 5 C268 B 289 59 10E 3   C350 B 208 101 10C 4   C461 A 257 14 11C 5 C269 B 283 84 8E 3   C356 B 208 104 10C 4   C462 B 224 99 10 5 C270 B 297 80 9E 3   C350 B 208 101 10C 4   C461 A 257 14 11C 5 C271 B 289 59 10E 3   C366 B 208 101 10C 4   C466 B 224 80 10E 5 C271 B 289 59 10E 3   C366 B 208 101 10C 4   C467 A 257 19 12C 5 C272 B 289 59 10E 3   C360 B 208 101 10C 4   C467 A 257 19 12C 5 C273 A 298 48 10E 3   C366 B 219 100 10C 4   C467 A 257 19 12C 5 C274 A 292 53 10D 3					:							B 197	47	7C	5
12336   A 264   126   4B   3   C319   B 238   73   6E   4   C422   B 158   47   9E   5   C240   B 286   125   5C   3   C320   B 235   62   60   4   C434   B 218   20   9C   5   C241   B 296   123   5C   3   C321   B 231   62   60   4   C435   B 210   31   9C   5   C250   B 273   136   5D   3   C322   B 231   62   60   4   C435   B 210   31   9C   5   C250   B 273   136   5D   3   C322   B 231   62   60   4   C435   A 153   63   10E   5   C251   B 274   137   5D   3   C322   B 221   64   C437   A 159   68   60   5   C252   A 276   139   6D   3   C324   B 223   66   5D   4   C439   A 218   29   10D   5   C253   B 290   47   10B   3   C326   B 221   64   5E   4   C443   B 157   67   10E   5   C254   A 298   59   10D   3   C326   B 221   64   5E   4   C443   A 235   19   10D   5   C255   A 279   139   6C   3   C327   B 224   67   2C   4   C443   A 225   16   10D   5   C255   A 279   139   6C   3   C328   A 255   31   3F   4   C444   A 231   17   10C   5   C256   B 263   56   98   3   C328   A 255   31   3F   4   C444   A 231   17   10C   5   C258   A 296   133   6E   3   C330   A 211   58   4A   4   C448   A 234   14   10C   5   C258   A 296   133   6E   3   C330   A 211   58   4A   4   C448   A 234   14   10C   5   C256   A 299   114   7C   3   C331   A 212   43   1A   4   C449   B 240   13   11C   5   C261   A 299   126   7B   3   C350   B 171   106   7C   4   C455   B 159   80   11C   5   C262   B 286   117   7E   3   C351   B 183   104   8C   4   C455   A 255   15   11C   5   C262   B 286   117   7E   3   C351   B 183   104   8C   4   C455   A 255   15   11C   5   C262   B 286   117   7E   3   C351   B 183   104   8C   4   C455   A 255   15   11C   5   C262   B 286   117   7E   3   C351   B 183   104   8C   4   C455   A 255   15   11C   5   C262   B 286   117   7E   3   C351   B 183   104   8C   4   C455   A 243   77   3E   5   C264   B 281   98   8E   3   C355   A 195   98   90   4   C456   A 234   77   3E   5   C266   B 281   98   8E   3   C356   A 203   100   90   4   C456   A 234   77   3E   5   C266   B					- !							B 162	42	9E	5
1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239   1239										;			47	9E	5
C240 B 286 123 SC 3   C321 B 231 62 6D 4   C435 B 210 31 9C 5   C250 B 273 136 SD 3   C322 B 214 47 2A 4   C436 A 153 63 10E 5   C251 B 274 137 SD 3   C322 B 214 47 2A 4   C436 A 153 63 10E 5   C252 A 276 139 6D 3   C324 B 223 66 5D 4   C439 A 218 29 10D 5   C253 A 276 139 6D 3   C324 B 223 66 5D 4   C439 A 218 29 10D 5   C254 A 298 59 10D 3   C326 B 221 64 5E 4   C440 B 157 67 10E 5   C254 A 298 59 10D 3   C326 B 221 64 5E 4   C443 A 225 16 10D 5   C255 A 279 139 6C 3   C327 B 244 67 2C 4   C443 A 225 16 10D 5   C255 A 279 139 6C 3   C327 B 244 67 2C 4   C443 A 225 19 10C 5   C256 B 263 56 9B 3   C328 A 255 31 3F 4   C445 A 235 19 10C 5   C257 A 286 130 7D 3   C329 A 251 28 3F 4   C447 A 231 17 10C 5   C258 A 299 114 7 C 3   C331 A 212 43 1A 4   C448 A 234 14 10C 5   C256 A 299 114 7 C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5   C260 A 299 114 7 C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5   C261 A 299 114 7 C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5   C261 A 299 114 7 C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5   C262 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5   C263 B 294 135 6B 3   C352 B 181 104 8C 4   C453 A 255 15 11C 5   C264 B 288 102 8E 3   C353 B 189 88 8C 4   C455 B 216 87 2C 5   C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 84 11E 5   C266 B 281 98 8E 3   C356 A 203 100 9D 4   C458 A 161 84 11E 5   C266 B 283 87 9E 3   C356 A 203 100 9D 4   C458 A 161 84 11E 5   C266 B 283 87 9E 3   C356 B 208 104 10C 4   C461 A 257 14 11C 5   C266 B 283 87 9E 3   C356 B 208 104 10C 4   C461 A 257 14 11C 5   C270 B 297 80 9E 3   C359 B 204 101 9C 4   C460 B 234 80 1E 5   C270 B 297 80 9E 3   C359 B 204 101 9C 4   C461 A 257 14 11C 5   C271 B 281 59 10E 3   C366 B 208 102 9C 4   C463 A 263 82 2E 5   C271 B 289 59 10E 3   C366 B 208 102 9C 4   C466 B 221 81 2C 5   C272 B 289 59 10E 3   C366 B 219 105 10C 4   C464 A 233 77 3E 5   C273 A 296 48 10E 3   C366 B 219 105 10C 4   C467 A 237 79 10C 5   C273 A 296 48 10E 3   C366 B 219 105 10C 4   C467 A 237 79 10C 5   C274 A 292 53 10D 3										:				9C	5
C2241 B 296 123 5C 3   C324 B 234 47 2A 4   C435 A 153 63 10E 5   C250 B 273 136 5D 3   C322 B 214 47 2A 4   C436 A 153 63 10E 5   C251 B 274 137 5D 3   C322 B 214 47 2A 4   C437 A 159 68 10F 5   C252 A 276 139 6D 3   C324 B 223 66 5D 4   C447 A 159 68 10F 5   C253 B 290 47 10E 3   C325 B 221 64 5E 4   C440 B 154 56 10E 5   C254 A 298 59 10D 3   C326 B 222 75 6E 4   C441 B 157 67 10E 5   C255 A 276 139 6D 3   C326 B 222 75 6E 4   C441 B 157 67 10E 5   C255 A 279 139 6C 3   C327 B 244 67 2C 4   C441 B 157 67 10E 5   C255 A 296 130 7D 3   C328 A 255 31 3F 4   C444 A 235 19 10C 5   C257 A 286 130 7D 3   C329 A 251 28 3F 4   C444 A 235 19 10C 5   C257 A 286 130 7D 3   C329 A 251 28 3F 4   C447 A 231 17 10C 5   C258 A 296 133 6E 3   C330 A 211 58 4A 4   C449 B 240 13 11C 5   C261 A 299 114 7C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5   C261 A 299 114 7C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5   C261 A 299 115 6B 3   C352 B 172 106 7C 4   C450 B 159 80 115 5   C263 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5   C264 B 288 102 8E 3   C352 B 181 104 8C 4   C453 A 255 15 11C 5   C264 B 288 102 8E 3   C352 B 181 104 8C 4   C455 B 216 87 2C 5   C266 B 281 98 8E 3   C352 B 181 104 8C 4   C455 B 216 87 2C 5   C266 B 281 98 8E 3   C355 A 195 98 9D 4   C459 A 262 95 2D 5   C266 B 281 98 8E 3   C355 A 195 98 9D 4   C459 A 262 95 2D 5   C268 B 283 87 8E 3   C357 B 204 98 9C 4   C450 B 234 80 1E 5   C267 B 279 100 8E 3   C357 B 204 98 9C 4   C450 B 234 80 1E 5   C267 B 283 848 8E 3   C358 B 208 104 107 9C 4   C460 B 234 80 1E 5   C271 B 281 59 10E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5   C268 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5   C271 B 281 59 10E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5   C271 B 281 59 10E 3   C356 B 204 101 9C 4   C466 B 234 80 1E 5   C271 B 281 59 10E 3   C366 B 219 103 10C 4   C466 B 234 80 1E 5   C271 B 281 59 10E 3   C366 B 219 103 10C 4   C466 B 224 99 1D 5   C271 B 281 59 10E 3   C366 B 219 103 10C 4   C466 B 221 81 81 50   C271 B 281 59 10E 3   C366 B 2														9C	5
C250 B 274 137 5D 3 C323 A 234 29 5F 4 C437 A 159 68 10F 5 C252 A 276 139 6D 3 C324 B 223 66 5D 4 C439 A 218 29 10D 5 C253 B 290 47 10E 3 C325 B 221 64 5E 4 C440 B 154 66 10E 5 C254 A 298 59 10D 3 C326 B 222 75 6E 4 C440 B 157 67 10E 5 C255 A 279 139 6C 3 C327 B 244 67 2C 4 C443 A 225 16 10D 5 C256 B 263 56 9B 3 C328 A 235 31 3F 4 C447 A 231 17 10C 5 C256 B 263 56 9B 3 C328 A 235 31 3F 4 C447 A 231 17 10C 5 C257 A 286 130 7D 3 C329 A 251 28 3F 4 C447 A 231 17 10C 5 C258 A 299 114 7C 3 C331 A 212 43 1A 4 C449 B 240 13 11C 5 C260 A 299 114 7C 3 C331 A 212 43 1A 4 C449 B 240 13 11C 5 C261 A 299 126 7B 3 C350 B 172 106 7C 4 C450 B 159 80 11E 5 C262 B 286 117 7E 3 C351 B 181 104 8C 4 C457 A 255 15 11C 5 C262 B 286 117 7E 3 C351 B 181 104 8C 4 C455 A 255 15 11C 5 C265 B 286 100 8E 3 C353 B 188 98 8C 4 C455 B 216 87 2C 5 5 C266 B 281 98 8E 3 C355 A 203 100 9D 4 C459 A 262 95 2D 5 C266 B 281 98 8E 3 C355 A 203 100 9D 4 C459 A 262 95 2D 5 C266 B 281 98 8E 3 C355 A 203 100 9D 4 C459 A 262 95 2D 5 C266 B 283 87 8E 3 C355 B 204 101 9C 4 C460 B 234 80 1E 5 C267 B 279 100 8E 3 C356 A 203 100 9D 4 C459 A 262 95 2D 5 C268 B 283 87 8E 3 C355 B 204 101 9C 4 C460 B 234 80 1E 5 C269 B 283 84 8E 3 C355 B 204 101 9C 4 C461 A 257 14 11C 5 C261 B 297 80 9E 3 C359 B 204 101 9C 4 C466 B 227 81 81 2C 5 C271 B 281 59 10E 3 C366 B 208 104 10C 4 C464 A 233 73 3E 5 C274 B 297 80 9E 3 C359 B 204 101 9C 4 C466 B 224 99 1D 25 C274 B 295 59 10E 3 C366 B 208 102 9C 4 C467 A 257 19 12C 5 C274 B 295 59 10E 3 C366 B 209 102 9C 4 C467 A 257 19 12C 5 C274 B 295 59 10E 3 C366 B 209 102 9C 4 C467 A 257 19 12C 5 C274 B 295 59 10E 3 C366 B 219 105 10C 4 C464 A 233 77 48 11C 5 C274 B 295 59 10E 3 C366 B 219 105 10C 4 C467 A 257 19 12C 5 C274 B 228 61 10E 3 C366 B 219 105 10C 4 C467 A 257 19 12C 5 C274 B 228 61 10E 3 C366 B 219 105 10C 4 C467 A 257 19 12C 5 C274 B 228 61 10E 3 C366 B 219 105 10C 4 C467 A 257 19 12C 5 C274 B 228 61 10E 3 C366 B 219 105 10C 4 C467 A 257 19 12C 5 C274 B 228 61 10 10C 4 C467 A 257 19 12C 5 C274 B 228 61 10 10C 4 C467 A 257 19 1					!					- 1		_			5
C251 A 276 139 6D 3   C324 B 223 66 5D 4   C439 A 218 29 10D 5   C252 A 276 139 6D 3   C324 B 223 66 5D 4   C439 A 218 29 10D 5   C254 A 298 59 10D 3   C326 B 227 75 6E 4   C441 B 157 67 10E 5   C254 A 298 59 10D 3   C326 B 227 75 6E 4   C441 B 157 67 10E 5   C255 A 279 139 6C 3   C327 B 244 67 2C 4   C443 A 225 16 10D 5   C256 B 263 56 9B 3   C328 A 255 31 3F 4   C447 A 231 17 10C 5   C256 B 266 130 70 3   C329 A 251 28 3F 4   C447 A 231 17 10C 5   C256 A 299 114 7C 3   C330 A 211 58 4A 4   C448 A 234 14 10C 5   C260 A 299 114 7C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5   C261 A 299 126 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5   C261 A 299 126 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5   C262 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5   C263 B 294 135 6B 3   C352 B 181 104 8C 4   C457 A 255 17 11C 5   C264 B 288 102 8E 3   C352 B 181 104 8C 4   C457 A 255 17 11C 5   C266 B 288 102 8E 3   C353 B 188 98 8C 4   C457 A 243 77 3E 5   C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 44 11E 5   C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 44 11E 5   C266 B 283 87 8E 3   C355 A 195 98 9D 4   C458 A 161 44 11E 5   C269 B 283 84 8E 3   C355 B 208 104 10C 4   C460 B 234 80 1E 5   C269 B 283 84 8E 3   C356 A 203 100 9D 4   C450 B 234 8D 1E 5   C270 B 297 80 9E 3   C356 A 203 100 9D 4   C460 B 234 8D 1E 5   C271 B 261 59 10E 3   C366 B 208 102 9C 4   C460 B 234 8D 1E 5   C271 B 261 59 10E 3   C366 B 208 102 9C 4   C460 B 234 8D 1E 5   C271 B 261 59 10E 3   C366 B 208 102 9C 4   C466 A 233 77 3E 5   C271 B 275 43 11E 3   C366 B 208 102 9C 4   C466 A 233 77 3E 5   C271 B 275 43 11E 3   C368 B 217 99 10C 4   C466 B 224 99 1D 5   C271 B 275 43 11E 3   C368 B 217 99 10C 4   C467 A 257 19 12C 5   C271 B 275 43 11E 3   C368 B 217 99 10C 4   C467 A 257 19 12C 5   C271 B 275 43 11E 3   C368 B 217 99 10C 4   C467 A 257 19 12C 5   C271 B 275 43 11E 3   C368 B 217 99 10C 4   C467 A 257 19 12C 5   C271 B 275 43 11E 3   C368 B 217 99 10C 4   C467 A 257 19 12C 5   C271 B 275 43 11E 3   C368 B															
C2525	C251				:										
C254 A 298 59 10D 3   C326 B 232 75 6E 4   C441 B 157 67 10E 5 C255 A 279 139 6C 3   C327 B 244 67 2C 4   C443 A 225 16 10D 5 C256 B 263 56 9B 3   C328 A 255 31 3F 4   C445 A 235 19 10C 5 C257 A 286 130 7D 3   C329 A 251 28 3F 4   C447 A 231 17 10C 5 C258 A 299 114 7C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5 C260 A 299 114 7C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5 C261 A 299 126 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5 C262 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5 C263 B 294 135 6B 3   C352 B 181 104 8C 4   C454 A 155 79 11F 5 C263 B 294 135 6B 3   C352 B 181 104 8C 4   C455 B 216 87 2C 5 C266 B 281 98 8E 3   C352 B 181 104 8C 4   C455 B 216 87 2C 5 C266 B 281 98 8E 3   C355 B 188 98 8C 4   C457 A 243 77 3E 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 84 11E 5 C267 B 279 100 8E 3   C355 A 295 18 100 9D 4   C458 A 161 84 11E 5 C268 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5 C269 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5 C269 B 283 87 8E 3   C356 B 208 104 9C 4   C457 A 243 77 3E 5 C268 B 281 98 8E 3   C356 B 208 104 9C 4   C462 B 217 81 2C 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 217 81 2C 5 C273 A 296 48 10E 3   C366 B 219 103 10C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C366 B 219 103 10C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C366 B 219 103 10C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C366 B 219 103 10C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C366 B 219 103 10C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C366 B 219 103 10C 4   C464 A 233 77 3E 5 C274 A 292 53 10D 3   C366 B 219 103 10C 4   C464 A 233 77 3E 5 C274 A 292 53 10D 3   C366 B 219 103 10C 4   C467 A 257 19 12C 5 C273 A 296 48 10E 3   C366 B 219 103 10C 4   C467 A 257 19 12C 5 C274 A 292 53 10D 3   C366 B 219 103 10C 4   C467 A 257 19 12C 5 C277 A 283 68 11F 3   C386 B 217 99 10C 4   C476 A 257 19 12C 5 C277 A 283 68 11F 3	C252														
C255 A 279 139 6C 3   C327 B 244 67 2C 4   C443 A 225 16 10D 5   C256 B 263 56 9B 3   C328 A 255 31 3F 4   C445 A 235 19 10C 5   C257 A 286 130 7D 3   C329 A 251 28 3F 4   C447 A 231   17 10C 5   C258 A 296 133 6E 3   C330 A 211 58 4A 4   C448 A 234   14 10C 5   C256 A 299 114 7C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5   C261 A 299 126 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5   C262 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5   C263 B 294 135 6B 3   C352 B 181 104 8C 4   C453 A 255 15 11C 5   C264 B 288 102 8E 3   C353 B 188 98 8C 4   C455 B 216 87 2C 5   C266 B 281 98 8E 3   C353 B 188 98 8C 4   C455 B 216 87 2C 5   C266 B 281 98 8E 3   C353 B 188 98 8C 4   C455 A 243 77 3E 5   C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 84 11E 5   C267 B 279 100 8E 3   C355 A 195 98 9D 4   C459 A 262 95 2D 5   C268 B 283 87 8E 3   C355 B 208 100 9D 4   C459 A 262 95 2D 5   C268 B 283 87 8E 3   C355 B 208 101 9C 4   C460 B 234 80 1E 5   C269 B 283 84 8E 3   C356 B 208 102 9C 4   C460 B 234 80 1E 5   C270 B 297 80 9E 3   C356 B 208 102 9C 4   C461 A 257 14 11C 5   C271 B 281 59 10E 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5   C272 B 289 59 10E 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5   C274 A 292 53 10D 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5   C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5   C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5   C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5   C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5   C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5   C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5   C278 A 276 68 11E 3   C386 B 217 99 10C 4   C469 B 211 81 3C 5   C278 A 277 68 11E 3   C386 B 217 99 10C 4   C470 B 231 87 4A 5   C280 B 277 41 11E 3   C380 B 165 118 9E 4   C477 A 170 83 6C 5   C288 B 274 31 8C 3   C388 B 153 101 11E 4   C477 A 170 83 6C 5   C288 B 290 25 9C 3   C388 B 153 101 11E 4   C477 A 170 83 6C 5   C288 B 298 49 8C 3	C253	B 290	47	10E	3										
C255	C254	A 298	59	10D	3										
C256 B 286 150 7D 3   C329 A 251 28 3F 4   C447 A 231 17 10C 5   C258 A 296 133 6E 3   C330 A 211 58 4A 4   C448 A 234 14 10C 5   C260 A 299 114 7C 3   C331 A 212 43 1A 4   C448 B 240 13 11C 5   C261 A 299 126 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5   C261 A 299 126 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5   C261 A 299 126 7B 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5   C263 B 294 135 6B 3   C352 B 181 104 8C 4   C454 A 155 79 11F 5   C264 B 288 102 8E 3   C253 B 188 98 8C 4   C455 B 216 87 2C 5   C265 B 266 100 8E 3   C353 B 188 98 8C 4   C455 B 216 87 2C 5   C265 B 266 100 8E 3   C355 A 195 98 90 4   C458 A 161 84 11E 5   C267 B 279 100 8E 3   C355 A 195 98 90 4   C458 A 161 84 11E 5   C267 B 279 100 8E 3   C355 A 195 98 90 4   C459 A 262 95 2D 5   C268 B 283 84 8E 3   C358 B 204 101 9C 4   C460 B 234 80 1E 5   C269 B 283 84 8E 3   C358 B 208 104 10C 4   C461 A 257 14 11C 5   C270 B 297 80 9E 3   C356 A 203 100 9D 4   C462 B 217 81 2C 5   C271 B 281 59 10E 3   C360 B 208 102 9C 4   C460 B 234 80 1E 5   C271 B 281 59 10E 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5   C272 B 289 59 10E 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5   C274 A 292 53 10D 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5   C276 B 283 64 10E 3   C366 B 219 103 10C 4   C466 B 224 99 1D 5   C276 B 283 61 10E 3   C366 B 219 103 10C 4   C466 B 224 99 1D 5   C276 B 283 61 10E 3   C366 B 219 103 10C 4   C466 B 227 103 3D 5   C277 B 278 43 11E 3   C366 B 219 105 10C 4   C467 A 257 19 12C 5   C278 B 277 68 11E 3   C366 B 219 103 10C 4   C466 B 227 103 3D 5   C278 B 277 43 11E 3   C366 B 219 105 10C 4   C467 B 221 181 3C 5   C279 A 283 68 11F 3   C386 B 217 99 10C 4   C470 B 231 87 4A 5   C279 A 283 68 11F 3   C386 B 217 99 10C 4   C470 B 231 87 4A 5   C279 A 283 68 11F 3   C386 B 217 99 10C 4   C470 B 231 87 4A 5   C279 A 283 68 11F 3   C386 B 217 99 10C 4   C477 A 278 B 201 84 4 D 5   C279 A 283 68 11F 3   C386 B 217 99 10C 4   C477 A 279 B 278 B 6 6 6 6 5   C486 B 297 91 3   C388 B 157 131 10C 4   C477 A 279 B 278 B 6 6 6	C255	A 279	139	6C	3						!				
C258 A 286 130 78 3 C330 A 211 58 4A 4 C448 A 234 14 10C 5 C260 A 299 114 7C 3   C330 A 211 58 4A 4   C448 B 234 14 10C 5 C260 A 299 126 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5 C261 A 299 126 7B 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5 C262 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5 C263 B 294 135 6B 3   C352 B 181 104 8C 4   C453 A 255 15 11C 5 C264 B 288 102 8E 3   C352 B 181 104 8C 4   C455 B 216 87 2C 5 C265 B 286 100 8E 3   C355 A 195 98 9D 4   C455 A 243 77 3E 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C455 A 243 77 3E 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C459 A 262 95 2D 5 C266 B 281 98 8E 3   C355 A 203 100 9D 4   C459 A 262 95 2D 5 C266 B 283 87 8E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5 C266 B 283 87 8E 3   C358 B 208 104 10C 4   C461 A 257 14 11C 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 217 81 2C 5 C272 B 289 59 10E 3   C362 A 213 107 11C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C362 A 213 107 11C 4   C464 A 233 77 3E 5 C276 B 283 87 88 3   C366 B 219 103 10C 4   C464 B 227 103 3D 5 C277 B 275 43 11E 3   C367 B 219 105 10C 4   C468 B 224 99 1D 5 C278 A 277 68 11E 3   C368 B 219 103 10C 4   C468 B 221 81 81 3C 5 C288 B 277 41 11E 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5 C281 B 290 41 8C 3   C382 A 161 127 10F 4   C472 A 222 74 4E 5 C284 B 296 61 7B 3   C385 B 157 131 10E 4   C477 A 178 83 6C 5 C286 B 287 26 9C 3   C401 B 189 59 7D 5   C481 A 247 195 30 5 C286 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 254 198 90 6B 5 C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 254 199 10 3 0 5 C290 A 283 21 11B 3   C406 B 186 45 7D 5   C482 B 197 91 3 C 5 C290 A 283 21 11B 3   C406 B 186 45 7D 5   C482 B 197 91 3 C 5 C290 A 283 21 11B 3   C406 B 186 45 7D 5   C482 B 197 91 3 C 5 C290 A 288 28 10C 3   C401 B 189 66 8D 5   C480 B 190 80 3 C 5 C290 A 288 28 10C 3   C401 B 189 59 7D 5   C481 A 241 98 4B 5 C291 A 284 28 10C 3   C4	C256	B 263	56	9B							:				
C260 A 299 114 7C 3   C331 A 212 43 1A 4   C449 B 240 13 11C 5 C261 A 299 126 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5 C262 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5 C263 B 294 135 6B 3   C352 B 181 104 8C 4   C453 A 255 15 11C 5 C263 B 294 135 6B 3   C352 B 181 104 8C 4   C455 A 255 15 11C 5 C264 B 288 102 8E 3   C353 B 188 98 8C 4   C455 A 243 77 3E 5 C265 B 286 100 8E 3   C355 A 195 98 9D 4   C457 A 243 77 3E 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C457 A 243 77 3E 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C457 A 243 77 3E 5 C266 B 288 8C 8 8C 8 20 255 A 195 98 9D 4   C457 A 243 77 3E 5 C268 B 283 8C 8 8C 8 20 255 A 195 98 9D 4   C457 A 243 77 3E 5 C266 B 283 8C 8 8C 8 20 255 A 195 98 9D 4   C459 A 262 95 2D 5 C268 B 283 8C 8 8E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5 C269 B 283 8C 8 8E 3   C358 B 208 104 10C 4   C460 B 234 80 1E 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C460 B 234 80 1E 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C463 A 263 22 2E 5 C273 A 296 48 10E 3   C362 A 213 107 11C 4   C466 A 233 77 3E 5 C273 A 296 48 10E 3   C366 B 219 103 10C 4   C466 A 233 77 3E 5 C274 A 292 53 10D 3   C363 A 196 108 11C 4   C467 A 257 19 12C 5 C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5 C277 B 275 43 11E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5 C279 A 283 68 11F 3   C366 B 219 103 10C 4   C467 A 257 19 12C 5 C286 B 274 31 1E 3   C368 B 217 99 10C 4   C467 A 257 19 12C 5 C286 B 274 31 1E 3   C368 B 217 99 10C 4   C470 B 231 87 4A 5 C280 B 277 41 11E 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C380 B 165 118 9E 4   C477 A 170 83 5C 5 C286 B 298 49 8C 3   C380 B 165 118 9E 4   C477 A 170 83 5C 5 C286 B 298 49 8C 3   C380 B 165 118 9E 4   C477 A 170 83 5C 5 C286 B 298 49 8C 3   C380 B 165 113 10E 4   C477 A 170 83 5C 5 C286 B 298 49 8C 3   C388 B 153 101 11E 4   C479 B 178 88 66 6 B 5 C286 B 298 29 C 3	C257	A 286	130	7D	3						!				
C261 A 299 116 7B 3   C350 B 172 106 7C 4   C450 B 159 80 11E 5 C262 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5 C263 B 294 135 6B 3   C352 B 181 104 8C 4   C454 A 155 79 11F 5 C264 B 288 102 8E 3   C352 B 181 104 8C 4   C455 B 216 87 2C 5 C265 B 286 100 8E 3   C353 B 188 98 8C 4   C455 B 216 87 2C 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C457 A 243 77 3E 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 84 11E 5 C267 B 279 100 8E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5 C268 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5 C269 B 283 87 8E 3   C357 B 204 98 9C 4   C461 A 257 14 11C 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C461 A 257 14 11C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 217 81 2C 5 C272 B 289 59 10E 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C362 A 213 107 11C 4   C464 A 233 77 3E 5 C274 A 292 53 10D 3   C363 A 196 108 11C 4   C466 B 224 99 1D 5 C276 B 283 61 10E 3   C366 B 219 103 10C 4   C466 B 221 99 10C 5 C277 B 277 68 11E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5 C277 B 277 68 11E 3   C366 B 219 103 10C 4   C468 B 221 103 3D 5 C279 B 275 43 11E 3   C367 B 219 105 10C 4   C468 B 221 103 3D 5 C279 B 277 41 11E 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5 C283 B 263 67 8B 3   C386 B 217 99 10C 4   C470 B 221 87 44 5 C283 B 263 67 8B 3   C386 B 157 131 10E 4   C477 A 170 83 6C 5 C287 A 296 29 D 3   C386 B 157 131 10E 4   C477 A 170 83 6C 5 C287 A 296 29 D 3   C388 B 153 101 11E 4   C477 A 170 83 5C 5 C286 B 298 49 8C 3   C387 B 157 131 10E 4   C477 A 170 83 5C 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C477 A 170 83 5C 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C477 A 170 83 5C 5 C287 A 296 22 9D 3   C387 B 157 131 10E 4   C477 A 170 83 5C 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C477 A 170 83 5C 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C482 B 197 91 3C 5 C294 A 288 28 10C 3   C402	C258	A 296	133	6E	3	C330		58			!				
C262 B 286 117 7E 3   C351 B 183 104 8C 4   C453 A 255 15 11C 5 C263 B 294 135 6B 3   C352 B 181 104 8C 4   C454 A 155 79 11F 5 C264 B 288 102 8E 3   C353 B 188 98 8C 4   C455 B 216 87 72 L5 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 84 11E 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 84 11E 5 C266 B 281 98 8E 3   C355 A 203 100 9D 4   C458 A 161 84 11E 5 C267 B 279 100 8E 3   C355 A 203 100 9D 4   C459 A 262 95 2D 5 C268 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5 C269 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5 C269 B 283 87 8E 3   C357 B 204 98 9C 4   C461 A 257 14 11C 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C461 A 257 14 11C 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 217 81 2C 5 C272 B 289 59 10E 3   C360 B 208 102 9C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C366 B 208 102 9C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C366 B 219 103 10C 4   C465 B 224 99 1D 5 C274 A 292 53 10D 3   C366 B 219 103 10C 4   C466 B 224 99 1D 5 C276 B 283 61 10E 3   C366 B 219 103 10C 4   C466 B 227 103 3D 5 C277 B 275 43 11E 3   C366 B 219 103 10C 4   C469 B 211 81 3C 5 C279 A 283 68 11F 3   C386 B 217 99 10C 4   C469 B 211 81 3C 5 C279 A 283 68 11F 3   C380 B 165 118 9E 4   C471 B 231 87 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C472 A 232 74 4E 5 C280 B 274 31 8C 3   C384 A 155 126 9E 4   C477 A 232 77 48 E 5 C283 B 266 61 7B 3   C386 B 157 131 10E 4   C477 A 170 83 5 C286 A 288 26 9C 3   C387 B 157 118 10E 4   C477 A 170 83 5 C286 A 289 26 9C 3   C386 B 157 131 10E 4   C477 A 170 83 5 C286 A 289 26 9C 3   C386 B 157 131 10E 4   C477 A 170 83 5 C286 A 289 26 9C 3   C386 B 157 131 10E 4   C477 A 170 83 5 C286 A 289 26 9C 3   C386 B 157 131 10E 4   C477 A 170 83 5 C286 A 289 26 9C 3   C386 B 157 131 10E 4   C477 A 170 83 5 C286 A 289 26 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C289 B 298 49 8C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 241	C260	A 299	114	7C	3	C331			1A	4	•				
C263 B 294 135 6B 3   C352 B 181 104 8C 4   C454 A 155 79 11F 5   C264 B 286 102 8E 3   C353 B 188 98 8C 4   C455 B 216 87 2C 5   C265 B 286 100 8E 3   C355 A 195 98 9D 4   C457 A 243 77 3E 5   C266 B 281 98 8E 3   C355 A 195 98 9D 4   C457 A 243 77 3E 5   C267 B 279 100 8E 3   C355 A 195 98 9D 4   C459 A 262 95 2D 5   C268 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5   C269 B 283 84 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5   C270 B 297 80 9E 3   C358 B 208 104 10C 4   C461 A 257 14 11C 5   C270 B 297 80 9E 3   C358 B 208 104 10C 4   C462 B 217 81 2C 5   C271 B 281 59 10E 3   C361 A 218 101 10C 4   C463 A 263 82 2E 5   C272 B 289 59 10E 3   C361 A 218 101 10C 4   C465 B 224 99 1D 5   C273 A 296 48 10E 3   C362 A 213 107 11C 4   C465 B 224 99 1D 5   C274 A 292 53 10D 3   C363 A 196 108 11C 4   C467 A 257 19 12C 5   C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 B 227 19 12C 5   C277 B 275 43 11E 3   C367 B 219 105 10C 4   C468 A 227 103 3D 5   C278 A 276 68 11E 3   C368 B 217 99 10C 4   C467 A 257 109 12C 5   C278 A 283 68 11F 3   C386 B 217 99 10C 4   C467 B 231 87 4A 5   C280 B 277 41 11E 3   C386 B 217 99 10C 4   C470 B 231 87 4A 5   C281 B 290 41 8C 3   C382 A 164 122 10F 4   C471 B 192 108 4A 5   C281 B 290 41 8C 3   C385 B 157 131 10E 4   C477 A 178 83 6C 5   C284 B 296 61 7B 3   C385 B 157 131 10E 4   C477 A 178 83 6C 5   C286 B 298 49 8C 3   C386 B 157 131 10E 4   C477 A 170 83 5C 5   C286 B 298 49 8C 3   C386 B 157 131 10E 4   C477 A 170 83 5C 5   C286 B 298 49 8C 3   C386 B 157 131 10E 4   C477 A 170 83 5C 5   C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5   C291 A 274 24 11B 3   C406 B 186 45 7D 5   C485 A 178 90 6B 5   C287 A 286 22 9D 3   C388 B 157 131 10E 4   C477 A 170 83 5C 5   C289 B 287 26 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5   C299 A 283 21 11B 3   C406 B 186 45 7D 5   C485 A 178 90 6B 5   C287 A 286 22 9D 3   C388 B 157 131 10E 4   C477 B 185 88 6B 5   C289 B 289 26 9C 3   C402 B 189 59 7D 5   C481 A 241 98 4B 5   C291 A 274 24 11B 3   C406 B 185 4	C261	A 299	126	7B	3	C350			7C	4	C450				
C263 B 294 135 6B 3   C352 B 181 104 8C 4   C454 A 155 79 11F 5 C264 B 288 102 8E 3   C353 B 188 98 8C 4   C455 B 216 87 2C 5 C265 B 286 100 8E 3   C355 B 188 98 8C 4   C455 B 216 87 2C 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 84 11E 5 C267 B 279 100 8E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5 C268 B 283 87 8E 3   C357 B 204 98 9C 4   C459 A 262 95 2D 5 C268 B 283 87 8E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5 C268 B 283 87 8E 3   C356 B 208 104 10C 4   C460 B 234 80 1E 5 C269 B 283 84 8E 3   C358 B 208 104 10C 4   C461 A 257 14 11C 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 227 81 2C 5 C273 A 296 48 10E 3   C366 B 208 102 9C 4   C465 B 224 99 1D 5 C273 A 296 48 10E 3   C366 B 213 107 11C 4   C466 B 224 99 1D 5 C274 A 292 53 10D 3   C366 B 219 103 10C 4   C466 B 227 103 3D 5 C277 B 275 43 11E 3   C366 B 219 105 10C 4   C467 A 257 19 12C 5 C276 B 283 61 10E 3   C366 B 219 103 10C 4   C469 B 211 81 3C 5 C277 B 275 43 11E 3   C366 B 219 105 10C 4   C469 B 211 81 3C 5 C279 A 283 68 11F 3   C386 B 217 99 10C 4   C470 B 231 87 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C470 B 231 87 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C470 B 231 87 4A 5 C281 B 290 41 8C 3   C382 A 164 122 10F 4   C477 A 178 83 6C 5 C284 B 296 61 78 3   C385 B 157 131 10E 4   C477 A 178 83 6C 5 C284 B 296 61 78 3   C386 B 157 131 10E 4   C477 A 178 83 6C 5 C286 A 298 26 9C 3   C387 B 157 131 10E 4   C477 A 170 83 5 C286 B 287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 A 170 83 5 C286 B 287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 A 170 83 5 C286 A 298 26 9C 3   C387 B 157 131 10E 4   C477 A 170 83 5 C286 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 241 98 90 6B 5   C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 A 170 83 5 C286 A 298 26 9C 3   C387 B 157 118 10E 4   C477 B 1878 88 6B 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 B 1878 88 6B 5 C289 A 288 21 10C 3   C4	C262	B 286	117	7E	3	C351	B 183	104	8C	4	C453				
C264 B 288 102 8E 3   C353 B 188 98 8C 4   C455 B 216 87 2C 5   C265 B 286 100 8E 3   C355 A 195 98 9D 4   C457 A 243 77 3E 5   C266 B 281 98 8E 3   C355 A 195 98 9D 4   C457 A 243 77 3E 5   C267 B 279 100 8E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5   C268 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5   C269 B 283 84 8E 3   C358 B 208 104 10C 4   C461 A 257 14 11C 5   C270 B 297 80 9E 3   C359 B 204 101 9C 4   C462 B 217 81 2C 5   C271 B 281 59 10E 3   C360 B 208 102 9C 4   C463 A 263 82 2E 5   C272 B 289 59 10E 3   C360 B 208 102 9C 4   C463 A 263 82 2E 5   C273 A 296 48 10E 3   C366 B 218 101 10C 4   C466 B 224 99 1D 5   C274 A 292 53 10D 3   C363 A 196 108 11C 4   C467 A 257 19 12C 5   C274 A 292 53 10D 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5   C277 B 275 43 11E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5   C278 A 277 68 11E 3   C366 B 219 103 10C 4   C469 B 211 81 3C 5   C279 A 283 68 11F 3   C368 B 217 99 10C 4   C469 B 211 81 3C 5   C279 A 283 68 11F 3   C368 B 217 99 10C 4   C470 B 231 87 4A 5   C280 B 277 41 11E 3   C386 B 217 99 10C 4   C470 B 231 87 4A 5   C281 B 290 41 8C 3   C386 B 217 99 10C 4   C471 B 192 108 4A 5   C281 B 290 41 8C 3   C386 B 217 99 10C 4   C473 B 201 84 4D 5   C281 B 290 41 8C 3   C386 B 217 99 10C 4   C473 B 201 84 4D 5   C282 B 274 31 8C 3   C386 B 217 99 10C 4   C473 B 201 84 4D 5   C282 B 274 31 8C 3   C386 B 154 134 10E 4   C477 A 178 83 6C 5   C284 B 296 61 7B 3   C386 B 154 134 10E 4   C477 A 178 83 6C 5   C286 B 298 49 8C 3   C386 B 154 134 10E 4   C477 A 170 83 5C 5   C286 B 298 49 8C 3   C386 B 154 134 10E 4   C477 A 170 83 5C 5   C289 B 298 26 9C 3   C388 B 155 101 11E 4   C477 A 170 83 5C 5   C289 B 298 26 9C 3   C388 B 155 101 11E 4   C479 B 178 88 6B 5   C289 B 299 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5   C294 A 288 28 10C 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5   C486 B 190 80 3C 5   C294 A 288 28 10C 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5   C485 B 298 49 8C 3   C404 B 185 49 7D 5   C486 B 190 80 3C 5   C294 A 288 28 10C					3	C352	B 181	104	8C	4	C454	A 155			
C265 B 286 100 8E 3   C354 B 193 104 9C 4   C457 A 243 77 3E 5 C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 84 11E 5 C267 B 279 100 8E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5 C268 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5 C269 B 283 84 8E 3   C358 B 208 104 10C 4   C461 A 257 14 11C 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C361 A 218 101 10C 4   C461 A 257 14 11C 5 C272 B 289 59 10E 3   C361 A 218 101 10C 4   C463 A 263 82 2E 5 C272 B 289 59 10E 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C366 B 219 107 11C 4   C465 B 224 99 1D 5 C274 A 292 53 10D 3   C366 B 219 103 10C 4   C467 A 257 19 12C 5 C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5 C276 B 283 61 10E 3   C366 B 219 103 10C 4   C468 A 227 103 3D 5 C277 B 275 43 11E 3   C366 B 217 99 10C 4   C469 B 211 81 3C 5 C279 A 283 68 11F 3   C386 B 217 99 10C 4   C470 B 231 87 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C470 B 231 87 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C474 A 232 74 4E 5 C281 B 290 41 8C 3   C383 B 160 125 PE 4   C471 B 192 108 4A 5 C283 B 263 67 8B 3   C386 B 157 131 10E 4   C474 A 178 83 6C 5 C284 B 296 61 7B 3   C386 B 157 131 10E 4   C477 A 170 83 6C 5 C284 B 296 61 7B 3   C386 B 157 131 10E 4   C477 A 170 83 6C 5 C284 B 296 61 7B 3   C386 B 157 131 10E 4   C477 A 170 83 6C 5 C286 B 298 26 9C 3   C387 B 157 131 10E 4   C477 A 170 83 6C 5 C286 B 298 26 9C 3   C387 B 157 131 10E 4   C477 A 170 83 6C 5 C287 A 296 22 9D 3   C386 B 157 131 10E 4   C477 A 170 83 6C 5 C287 A 296 22 9D 3   C386 B 157 131 10E 4   C477 A 170 83 6C 5 C286 B 298 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5 C287 A 296 22 9D 3   C386 B 157 131 10E 4   C477 A 170 83 6C 5 C286 B 298 26 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C291 A 244 24 11B 3   C406 B 186 45 7D 5   C485 A 148 B 185 89 6B 5 C291 A 283 21 10C 3   C401 B 189 66 8D 5   C486 B 190 80 3C 5 5   C486 B 190 80					3	C353	B 188	98	8C	4	C455	B 216	87		5
C266 B 281 98 8E 3   C355 A 195 98 9D 4   C458 A 161 84 11E 5 C267 B 279 100 8E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5 C268 B 283 87 8E 3   C356 B 208 104 10C 4   C461 A 257 14 11C 5 C269 B 283 84 8E 3   C358 B 208 104 10C 4   C461 A 257 14 11C 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C360 B 208 102 9C 4   C462 B 217 81 2C 5 C272 B 289 59 10E 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C362 A 213 107 11C 4   C465 B 224 99 1D 5 C274 A 292 53 10D 3   C363 A 196 108 11C 4   C467 A 257 19 12C 5 C277 B 275 43 11E 3   C366 B 219 105 10C 4   C468 A 227 103 3D 5 C277 B 275 43 11E 3   C367 B 219 105 10C 4   C469 B 211 81 3C 5 C278 A 277 68 11E 3   C368 B 217 99 10C 4   C469 B 211 81 3C 5 C278 A 277 68 11E 3   C368 B 217 99 10C 4   C470 B 231 87 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C472 A 232 74 4E 5 C281 B 290 41 8C 3   C382 A 164 122 10F 4   C473 B 201 84 4D 5 C283 B 263 67 8B 3   C384 A 155 126 9E 4   C474 A 178 83 6C 5 C284 B 296 40 78 3   C388 B 157 131 10E 4   C476 A 194 90 6B 5 C285 B 298 49 8C 3   C387 B 157 118 10E 4   C476 A 194 90 6B 5 C285 B 298 49 8C 3   C388 B 157 131 10E 4   C476 A 194 90 6B 5 C286 B 287 26 9C 3   C388 B 157 131 10E 4   C476 A 194 90 6B 5 C286 B 287 26 9C 3   C388 B 157 131 10E 4   C476 A 194 90 6B 5 C286 B 287 26 9C 3   C388 B 157 131 10E 4   C476 A 194 90 6B 5 C286 B 288 287 26 9C 3   C388 B 157 131 10E 4   C476 B 186 86 6B 5 C286 B 288 287 26 9C 3   C388 B 157 131 10E 4   C476 B 186 86 6B 5 C286 B 288 287 26 9C 3   C388 B 157 131 10E 4   C476 B 186 86 6B 5 C286 B 288 287 26 9C 3   C388 B 157 131 10E 4   C476 B 186 86 6B 5 C286 B 288 287 26 9C 3   C388 B 157 131 10E 4   C477 B 170 83 6C 5 C286 B 288 287 26 9C 3   C388 B 157 101 11E 4   C479 B 178 88 6B 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C483 A 244 99 10					3	C354	B 193	104	9C	4	C457	A 243	77	3E	5
C267 B 279 100 8E 3   C356 A 203 100 9D 4   C459 A 262 95 2D 5 C268 B 283 87 8E 3   C357 B 204 98 9C 4   C460 B 234 80 1E 5 C269 B 283 84 8E 3   C358 B 208 104 10C 4   C461 A 257 14 11C 5 C270 B 297 80 9E 3   C359 B 204 101 9C 4   C462 B 217 81 2C 5 C271 B 281 59 10E 3   C350 B 208 102 9C 4   C463 A 263 82 2E 5 C272 B 289 59 10E 3   C361 A 218 101 10C 4   C464 A 233 77 3E 5 C273 A 296 48 10E 3   C366 A 213 107 11C 4   C465 B 224 99 1D 5 C274 A 292 53 10D 3   C366 B 219 103 10C 4   C466 A 227 103 3D 5 C274 A 292 53 10D 3   C366 B 219 103 10C 4   C466 A 227 103 3D 5 C277 B 275 43 11E 3   C367 B 219 105 10C 4   C468 A 227 103 3D 5 C277 B 275 43 11E 3   C367 B 219 105 10C 4   C468 A 227 103 3D 5 C279 A 283 68 11F 3   C386 B 217 99 10C 4   C470 B 211 81 3C 5 C279 A 283 68 11F 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C472 A 232 74 4E 5 C281 B 290 41 8C 3   C382 A 164 122 10F 4   C472 A 232 74 4E 5 C281 B 290 41 8C 3   C382 A 164 122 10F 4   C477 A 188 86 6B 5 C283 B 263 67 8B 3   C386 B 157 131 10E 4   C477 A 198 83 6C 5 C284 B 296 61 7B 3   C386 B 157 131 10E 4   C477 A 198 83 6C 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 B 188 86 6B 5 C286 A 298 26 9C 3   C387 B 157 131 10E 4   C477 B 188 86 6B 5 C286 A 298 26 9C 3   C387 B 157 131 10E 4   C477 B 188 86 6B 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 B 188 86 6B 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 B 188 86 6B 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 B 188 86 6B 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 B 188 86 6B 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 B 188 86 6B 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 B 188 86 6B 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C477 B 188 86 6B 5 C287 A 296 22 9D 3   C388 B 157 131 10E 4   C478 B 185 89 6B 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C291 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5 C491 A 288 28 10C 3   C401 B 189 66 8D 5   C486 B 190 80 3C 5 C291 A 288 28 10C 3   C4					3	C355	A 195	98	9D	4	C458	A 161	84	11E	5
C268 B 283 87 8E 3 C357 B 204 98 9C 4 C460 B 234 80 1E 5 C269 B 283 84 8E 3 C358 B 208 104 10C 4 C461 A 257 14 11C 5 C270 B 297 80 9E 3 C359 B 204 101 9C 4 C462 B 217 81 2C 5 C271 B 281 59 10E 3 C360 B 208 102 9C 4 C463 A 263 82 2E 5 C272 B 289 59 10E 3 C361 A 218 101 10C 4 C464 A 233 77 3E 5 C273 A 296 48 10E 3 C362 A 213 107 11C 4 C465 B 224 99 1D 5 C274 A 292 53 10D 3 C363 A 196 108 11C 4 C465 B 224 99 1D 5 C276 B 283 61 10E 3 C366 B 219 103 10C 4 C468 A 227 103 3D 5 C277 B 275 43 11E 3 C367 B 219 105 10C 4 C468 A 227 103 3D 5 C278 A 277 68 11E 3 C367 B 219 105 10C 4 C469 B 211 81 3C 5 C279 A 283 68 11F 3 C380 B 165 118 9E 4 C470 B 231 87 4A 5 C280 B 277 41 11E 3 C381 A 161 127 10F 4 C473 B 201 84 4D 5 C281 B 290 41 8C 3 C382 A 164 122 10F 4 C473 B 201 84 4D 5 C282 B 274 31 8C 3 C383 B 160 125 9E 4 C474 A 178 83 6C 5 C283 B 263 67 8B 3 C384 A 155 126 9E 4 C477 A 170 83 5C 5 C286 A 298 26 9C 3 C387 B 157 131 10E 4 C478 B 185 89 6B 5 C287 A 296 22 9D 3 C388 B 157 131 10E 4 C477 A 170 83 5C 5 C286 A 298 26 9C 3 C387 B 157 118 10E 4 C477 A 170 83 5C 5 C286 B 278 4 29 8C 3 C388 B 157 131 10E 4 C477 A 170 83 5C 5 C286 B 298 49 8C 3 C386 B 157 131 10E 4 C477 A 170 83 5C 5 C287 A 296 22 9D 3 C388 B 157 131 10E 4 C477 A 170 83 5C 5 C288 B 298 49 8C 3 C388 B 157 131 10E 4 C477 A 170 83 5C 5 C286 B 298 49 8C 3 C388 B 157 131 10E 4 C477 A 170 83 5C 5 C287 A 296 22 9D 3 C388 B 157 131 10E 4 C477 A 170 83 5C 5 C288 B 298 49 8C 3 C388 B 157 131 10E 4 C477 A 170 83 5C 5 C288 B 298 49 8C 3 C388 B 157 131 10E 4 C479 B 178 88 6B 5 C289 B 290 25 9C 3 C402 B 189 59 7D 5 C488 B 197 91 3C 5 C290 A 283 21 11B 3 C406 B 186 45 7D 5 C488 A 241 98 4B 5 C291 A 274 24 11B 3 C406 B 186 45 7D 5 C488 A 241 98 4B 5 C292 B 278 23 11C 3 C408 B 178 44 8C 5 C486 B 190 80 3C 5  MENP						C356	A 203	100	9D	4	C459	A 262	95	2D	5
C269 B 283 84 8E 3 C358 B 208 104 10C 4 C461 A 257 14 11C 5 C270 B 297 80 9E 3 C359 B 204 101 9C 4 C462 B 217 81 2C 5 C271 B 281 59 10E 3 C360 B 208 102 9C 4 C463 A 263 82 2E 5 C272 B 289 59 10E 3 C361 A 218 101 10C 4 C464 A 233 77 3E 5 C273 A 296 48 10E 3 C362 A 213 107 11C 4 C465 B 224 99 1D 5 C274 A 292 53 10D 3 C363 A 196 108 11C 4 C466 A 227 103 3D 5 C276 B 283 61 10E 3 C366 B 219 103 10C 4 C468 A 227 103 3D 5 C277 B 275 43 11E 3 C366 B 219 105 10C 4 C469 B 211 81 3C 5 C278 A 277 68 11E 3 C368 B 217 99 10C 4 C469 B 211 81 3C 5 C279 A 283 68 11F 3 C380 B 165 11B 9E 4 C471 B 192 108 4A 5 C280 B 277 41 11E 3 C381 A 161 127 10F 4 C472 A 232 74 4E 5 C281 B 290 41 8C 3 C382 A 164 122 10F 4 C473 B 201 84 4D 5 C282 B 274 31 8C 3 C383 B 160 125 9E 4 C474 A 178 83 6C 5 C283 B 263 67 8B 3 C384 A 155 126 9E 4 C476 A 194 90 6B 5 C284 B 296 61 7B 3 C386 B 157 131 10E 4 C476 A 194 90 6B 5 C285 B 298 49 8C 3 C386 B 157 131 10E 4 C476 A 194 90 6B 5 C286 A 298 26 9C 3 C387 B 157 131 10E 4 C476 A 194 90 6B 5 C287 A 296 22 9D 3 C388 B 153 101 11E 4 C477 A 170 83 5C 5 C288 B 287 26 9C 3 C387 B 157 131 10E 4 C477 A 170 83 5C 5 C288 B 287 26 9C 3 C387 B 157 118 10E 4 C477 A 170 83 5C 5 C288 B 287 26 9C 3 C387 B 157 118 10E 4 C477 A 170 83 5C 5 C289 B 290 25 9C 3 C401 B 189 66 8D 5 C480 A 255 105 2A 5 C290 A 283 21 11B 3 C406 B 186 45 7D 5 C482 B 197 91 3C 5 C291 A 274 24 11B 3 C406 B 186 45 7D 5 C482 B 197 91 3C 5 C292 B 278 23 11C 3 C408 B 178 44 8C 5 C486 B 190 80 3C 5 C293 A 288 41 10D 3 C410 A 203 47 7C 5 C485 A 178 90 5D 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5						C357	B 204	98	9C	4	C460	B 234	80	1E	5
C270 B 297 80 9E 3 C359 B 204 101 9C 4 C462 B 217 81 2C 5 C271 B 281 59 10E 3 C360 B 208 102 9C 4 C463 A 263 82 2E 5 C272 B 289 59 10E 3 C361 A 218 101 10C 4 C464 A 233 77 3E 5 C273 A 296 48 10E 3 C362 A 213 107 11C 4 C465 B 224 99 1D 5 C274 A 292 53 10D 3 C363 A 196 108 11C 4 C467 A 257 19 12C 5 C276 B 283 61 10E 3 C366 B 219 103 10C 4 C468 A 227 103 3D 5 C277 B 275 43 11E 3 C367 B 219 105 10C 4 C468 A 227 103 3D 5 C278 A 277 68 11E 3 C368 B 217 99 10C 4 C470 B 231 87 4A 5 C279 A 283 68 11F 3 C380 B 165 118 9E 4 C471 B 192 108 4A 5 C280 B 277 41 11E 3 C381 A 161 127 10F 4 C472 A 232 74 4E 5 C281 B 290 41 8C 3 C382 A 164 122 10F 4 C473 B 201 84 4D 5 C282 B 274 31 8C 3 C383 B 160 125 9E 4 C474 A 178 83 6C 5 C284 B 266 61 7B 3 C388 B 157 131 10E 4 C476 A 194 90 6B 5 C285 B 298 49 8C 3 C386 B 157 131 10E 4 C476 A 194 90 6B 5 C286 A 298 26 9C 3 C387 B 157 118 10E 4 C477 A 170 83 5C 5 C287 A 296 22 9D 3 C388 B 157 118 10E 4 C477 A 170 83 5C 5 C289 B 278 21 11B 3 C404 B 185 49 7D 5 C482 B 197 91 3C 5 C290 A 283 21 11B 3 C404 B 185 49 7D 5 C482 B 197 91 3C 5 C291 A 274 24 11B 3 C406 B 186 45 7D 5 C481 A 247 95 3D 5 C290 A 283 21 11B 3 C404 B 185 49 7D 5 C482 B 197 91 3C 5 C291 A 278 23 11C 3 C408 B 178 44 8C 5 C484 A 241 98 48 65 C292 B 278 23 11C 3 C408 B 178 44 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5						!	B 208	104	10C	4	C461	A 257	14	11C	5
C271 B 281 59 10E 3 C360 B 208 102 9C 4 C463 A 263 82 2E 5 C272 B 289 59 10E 3 C361 A 218 101 10C 4 C464 A 233 77 3E 5 C273 A 296 48 10E 3 C362 A 213 107 11C 4 C465 B 224 99 1D 5 C274 A 292 53 10D 3 C363 A 196 108 11C 4 C467 A 257 19 12C 5 C276 B 283 61 10E 3 C366 B 219 103 10C 4 C468 A 227 103 3D 5 C277 B 275 43 11E 3 C366 B 219 105 10C 4 C469 B 211 81 3C 5 C278 A 277 68 11E 3 C368 B 217 99 10C 4 C469 B 211 81 3C 5 C279 A 283 68 11F 3 C380 B 165 118 9E 4 C471 B 192 108 4A 5 C280 B 277 41 11E 3 C381 A 161 127 10F 4 C472 A 232 74 4E 5 C281 B 290 41 8C 3 C383 B 160 125 9E 4 C471 B 192 108 4A 5 C282 B 274 31 8C 3 C383 B 160 125 9E 4 C474 A 178 83 6C 5 C283 B 263 67 8B 3 C384 A 155 126 9E 4 C476 A 194 90 6B 5 C284 B 296 61 7B 3 C385 B 157 131 10E 4 C476 A 194 90 6B 5 C285 B 298 49 8C 3 C386 B 157 131 10E 4 C476 A 194 90 6B 5 C286 A 298 26 9C 3 C387 B 157 118 10E 4 C477 A 170 83 5C 5 C288 B 287 26 9C 3 C388 B 153 101 11E 4 C477 B 170 83 5C 5 C289 B 290 25 9C 3 C401 B 189 66 8D 5 C480 A 255 105 2A 5 C289 B 290 25 9C 3 C402 B 189 59 7D 5 C481 A 247 95 3D 5 C290 A 283 21 11B 3 C404 B 185 49 7D 5 C482 B 197 91 3C 5 C291 A 274 24 11B 3 C406 B 186 45 7D 5 C483 A 254 74 3A 5 C292 B 278 23 11C 3 C408 B 178 44 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5						•				4	C462	B 217	81	2C	5
C272 B 289 59 10E 3 C361 A 218 101 10C 4 C464 A 233 77 3E 5 C273 A 296 48 10E 3 C362 A 213 107 11C 4 C465 B 224 99 1D 5 C274 A 292 53 10D 3 C363 A 196 108 11C 4 C467 A 257 19 12C 5 C276 B 283 61 10E 3 C366 B 219 103 10C 4 C468 A 227 103 3D 5 C277 B 275 43 11E 3 C366 B 219 105 10C 4 C468 A 227 103 3D 5 C278 A 277 68 11E 3 C368 B 217 99 10C 4 C469 B 211 81 3C 5 C278 A 277 68 11E 3 C380 B 165 118 9E 4 C470 B 231 87 4A 5 C279 A 283 68 11F 3 C380 B 165 118 9E 4 C471 B 192 108 4A 5 C280 B 277 41 11E 3 C381 A 161 127 10F 4 C472 A 232 74 4E 5 C281 B 290 41 8C 3 C382 A 164 122 10F 4 C473 B 201 84 4D 5 C282 B 274 31 8C 3 C383 B 160 125 9E 4 C474 A 178 83 6C 5 C283 B 263 67 8B 3 C384 A 155 126 9E 4 C477 A 170 83 5C 5 C284 B 298 49 8C 3 C386 B 157 131 10E 4 C476 A 194 90 6B 5 C285 B 298 49 8C 3 C386 B 154 134 10E 4 C476 A 194 90 6B 5 C286 A 298 26 9C 3 C387 B 157 118 10E 4 C477 A 170 83 5C 5 C287 A 296 22 9D 3 C388 B 153 101 11E 4 C479 B 178 88 6B 5 C288 B 287 26 9C 3 C388 B 153 101 11E 4 C479 B 178 88 6B 5 C289 B 290 25 9C 3 C401 B 189 66 8D 5 C480 A 255 105 2A 5 C289 B 290 25 9C 3 C402 B 189 59 7D 5 C481 A 247 95 3D 5 C290 A 283 21 11B 3 C404 B 185 49 7D 5 C482 B 197 91 3C 5 C291 A 274 24 11B 3 C406 B 186 45 7D 5 C483 A 254 74 3A 5 C292 B 278 23 11C 3 C408 B 178 44 8C 5 C486 B 190 80 3C 5  MENP PFLUGER Datum XY-Liste fuer Sachnummer Aei Bla  MENP PFLUGER Datum XY-Liste fuer Sachnummer Aei Bla  MENP PFLUGER Datum XY-Liste fuer Sachnummer Aei Bla  MENP PFLUGER Datum XY-Liste fuer Sachnummer Aei Bla  MENP PFLUGER Datum XY-Liste fuer Sachnummer Aei Bla  MENP PFLUGER Datum XY-Liste fuer Sachnummer Aei Bla  MENP PFLUGER Datum XY-Liste fuer Sachnummer Aei Bla  MENP PFLUGER Datum XY-Liste fuer Sachnummer Aei Bla									9C	4	C463	A 263	82	2E	5
C273 A 296 48 10E 3 C362 A 213 107 11C 4 C465 B 224 99 1D 5 C274 A 292 53 10D 3 C363 A 196 108 11C 4 C467 A 257 19 12C 5 C276 B 283 61 10E 3 C366 B 219 103 10C 4 C468 A 227 103 3D 5 C277 B 275 43 11E 3 C367 B 219 105 10C 4 C468 A 227 103 3D 5 C278 A 277 68 11E 3 C368 B 217 99 10C 4 C470 B 231 87 4A 5 C279 A 283 68 11F 3 C380 B 165 118 9E 4 C471 B 192 108 4A 5 C280 B 277 41 11E 3 C381 A 161 127 10F 4 C472 A 232 74 4E 5 C281 B 290 41 8C 3 C382 A 164 122 10F 4 C473 B 201 84 4D 5 C282 B 274 31 8C 3 C383 B 160 125 9E 4 C474 A 178 83 6C 5 C283 B 263 67 8B 3 C384 A 155 126 9E 4 C475 A 188 86 6B 5 C284 B 296 61 7B 3 C386 B 157 131 10E 4 C476 A 194 90 6B 5 C285 B 298 49 8C 3 C386 B 157 131 10E 4 C476 A 194 90 6B 5 C286 A 298 26 9C 3 C387 B 157 118 10E 4 C478 B 185 89 6B 5 C287 A 296 22 9D 3 C388 B 153 101 11E 4 C479 B 178 88 6B 5 C288 B 287 26 9C 3 C401 B 189 66 8D 5 C480 A 255 105 2A 5 C289 A 283 21 11B 3 C404 B 185 49 7D 5 C482 B 197 91 3C 5 C290 A 283 21 11B 3 C406 B 186 45 7D 5 C482 B 197 91 3C 5 C291 A 274 24 11B 3 C406 B 186 45 7D 5 C481 A 247 95 3D 5 C291 A 274 24 11B 3 C406 B 186 45 7D 5 C482 B 197 91 3C 5 C294 A 288 28 10C 3 C410 A 203 47 7C 5 C485 A 178 90 5D 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5						*				4	C464	A 233	77	3E	5
C274 A 292 53 10D 3 C363 A 196 108 11C 4 C467 A 257 19 12C 5 C276 B 283 61 10E 3 C366 B 219 103 10C 4 C468 A 227 103 3D 5 C277 B 275 43 11E 3 C367 B 219 105 10C 4 C468 A 227 103 3D 5 C278 A 277 68 11E 3 C368 B 217 99 10C 4 C470 B 231 87 4A 5 C279 A 283 68 11F 3 C380 B 165 118 9E 4 C471 B 192 108 4A 5 C280 B 277 41 11E 3 C381 A 161 127 10F 4 C472 A 232 74 4E 5 C281 B 290 41 8C 3 C382 A 164 122 10F 4 C473 B 201 84 4D 5 C282 B 274 31 8C 3 C383 B 160 125 9E 4 C474 A 178 83 6C 5 C283 B 263 67 8B 3 C384 A 155 126 9E 4 C474 A 178 83 6C 5 C284 B 296 61 7B 3 C385 B 157 131 10E 4 C476 A 188 86 6B 5 C284 B 298 49 8C 3 C386 B 154 134 10E 4 C477 A 170 83 5C 5 C285 B 298 26 9C 3 C387 B 157 118 10E 4 C477 B 185 89 6B 5 C286 A 298 26 9C 3 C388 B 153 101 11E 4 C479 B 178 88 6B 5 C287 A 296 22 9D 3 C388 B 153 101 11E 4 C479 B 178 88 6B 5 C288 B 287 26 9C 3 C401 B 189 66 8D 5 C480 A 255 105 2A 5 C290 A 283 21 11B 3 C404 B 185 49 7D 5 C482 B 197 91 3C 5 C291 A 274 24 11B 3 C406 B 186 45 7D 5 C483 A 254 74 3A 5 C292 B 278 23 11C 3 C408 B 178 44 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5						!				4		B 224	99	1D	5
C276 B 283 61 10E 3 C366 B 219 103 10C 4 C468 A 227 103 3D 5 C277 B 275 43 11E 3 C367 B 219 105 10C 4 C469 B 211 81 3C 5 C278 A 277 68 11E 3 C368 B 217 99 10C 4 C470 B 231 87 4A 5 C279 A 283 68 11F 3 C380 B 165 118 9E 4 C471 B 192 108 4A 5 C280 B 277 41 11E 3 C381 A 161 127 10F 4 C472 A 232 74 4E 5 C281 B 290 41 8C 3 C382 A 164 122 10F 4 C473 B 201 84 4D 5 C282 B 274 31 8C 3 C383 B 160 125 9E 4 C474 A 178 83 6C 5 C283 B 263 67 8B 3 C384 A 155 126 9E 4 C474 A 178 83 6C 5 C284 B 296 61 7B 3 C385 B 157 131 10E 4 C476 A 194 90 6B 5 C285 B 298 49 8C 3 C386 B 154 134 10E 4 C476 A 194 90 6B 5 C286 A 298 26 9C 3 C387 B 157 118 10E 4 C478 B 185 89 6B 5 C287 A 296 22 9D 3 C388 B 153 101 11E 4 C479 B 178 88 6B 5 C287 A 296 22 9D 3 C388 B 153 101 11E 4 C479 B 178 88 6B 5 C289 B 290 25 9C 3 C401 B 189 66 8D 5 C480 A 255 105 2A 5 C290 A 283 21 11B 3 C404 B 185 49 7D 5 C482 B 197 91 3C 5 C291 A 274 24 11B 3 C406 B 186 45 7D 5 C482 B 197 91 3C 5 C292 B 278 23 11C 3 C408 B 178 44 8C 5 C484 A 241 98 4B 5 C293 A 288 41 10D 3 C410 A 203 47 7C 5 C485 A 178 90 5D 5 C294 A 288 28 10C 3 C411 B 193 43 8C 5 C486 B 190 80 3C 5  MENP						•					1	A 257	19	12C	5
C277 B 275 43 11E 3   C367 B 219 105 10C 4   C469 B 211 81 3C 5 C278 A 277 68 11E 3   C368 B 217 99 10C 4   C470 B 231 87 4A 5 C279 A 283 68 11F 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C472 A 232 74 4E 5 C281 B 290 41 8C 3   C382 A 164 122 10F 4   C473 B 201 84 4D 5 C282 B 274 31 8C 3   C383 B 160 125 9E 4   C474 A 178 83 6C 5 C283 B 263 67 8B 3   C384 A 155 126 9E 4   C474 A 178 83 6C 5 C284 B 296 61 7B 3   C385 B 157 131 10E 4   C476 A 194 90 6B 5 C285 B 298 49 8C 3   C386 B 154 134 10E 4   C476 A 194 90 6B 5 C286 A 298 26 9C 3   C387 B 157 118 10E 4   C477 A 170 83 5C 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5 C291 A 274 24 11B 3   C406 B 186 45 7D 5   C482 B 197 91 3C 5 C291 A 274 24 11B 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5 C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5															
C278 A 277 68 11E 3   C368 B 217 99 10C 4   C470 B 231 87 4A 5   C279 A 283 68 11F 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5   C280 B 277 41 11E 3   C381 A 161 127 10F 4   C472 A 232 74 4E 5   C281 B 290 41 8C 3   C382 A 164 122 10F 4   C473 B 201 84 4D 5   C282 B 274 31 8C 3   C383 B 160 125 9E 4   C474 A 178 83 6C 5   C283 B 263 67 8B 3   C384 A 155 126 9E 4   C475 A 188 86 6B 5   C284 B 296 61 7B 3   C385 B 157 131 10E 4   C476 A 194 90 6B 5   C285 B 298 49 8C 3   C386 B 154 134 10E 4   C477 A 170 83 5C 5   C286 A 298 26 9C 3   C387 B 157 118 10E 4   C477 A 170 83 5C 5   C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5   C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5   C289 B 290 25 9C 3   C402 B 189 59 7D 5   C480 A 255 105 2A 5   C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5   C291 A 274 24 11B 3   C406 B 186 45 7D 5   C482 B 197 91 3C 5   C291 A 274 24 11B 3   C408 B 178 44 8C 5   C486 B 190 80 3C 5   C292 B 278 23 11C 3   C408 B 178 44 8C 5   C486 B 190 80 3C 5   C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 283 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C480 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80						•					•			3C	5
C279 A 283 68 11F 3   C380 B 165 118 9E 4   C471 B 192 108 4A 5 C280 B 277 41 11E 3   C381 A 161 127 10F 4   C472 A 232 74 4E 5 C281 B 290 41 8C 3   C382 A 164 122 10F 4   C473 B 201 84 4D 5 C282 B 274 31 8C 3   C383 B 160 125 9E 4   C474 A 178 83 6C 5 C283 B 263 67 8B 3   C384 A 155 126 9E 4   C475 A 188 86 6B 5 C284 B 296 61 7B 3   C385 B 157 131 10E 4   C476 A 194 90 6B 5 C285 B 298 49 8C 3   C386 B 154 134 10E 4   C476 A 194 90 6B 5 C286 A 298 26 9C 3   C387 B 157 118 10E 4   C477 A 170 83 5C 5 C286 A 298 26 9C 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5 C291 A 274 24 11B 3   C406 B 186 45 7D 5   C482 B 197 91 3C 5 C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5 C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5											:				
C280 B 277 41 11E 3   C381 A 161 127 10F 4   C472 A 232 74 4E 5 C281 B 290 41 8C 3   C382 A 164 122 10F 4   C473 B 201 84 4D 5 C282 B 274 31 8C 3   C383 B 160 125 9E 4   C474 A 178 83 6C 5 C283 B 263 67 8B 3   C384 A 155 126 9E 4   C475 A 188 86 6B 5 C284 B 296 61 7B 3   C385 B 157 131 10E 4   C476 A 194 90 6B 5 C285 B 298 49 8C 3   C386 B 154 134 10E 4   C476 A 194 90 6B 5 C286 A 298 26 9C 3   C387 B 157 118 10E 4   C477 A 170 83 5C 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5 C291 A 274 24 11B 3   C406 B 186 45 7D 5   C483 A 254 74 3A 5 C292 B 278 23 11C 3   C408 B 178 48 8C 5   C486 B 190 80 3C 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5  MENP						1					•				
C280 B 277 41 11E 3   C381						•									
C282 B 274 31 8C 3   C383 B 160 125 9E 4   C474 A 178 83 6C 5 C283 B 263 67 8B 3   C384 A 155 126 9E 4   C475 A 188 86 6B 5 C284 B 296 61 7B 3   C385 B 157 131 10E 4   C476 A 194 90 6B 5 C285 B 298 49 8C 3   C386 B 154 134 10E 4   C477 A 170 83 5C 5 C286 A 298 26 9C 3   C387 B 157 118 10E 4   C478 B 185 89 6B 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5 C291 A 274 24 11B 3   C406 B 186 45 7D 5   C482 B 197 91 3C 5 C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5 C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5											•				
C283 B 263 67 8B 3   C384 A 155 126 9E 4   C475 A 188 86 6B 5 C284 B 296 61 7B 3   C385 B 157 131 10E 4   C476 A 194 90 6B 5 C285 B 298 49 8C 3   C386 B 154 134 10E 4   C477 A 170 83 5C 5 C286 A 298 26 9C 3   C387 B 157 118 10E 4   C478 B 185 89 6B 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5 C291 A 274 24 11B 3   C406 B 186 45 7D 5   C482 B 197 91 3C 5 C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5 C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5						<u>I</u>					!				
C284 B 296 61 7B 3   C385 B 157 131 10E 4   C476 A 194 90 6B 5 C285 B 298 49 8C 3   C386 B 154 134 10E 4   C477 A 170 83 5C 5 C286 A 298 26 9C 3   C387 B 157 118 10E 4   C478 B 185 89 6B 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5 C291 A 274 24 11B 3   C406 B 186 45 7D 5   C483 A 254 74 3A 5 C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5 C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5  MENP						•									
C285 B 298 49 8C 3   C386 B 154 134 10E 4   C477 A 170 83 5C 5 C286 A 298 26 9C 3   C387 B 157 118 10E 4   C478 B 185 89 6B 5 C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5 C291 A 274 24 11B 3   C406 B 186 45 7D 5   C482 B 197 91 3C 5 C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5 C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5 C480 A 283 21   E8 EFERENZ STEPSYNTHESE   Sachnummer   Aei   Bla PFLUGER   Date   XY-Liste fuer   Sachnummer   Aei   Bla PFLUGER   Date   XY-Liste fuer   Sachnummer   Aei   Bla PFLUGER   Date   XY-Liste fuer   Sachnummer   Aei   Bla PFLUGER   Date   XY-Liste fuer   Stock-No.   Pag						,					:				
C286 A 298 26 9C 3   C387 B 157 118 10E 4   C478 B 185 89 6B 5   C287 A 296 22 9D 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5   C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5   C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5   C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5   C291 A 274 24 11B 3   C406 B 186 45 7D 5   C483 A 254 74 3A 5   C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5   C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5   C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C487   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80 3C 5   C488 B 190 80	C284										•				
C286 A 298 26 9C 3   C388 B 153 101 11E 4   C479 B 178 88 6B 5 C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5 C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5 C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5 C291 A 274 24 11B 3   C406 B 186 45 7D 5   C483 A 254 74 3A 5 C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5 C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5  MENP   Datum   XY-Liste fuer   Sachnummer   Aei   Bla PFLUGER   Date   XY-list for   Stock-No.   Pag	C285														
C287 A 296 22 9D 3   C388 B 133 101 121   C480 A 255 105 2A 5   C288 B 287 26 9C 3   C401 B 189 66 8D 5   C480 A 255 105 2A 5   C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5   C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5   C291 A 274 24 11B 3   C406 B 186 45 7D 5   C483 A 254 74 3A 5   C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5   C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5   C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C4	C286					,									
C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5   C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5   C291 A 274 24 11B 3   C406 B 186 45 7D 5   C483 A 254 74 3A 5   C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5   C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5   C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486	C287					•					•				
C289 B 290 25 9C 3   C402 B 189 59 7D 5   C481 A 247 95 3D 5	C288	B 287	7 26	5 90	3	•					•				
C290 A 283 21 11B 3   C404 B 185 49 7D 5   C482 B 197 91 3C 5   C291 A 274 24 11B 3   C406 B 186 45 7D 5   C483 A 254 74 3A 5   C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5   C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5   C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486	C289	B 290	2	5 90	3	•									
C291 A 274 24 11B 3   C406 B 186 45 7D 5   C483 A 254 74 3A 5 C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5 C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5    MENP		A 283	3 2	1 11E		*									
C292 B 278 23 11C 3   C408 B 178 44 8C 5   C484 A 241 98 4B 5   C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5   C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B 190 80 3C 5   C486 B				4 11E	3										
C293 A 288 41 10D 3   C410 A 203 47 7C 5   C485 A 178 90 5D 5 C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5  MENP						C408					•				
C294 A 288 28 10C 3   C411 B 193 43 8C 5   C486 B 190 80 3C 5  MENP   Datum   XY-Liste fuer   Sachnummer   Aei   Bla PFLUGER   Date   XY-list for   Stock-No.   Pag    98-02-11   EE REFERENZ STEPSYNTHESE   1035.6501.01 XY   11.00   2							A 203	47							
MENP   Datum   XY-Liste fuer   Sachnummer   Aei   Bla PFLUGER   Date   XY-list for   Stock-No.   Pag   Pag	C294	A 289	3 2	8 100	3	C411	B 193	43	80					3C	5
PFLUGER   Date   XY-list for   Stock-No.   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag   Pag			+ 1	Dati	 .m	   XY-Li:	ste fuer				Sachr	nummer	A		
98-02-11 EE REFERENZ STEPSYNTHESE   1035.6501.01 XY 11.00   2				Date		xy-li	st for				Stock	c-No.			Pag
ROHDE & SCHWARZ REFERENZ_STEPSYNTHESE			+ 	98-0	 2-11	+  EE REF	ERENZ ST	EPS	NTHE	ESE	1035.6	501.01 X	7   11	.00	2

Part S			Y	Sqr		Part S									Y		Pg
C487	 A	241	77	4B	5	+   C580	в	80	14	8C	6	D515-0	:			2.A	
C488	A	176	80	6C	5	C582	В	85	137	6F	6	D520-F	В	77	39	4 E	E 6
C489	Α	203	69	6A	5	C595	В	78	102	11E	6	D520-E	3			3 <i>A</i>	4 6
C491	Α	228	82	5B	5	C609	Α	136	36	4F	7	D525-F	В	69	66	30	6
C492	A	214	84	5B	5	C610	A	74	50	2A	7	D525-E	3			30	6
C500	В	52	59	1A	6	C620	Α	100	14	1A	7	D525~C	?			4 A	4 6
C501	A	38	67	2A	6	C621	В	130	76	6E	7	D535-A	В	55	60	3 F	· 6
C510	${\mathtt B}$	54	85	2A	6	C650	В	121	114	3A	7	D535-E	3			70	6
C511	В	34	38	10E	2	C660	В	118	132	3A	7	D535-0	?			71	) 6
C513	В	29	30	11E	2	C680	В	128	98	4A	7	D535-I	)			9F	7 6
C514	A	29	21	11E	2	C685	В	130	110	10D	7	D535-E	C			2 <i>P</i>	4 6
C515	A	29	41	11D	2	C688	В	123	107	11E	7	D550-7	В	77	83	31	6
C516	A	29	44	11D	2	C690	A	128	116	6A	7	D550-E	3			21	6 (
C517	В	41		11C	2	C691	В	140	117	6A	7	D550-0	1			4E	3 6
C519	В	40	57	11C	2	C695	В		107	10C	7	D550-I	)			31	) 6
C524	В	58	55	4F	6	C697		118		11D	7	D550-E				47	
C525	В	65	38	4E	6	C698	Ā			11C	7	D555	A	86	127		-
C526	В	63	32	5E	6	C900	В	62	91	3A	6	D600-A		91	14		
C520	A	56	82	5D	6	C901	A	69	34	4A	6	D600-F		25	7.7	2E	
		51	78	6D	6	D95-A	В	44	46	9E	2	D600-E				21	
C531	A					!	D	44	40			D600-E					
C532	A	56	71	6D	6	D95-B				10C	2	•				21	
C535	A	76	66	3B	6	D95-C	_			10B	2	D600-E				1A	
C536	A	74	72	4B	6	D320-A		220	50	6E	4	D620-A		118	100		
C537	A	81	75	4B	6	D320-B				3A	4	D620-E				5.A	
C538	В	52	98	4C	6	D320-C				2A	4	D630-A		69	62	5C	
C539	В	60	105	4C	6	D330-A		232	70	5C	4	D630-E				2 <i>A</i>	
C540	A		116	5A	6	D330-B				4A	4	D640-F		117	117		
C541	В	53	112	4B	6	D340-A	A	220	60	5B	4	D640-E	3			81	7
C542	В	59	123	5C	6	D340-B				5A	4	D640-0	:			7E	
C543	В	57	130	6C	6	D430-A	Α	250	93	5A	5	D640-I	)			110	7
C544	Α	85	119	5A	6	D430-B				5A	5	D640-E	Ċ			110	7
C545	A	63	115	5C	6	D430-C				2D	5	D640-E	7			11E	3 7
C546	Α	57	121	5C	6	D430-D				1D	5	D640-0	;			47	A 7
C547	A	102	122	6A	6	D430-E				2A	5	D650-A	A	118	131	8E	3 7
C548	A	97	122	6A	6	D445-A	. A	250	77	5A	5	D650-E	3			3 <i>P</i>	A 7
C552	В	104	110	10D	6	D445-B				5A	5	D660-#	A	139	140	81	7
C555	Α	100	130	8E	6	D445-C				2E	5	D660-E				3 <i>P</i>	
C556	A	105	130	5A	6	D445-D	ı			1E		D680-A	A	133	102	10F	3 7
C557	Α		124			D445-E				3A		D680-E				11E	
C558	Α		124			D460-A		219	88			D680-0				100	
C560	В			10F		D460-B				6E		D680-I				110	
C561	В			10E		D460-C				2B		D680-E				4A	
C562	В		100			D460-D				2B		1		21	100		
C563	В			12F		D460-E				5B			В		93		
C564	В		109			D500-A		30	63				В		80		
	В			10D		D500-A		27	03	2E 1A		L15	В		113		
C565	-					D500-B		ΛE	20		2			43	97		
C566	A	63	51			!		45	39	10E		L30					
C567	A	60	20			D505-B				7A		L33	В		83		
C570	A	42	20			D505-C				A8		L50		181			
C574	A	67		10C		D505-D				10D		L55		181			
C575	В	78	22			D505-E		_	_	9B		L65		181			
C576	A	65		10C		D510-A		77	50	2D		L73	В		47		
C577	A	74		11C		D510-E					6	L75	В	20			2
	B A	60 72				D515-A		54	74	2B 3E	6 6	L85 L96	B	13 57	64 40	70 10F	2 2
			- <b>- + -</b>		+	XY-List					+	-			+	4	
MENP			,			XY-List						Stock-			I A	:	:
PFLUG	ĽК			Date		XY-11ST											Page
		· ·	-+-														•
						EE REFER REFERENZ					⊃r:	1035.65	/ J	OT X;	111	.00	_ງ 3- ເ
ROHDE &																	

`.

Part Si	de	X	Y	Sqr	Pg	Part !	Side	X	Y	Sqr	Pg	Part Si	ide	X	Y	sqr	Pg
L97	 В	 48	37	10E	2	L402	 В	198	 70	8E	5	N468-D				2A	5
	B	15	58	9C	2	L405		188	68	7E	5	N468-E				4A	5
		147	16	2C	2	L408	В	178	52	8D	5	N470	В	219	87	1C	5
	В	125	16	2B	2	L410	В	192	51	7D	5	N530	A		115	5C	6
	В	126	20	2B	2	L415	В	171	41	8D	5	N550-A	В	95	122	10D	6
103	В	90	7	2B	2	L418	В	189	36	8B	5	N550-B				6A	6
104	В	114	20	2A	2	L420	В	194	31	8A	5	N562-A	В	85	119	9E	6
L107	В	118	46	3B	2	L435	В	158	62	10E	5	N562-B				5A	6
L108	В	116	79	3B	2	L436	В	210	34	9C	5	N565-A	В	90	130	8E	6
L109	В	90	38	3B	2	L437	В	237	17	10C	5	N565-B	_			5A	6
L110	В	113	84	3A	2	L438	В	227		11C	5	N585	В		138	6E	6
L209	В	209	119	2B	3	L439	В	237	11	11C	5	N680-A	A	133	116	10E	7
L210	В	95	55	5B	2	L448		156	80	11E	5	N680-B				10E	7
L211		199	108	3A	3	L450		253	67	3A	5	N680-C				10C	7
		208		3C	3	L463	В	247	75	2E	5	N680-D				100	7 7
		198		3C	3	L464		243	83	3E	5	N680-E	77	ລລຣັ	70	6A 6E	4
		275		6E	3	L466		184	90	6B	5	P325		<ul><li>236</li><li>239</li></ul>	70 70	6E	4
		299		7E	3	L467		244		3D	5	P326	В		118	2D	2
		299		7C	3	L468	В	247	91	3D	5	R1	A B		110		
		296		6B	3	L470	В	220	77	2C	5 5	R2   R4	A		100		
		290		7E	3	L475	В	170 173	90	5C 6C	5	R4	A	28	104		
L271-A	R	295	69	9E	3	L476	B A		80 105	2A	5	R0   R7	A		109		
L271-B	Б	274	60	9E	3 3	L480	В	51	65	1A	6	R8	A		124		
		<ul><li>274</li><li>278</li></ul>	69 55	11E 9C	3	L500	В	61	85	2A	6	R10	A		109		
		263	63	9B	3	L511	В	31	46	10E	2	R11	A		114		
L281 L288		298	22	9C	3	L513	В	31	30		2	R15	Α	18	104		
L291		284	44	9D	3	L519	Ā	39	58		2	R16	A	17	101		
L291		284	27		3	L525	В	63	48	4F	6	R17	A	29	113		
L320		228	30	5F	4	L526	В	60	42	5F	6	R21	A	35	116		
L322		212	46	1A	4	L550	В	69	87	3A	6	R22	A	43	124		
L324		225	30	2C	4	L551	В	151	31	8D	7	R30	A	32	98	4E	2
L325		225	73	6E	4	L552	В	161	16	7D	6	R31	A	40	96	4D	2
L326		223	69	6E	4	L553	В	161	31	7D	6	R35	Α	26	86	5E	2
L330		211	68		4	!	В	156	19	11D	6	R36	A	25	96	5D	2
L350			104		4	L565	В	72	102	11F	6	R38	A	40	89	5D	2
			101		4	L575	Α	75	23	10D	6	R40	A	35	84	5D	2
	В	172	108	7C	4	L576	В	156	35	10D	6	R42	Α	23	84	5D	2
L353	В	186	108	8C	4	L580	A	81	19	9C	6	R47	A	20	84	5D	2
L359	В	202	105	9C	4	L620	A	92	11	1B	7	R48	Α	15			
L360	В	210	107	9C	4	L621	В	126	82	6F	7	R49		20			
L361	В	215	105	10C	4	L630		70	53		7	•		188			
L380	В	164	125	10E	4	L650		121				•		184			
L381	В	140	127					290		10D		I .		174			
L382			114			,						R57		174			
L383				7E		N430						1		175			
L384				8E		N440		158		11E		1		178			
L387				10E		N460		237	91			•		188			
L388				10E		N460-				4E		•		184			
L390			104			N460-				4B		1		15			
L391			102			N465		189	83			•		51			
L392		126				N465				6B		R71		173			
L393		152				N468		243	87			R72		176			
L394		139				N468				5E		R73		178 13			
		150		8E		N468						R75 					
MENP						XY-Li						Sachni			] F	λei ∣	Bla
PFLUG			i	Date	:	XY-li	st	for				Stock-	-No			1	Pag
			+-	. <b></b> -				<b>-</b>	 DDC*			1035.650			-+		+
			10	20 - 02	-11	मध्य प्रमा	ᄣᄣᅜᅜ	.v CT	H: US V	'N'I'HE	SE	こしいろりょりりり	11 .	ort X	. 1 1 1		. 4

R77	41 7D 2 45 6C 2 45 6C 2 42 6C 2 25 7C 2 58 7C 2 67 7B 2 44 9C 2 56 6B 2	R273   R274   R275   R276   R277   R278	B 292 A 296 A 295 B 280 A 280 B 278	48 50 56 57 65	10E 10E 10D 10D	3 3 3	R337   R338   R339   R341	A 175 A 231 A 150	105 138	4D 5D 4D	5
R81 B 15 R82 B 15 R83 B 21 R85 A 15 R87 A 17 R89 B 34	45 6C 2 42 6C 2 25 7C 2 58 7C 2 67 7B 2 44 9C 2 56 6B 2 62 6B 2	R274   R275   R276   R277   R278   R279	A 296 A 295 B 280 A 280 B 278	50 56 57 65	10D 10D	3	R339	A 150	138	<b>4</b> D	5
R82 B 15 R83 B 21 R85 A 15 R87 A 17 R89 B 34	42 6C 2 25 7C 2 58 7C 2 67 7B 2 44 9C 2 56 6B 2 62 6B 2	R275 R276 R277 R278 R278	A 295 B 280 A 280 B 278	56 57 65	10D		:				:
R83	25 7C 2 58 7C 2 67 7B 2 44 9C 2 56 6B 2 62 6B 2	R276   R277   R278   R279	B 280 A 280 B 278	57 65		3				25	
R85 A 15   R87 A 17   R89 B 34	58 7C 2 67 7B 2 44 9C 2 56 6B 2 62 6B 2	R277 R278 R279	A 280 B 278	65		3	R341	A 260 A 236	45 34	3D 3D	:
R87 A 17   R89 B 34	67 7B 2 44 9C 2 56 6B 2 62 6B 2	R278	B 278		11F	3	R342	A 258	49	3D	:
	56 6B 2 62 6B 2	!	B 279	54	11E	3	R350	B 172	98	70	:
1 704 70 45	62 6B 2	R280	2 2.3	33	8C	3	R351	A 190	100	9D	4
R91 B 15		!		35	8C	3	R352	A 201	98	90	:
R92 B 21		!		21		3	R355		103	9D	!
R93 B 17	70 6B 2	:		44 25	11E 9D	3	R357	B 210 A 221	98 105	90 10D	:
R96 B 27	70 8B 2	!		20	9D	3	R362		101	110	
R97 B 29	67 8B 2	!		26	10B	3	R363		107		
R98 B 30	57 8B 2	!		40	8C	3	R380	A 159		9F	- :
R99 A 36	43 9E 2	R287	B 277	16	11C	3	R381	A 160	130	10F	'4
R100 A 93	52 4B 2	:		37	9C	3	R382	B 156		9E	
R101 A 90	66 4B 2	•		33	10C	3	R383		125	9E	
R105 A 112	37 3C 2	:		22	11B	3	R384		123	9E	:
R200 A 199   R201 A 207	L30 2D 3 L16 2D 3	:		24 34	11B 9D	3	R385		128 107	10E	:
R202 A 203		!		37		3	R400	B 214	91	20	
R204 A 204		:		32	9C	3	R401	B 180	50	8D	
R206 A 210	L22 2D 3	R295	A 292	39	10C	3	R405	B 177	47	8D	5
R207 A 220		:		28	10B	3	R406	B 203	47	70	5
R208 A 211					10D	3	R407	A 200	44	70	
R209 A 211		:		24	10C	3	R411	B 194	38	8C	
R210 B 221   R212 B 208		!		18 45	11C 2E	3 4	R412	B 191 B 181	41 30	8C 8.8	
R213 B 210		!		37	2E	4	R416	B 177	30	7A	
R217 A 202	L34 2C 3	:		39	3E	4	R417	B 196	35	8B	!
R223 B 226		R312	A 252	47	3D	4	R418	B 191	30	9B	5
R240 B 281		!		34	4E	4	R419	B 189	33	8B	:
R241 B 289				37	5E	4	R422	B 253	85	5 F	:
R249 B 264   R250 B 273	46 12E 3 L40 5D 3	!		56 50	5E 3D	4	R424	B 237 : A 212	98	5D 6F	!
R250 B 273				37	4D	4	R426	A 211	90	6E	:
•	49 11E 3	:		39	4D	4	R427	B 230		6E	•
R253 B 263	46 12E 3	R319	A 234	31	5 <b>F</b>	4	R428	B 235	19	100	5
R255 A 281		:		46	5E	4	R429	B 211	16	9C	•
R256 A 281		•		46	4E	4	R430	B 158	44	9E	
R257 A 286   R258 A 293				66 66	6D 6D	4 4	R431	B 161 B 214	48 85	9D 2C	
R259 A 289				70	6E	4	R432	B 151	50	9D	•
R260 A 289				75	6E	4	R434	B 218	26	9C	
R261 A 281		R326		42	2E	4	R435	B 214	15	10C	5
R262 B 295		•		44	2E	4	R436	A 156		10E	•
R263 B 286		:		52	4C	4	R437	A 159		10F	:
R264 A 281		•		46	5F		R438	A 221		10D	
R265 A 285   R266 A 276		R330		53 63	2A 2A		R439	A 227 B 151		10D	:
R266 A 276		R331		62	5E		R440		78	4A	•
R269 A 285		•	A 238		5E		!			100	!
R270 B 286		•	A 219			4	:	A 252	91	5A	:
R271 A 276		R336	A 216	67	5C	4	•	A 257		11C	5
+	•	+	ste fuer			+ ا	Sachr	nummer		•	 Blatt
PFLUGER			st for				Stock				Page
  ROHDE & SCHWAR	!	REFERE	ERENZ_STI	YNTH:	ESE	SE 	1035.6	501.01 XY	11     11	00	5+

4	Part			У		Pg	Part	Side					Part			Y	Sqr	
i +													+				~~~.	+ +
-	R446		224		10C	5	R502	A	49	70	2E	6	R565   R566	A A	88 93	100	9D 9D	6   6
	R447	В		19		5 5	R503	A A	41 44	61 59	2E 2E	6 6	R567	В	53	69	9F	6
Į	R448 R449	B	261 224	17 91	5E	5	R504	A	46	59	2E	6	R568	A		122	9E	6
į	R450	_	224	93	5F	5	R506	A	39	70	2E	6	R569	A	80	124	9E	6
i	R451		159	88		5	R507	В	40	35	10D	2	R570	A	57	56	7B	6
	R452	A	155	84	11F	5	R509	B	35	32	7B	6	R571	A	72	121	10E	6
1	R453		231	93	4E	5	R510	A	62	81	3E	6	R573	В	72	98	11F	6
ļ	R454	В	158	85		5	R511	В	43		10E	2	R574	B	82 65	100	11E 8C	6   6
ļ	R455	В		88		5	R512	B B	53 31	71	1C 11E	6 2	R575	В	97	97	10D	6
	R456	A B	233 161	89 90	4E 11E	5 5	R513   R514	A	29		11D	2	R577	В	49	18	8C	6
ļ	R457 R458	В		90		5	R515	A	31		11D	2	R578	В	75	23	9C	6
	R459	Æ		92	6D	5	R516	В	43	56	11C	2	R579	B	77	22	9D	6
	R460	В		80	1E	5	R517	A	45	55	11C	2	R580	A	65	24	10C	
Ì	R461	A	259	75	1E	5	R518	В	56	49	11C	2	R581	A	67	18	10C	
	R462	A	259	85		5	R519	В	40	60	11C	2	R582	В	66	16	8B	!
	R463		262	85		5	R520		77	43	2D	6	R583	B	75 102	18 133	9C 6E	
	R464		232	86		5 5	R521	A A	69 73	43 46	2C 2C	6 6	R584	В	91	141	6E	
	R465 R466		228 258	104 96		5	R522		71	39	4E	6	R589	A	85	95	12F	:
	R467		262	102		5	R524		60	50	4F	6	R590	В	86	134	6F	6 j
	R468	E		93		5	R525	A	81	78	2D	6	R591	В	80	97	10E	6
	R470	A	234	99	3D	5	R526	A	72	84	2D	6	R592	В	66	24	9C	
	R471	A	238	84	3E	5	R527		69	36	4D	6	R593	В	63	13	8B	
	R472	E		87		5	R528		73	62	3D	6	R597	В	84	98 96	11E 10F	
	R473	E		75 87		5 5	R529		70 53	62 82	3D 5D	6 6	R598	B B	75 78		10F	
	R474   R475	E	3 197 3 216	83			R530		53	75	6D	6	R600	В	141	23	3F	
	R476	Ē		81			R533		34	43	8B	6	R601	В	125	23	3E	7
	R477		173	86			R535		78	66	3B	6	R602	В	136	23	3E	7
	R478	E	3 233	85	4 A	. 5	R536	A	77	72	4B	6	R603	В	131	23	3D	:
	R479		215				R540		67	78	4C	6	R604	В	117	24	3D	
	R480	_	3 252				R541		56	96	4C	6	R605	В	95 99	14 16		
	R481		3 250				R542		65 59	85 97	4C 4C	6 6	R607	B B	94	19		
	R482		3 234 3 240				R544			112			R610		136	38		!
	R484		A 241				R545			116			R611		124			
	R485		175				R546		63	131	5D	6	R612	A	135	43	3E	7
	R486	7	A 238	77	7 4A	. 5	R547	7 A		108			R613		132			
	R487		A 225				R548			121			R614		121			:
	R488		A 217				R550			128			R615		120 122			:
	R489		A 231				R551			126	9D 10D		R616   R619		124			
	R490		3 191 3 197				R552				10D		R620			100		
	R492		A 228				R554				10F		R629		81			:
	R493		3 173				R555		83	132	7E	6	R630	A	135			7
	R494		A 198		L 6 <i>P</i>	5	R556	5 A	102	134	7E	6	R631		141			:
	R495		A 186				R558			140			R632		130			:
	R496		A 156				R559			139			R633		141			:
	R497		A 153				R560			64 122			R634		141			:
	R498		A 228 A 224				R56:		95 89				R636		141			
	R499		A 224				R56		81				R638		133			
	R501		A 49				R56		63				R639		130		51	2 7 Î
	+	<u>-</u>		+			·									•		
	MEN	1P		- 1	Dati		XY-L							mumm		P		Blatt
	PFI	JUGE	R	1	Date	2	XY-l:	ist	for				Stoc	k-No	•			Page
	+			+	00 00	 	ישמ שש	 	7. Cm	EDEV	יייים א	SE	+  1035.6	5501	01 ×	-+- rily:		6+
	ROHDI	7 -	ರ್ಷಚಾ		38-02		REFER						2005.6 	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	J. A.	-		.
	Lyonni	u OK	~11112				1											L

_____

<b></b>	Side	x	Y	Sqr	Pg	Part	Side	X	Y	Sqr	Pg	Part	Side	e X	Y	Sqr	Pg
R640	A 1	.32	62	5E	7	V262	В	292	119	7E	3	V536	A	81	70	3B	6
R641	A 1	L27	69	5E	7	V263	В	276	114	7E	3	V540	Α	63	137	6C	6
R642	A 1	128	64	5D	7	V265			114	6C	3	V555	Α	101	105	10D	6
R643	A 1	.27	59	5D	7	V279	В	284	37	8C	3	V566	A	56	20	8C	6
R644	A 1	L24	69	5D	7	V280	В	288	50	11E	3	V570	A	74	117	10E	6
R645	A 1	.25	62	5D	7	V285	В	298	42	8C	3	V571	Α	77	116	10E	6
R649	B 1	.18	120	7B	7	V290	В	282	27	10C	3	V575	В	68	18	9C	6
R650	B 1	28	134	9E	7	V295	В	282	17	11C	3	V582	В	71	24	9C	6
R652	B 1		16	8B	7	V299		284	17		3	V583	В	63	24	9C	6
R653	B 1	.24	88	8D	7	V320		244	41	5E	4	V584	В	62	17	9C	6
R659			131	3A	7	V321		240	41	4 E	4	V585	В	77	99	11E	6
R660			136	9D	7	V322		238	44	4E	4	V586	В	84	104		6
R661			134	9C	7	V323		247	49	5E	4	V587	A	71		10C	6
R662			136	9C	7	V325		229	64	5D	4	V590	В	65	12	8B	6
R680			116		7	V361			102		4	Aeeo		121		4A	7
R681			119		7	V380			129	9E	4	V697			123		7
R682			120		7	V383		150		9E	4	V698			102	11C	7
R685			114		7	V400		183	64	8E	5	W1A		171		6D	2
R687			102		7	V401		185	67	8E	5	W1B	В	171		6D	2
R688			104		7	V402		174	66	8E	5	Z1	В	44	81	2E	2
R690			119	6B	7	V403		179	64	7E	5	Z95	В	49	33		2
R691			122		7	V404		172	71	7 <b>F</b>	5	Z100		110	27	2¢	2
R692			119		7	V405		180	68	7E	5	Z101	В	95	27	2B	2
R693			126		7	V406		182	68	7E	5	Z102		105	27	2B	2
R694			106		7	V407		176	71	7E	5	Z103	В	90	27	2B	2
R697			125		7	V408		180	44	7D	5	Z104		100	27	2A	2
R698	A 1			11C	7	V418		196	37	8C	5	Z210		202		2B	3
V5			115	2D	2	V420		194	48	7C	5	Z280		265	56	9B	3
V10			105	2D	2	V422		255	88	5F	5	Z382		140		7F	4
V14			103	3D	2	V424			108	5D	5	Z384		140		7E	4
V35		29	93	4D	2	V425		227	97	6E	5	Z390		140	99	7E	4
V60			137	7E	2	V426		230	95	6E	5	Z391		143	86	7E	4
V69		17	21 123	8D	2	V435		222		10C	5	Z392		143	76	7E	4
V70 V80			29	7D		V437		252		11C	5	Z550		161	22	7D	6
V90		21			_	V460						Z560		156		11D	6
V95	B B			7B 8B	2	V466   V473		262 172		2E 5C	5	Z600		141	27	3F	7
V105			42		2						5	Z601		126	27	3E	7
V205			116	3C 2D	2 3	V475 V514	A	173 31	90	5C 11E	5	Z602 Z603		136 131	27	3E	7
V205			129	3D	3	V514		47		11C	2 2	Z603		116	27	3D	7
V240			133	5D	3	V518		52	88	5D	6	:		121	27 27	3D	7
	A 2					V530	A			6D		:		151	22	3E 8B	7 7
						V535				3B			Ð	101	44	ОD	,

MENP	Datum	XY-Liste fuer	Sachnummer	Aei	Blatt
PFLUGER	Date	XY-list for	Stock-No.		Page
	98-02-11	EE REFERENZ_STEPSYNTHESE REFERENZ_STEPSYNTHESE	1035.6501.01 XY	11.00	7-

•

			:
1			



SERVICE INSTRUCTIONS

1038.7344.01

**Digital Synthesis** 

1020 7244 01

			:

# Contents

7.	Checking and Repair of the Module
7.1	Functional Description
7.1.1	DIRECT DIGITAL SYNTHESIS
7.1.2	BUFFER LOOP 6
7.2	Measuring Instruments and Accessories 6
7.3	Troubleshooting
7.4	Checking and Adjustment
7.4.1	Testing the Current Consumption 8
7.4.2	Testing the Data Transmission 8
7.4.3	Testing the Voltage Regulators 8
7.4.4	Testing the Clock Signal to the DDS-GA D20 8
7.4.5	Testing the Digital Signals at the D/A-
	Converter (DAC, D300)
7.4.6	Adjustment of OSCILLATOR 9
7.4.7	Testing the BUFFER LOOP 9
7.4.7.1	Static Response 9
7.4.7.2	Transient Response 10
7.4.7.3	Transmission Response
7.4.8	Testing the Output Signal
	in CW Mode 10
7.4.9	Testing the Interrupt Function 12
7.4.10	Testing the Diagnosis
7.4.11	Testing the CODAM Line 12
7.5	Removal and Assembly
7.6	Interface Description

Part list Coordinates list Circuit diagram Layout diagram

	745

## Functional Description

Using the DDS component DDS-GA (DDS gate array), the DIGITAL SYNTHESIS module (DSYN for short) digitally generates a sinewave signal in the frequency range 14.1 to 15.6 MHz (SMP: 10.3 to 15.6 MHz) with a resolution of 50 MHz/2^48=0.178 uHz. The generated frequency is as accurate as the clock frequency of the DDS-GA (50 MHz). The clock signal is taken from the REFSS module to the input socket REF50 (X81). The output signal at the output socket FDDS (X89) is routed to the SUMMING LOOP module, where it serves as reference signal for a phase-locked loop.

The module also contains a phase-locked loop, the so-called buffer loop (PS for short (German: PufferSchleife)). The DDS signal can be routed via this loop for suppression of non-harmonic spurious signals.

The DATA CODER option (DCOD) can be fitted in the DSYN module. It provides a digital modulation signal (FM) to the DDS gate array via a parallel port.

Data and clock signals can be applied to the DCOD option and an FSK signal and a serial modulation signal (SYNTHESE-FM) to the DDS gate array via the motherboard.

DSYN contains two SERBUS DECODERs as interfaces to the controller module. SERBUS-D1 is exclusively used for DSYN and SERBUS-D2 for the DATA CODER option.

## DIRECT DIGITAL SYNTHESIS

Following the input socket REF50, the sinewave 50-MHz reference signal is divided into three paths by means of a Y-connection: the path for the DDS-GA clock, the path for the DCOD clock and that for the D/A converter (DAC).

The CLOCK AMPLIFIER converts the sinewave signal into a HCMOS signal for the DDS GA.

The DELAY LINE delays the clock signal for the DAC such that the data from the DDS-GA are read into the DAC at the optimal point in

The ALIASING FILTER converts the sample-and-hold signal from the DAC into an sinewave signal.

The parallel modulation data from DCOD are applied via the lines FMDAT(0)...FMDAT(13) to the DDS-GA and are read in with the rising edge of the LOADM signal.

The serial modulation data from the MOTHERBOARD are applied via the DATA line to the DDS-GA and read in with the falling edge of the DATACLK signal. A serial data word is 16 bits long. The MSB, which is transferred first, is marked by a HIGH signal on the

The lines BURST, DATA and DATACLK all lead to instrument sockets.

1020 7244 01

For the FSK modulation without baseband filtering (hard frequency-shift keying), the data signal is also applied via the DATA line to the DDS-GA. This signal can be inverted by the FSK-INVERTER.

### 7.1.2 BUFFER LOOP

When the buffer loop (PS for short) is activated with PS_ON=1, the PIN diode switches V600 and V603 are closed.

There is no frequency-converting module between the OSCILLATOR (VCO) and the PHASE DETECTOR so that the output frequency (VCO frequency) and the input frequency are identical.

MOS switch N700 permits to switch the loop bandwidth between 1 kHz and 100 kHz. There are three modes of switching:

- MODE 1: If BAND=1 is set by the controller, the bandwidth is set to 100 kHz.
- MODE 2: If BAND=0 and AUTO=1 are set by the controller, the bandwidth is set to 1 kHz.
- MODE 3: If BAND=0 and AUTO=0 are set by the controller, the bandwidth is set to 1 kHz, however, each time the frequency is changed, it is set to 100 kHz for 250 us by the MONOFLOP in order to reduce the settling time.

MODE 3 is used in CW mode if the frequency change is greater than 3 kHz. In the case of a frequency change below 3 kHz, MODE 2 is selected, since the loop remains in the lock-in range. The narrowband control loop is used to suppress non-harmonic spurious signals in CW mode.

MODE 1 is used to suppress non-harmonic spurious signals, e.g. aliasing products above  $100\ \text{kHz}$  off the carrier in the case of digital FM modulation.

If the buffer loop is activated (PS_ON=1) but does not synchronize (VCO tuning voltage at X37 or diagnostic voltage 305 at lower or upper stop; <0 V or >21.5 V), the INTERRUPT DETECTOR causes an interrupt at the SERBUS-D1, and an error message is indicated on the instrument display.

## 7.2 Measuring Instruments and Accessories

- Service kit 1039.3520
- Dual-channel oscilloscope (0 to 250 MHz)
- Spectrum analyzer (1 to 100 MHz)
- Squarewave generator (100 Hz to 1 MHz) (e.g. ADS)
- Test pattern generator (e.g. ADS)
- Frequency counter (10 to 20 MHz) (included in FSA)
- Modulation analyzer (e.g. FMB)

020 7244 01

Faulty data transmission (see 7.4.2).

Clock signal at P32/P33 out of tolerance (see 7.4.4).

Clock signal and data signal to DAC (D300) at P4/P14 and P5/P15 out of tolerance (see 7.4.5).

Output signal out of tolerance in CW mode (DIG. MOD OFF) (see 7.4.8).

Output signal out of tolerance with PS deactivated (FSK-MOD. ON) (see 7.4.8).

Phase-locked loop (buffer loop) does not synchronize (see 7.4.7.1).

The error message "Digital synthesis buffer VCO unlocked" is indicated (see 7.4.10).

Check SERBUS-D1 (D110), SERBUS BUFFER (D50) and the shift registers D150 and D155.

Check CLOCK AMPLIFIER (V220, diagnostic point 303).

Check the DELAY LINE and the clock amplifier V210 (The setup and hold time can be corrected using R215 or R212 by varying the DELAY LINE delay.)

Check whether the voltage at P6 corresponds to -9.5+-1 V. Check pin diode V603 and the OSCILLATOR.

Check whether the voltage at P6 corresponds to 11.6+-1 V. Check the DDS gate array D20, pin diode V601, the DAC (D300), the ALIASING FILTER (L405) and the DDS AMPLIFIER (N400).

Check whether jumper X36/X37 is inserted.

Check OSCILLATOR (V512), clock amplifier V610 and V612, CONTROL AMPLIFIER (N700, N702, D700, V702, V704).

Check whether the voltage at P6 is -9.5 V+-1 V, check pin diodes V603, V600 and V601.

Check whether the voltage at P9/P8 is 24 V/0 V+-1 V or 0 V/24 V+-1 V.

Check whether is phase-locked loop synchronizes (voltage at P7 1 V to 21 V, diagnostic point 305). If not, see the above paragraph. Check the INTERRUPT DETECTOR (N120, V150).

# 7.4 Checking and Adjustment

## Preliminary remark:

For service operation, unscrew the upper cover, insert the service adapter into the location instead of the module and plug the module onto the adapter. After the RF connections have been restored, the module is ready for use again.

The current consumption of the module can be checked by replacing coils L80, L82, L76, L78 and resistor R48 by an ammeter each. The nominal values for the respective supply voltages are to be obtained from section 7.6.

#### Testing the Data Transmission 7.4.2

· Unscrew the cover on the solder side and check the voltages according to the following table.

Setting		4	5	6	7	D15(	Pin 13	12	11	
PRESET		0	0	0	0	х	0	0	1	
DIG.MOD-FSI	K-SOURCE-PRBS	x	x	x	X	х	0	1	1	
1	SK-SOURCE-PRBS K-SOURCE-PRBS	x	X	X	X	X	0	0	0	
1	-POLARITY-INV	х	Х	х	X	X	1	1	,1	

· Fasten the cover on the solder side again.

# 7.4.3 Testing the Voltage Regulators

- Remove the DM-CODER option, if fitted, so that test points P20 and P21 are accessible.
- ▶ The voltage at test point P20 must be +5 V ±0.15 V.
- ▶ The voltage at test point P21 must be -5 V ±0.15 V.

# Testing the Clock Signal to the DDS-GA D20

- Connect oscilloscope to P32/P33 (signal/ground) (50  $\Omega$ ).
- ▶ A periodic AC voltage with the frequency 50 MHz, the maximum voltage above 0.19 V and the minimum voltage below 0.048 V must be measured (There is a  $1-k\Omega$  series resistor between signal and test point).

#### Testing the Digital Signals at the D/A-Converter 7.4.5 (DAC, D300)

FREQUENCY 1350.8MHz Setting:

- Connect the oscilloscope with channell to P4/P14 (clock signal) and channel2 to P5/P15 (data signal) and set the trigger threshold for the clock signal to -40 mV (negative-edge triggering, impedance 50  $\Omega$ ).
- ▶ The data signal should appear as an eye pattern. The HIGH level should be -40 mV ±7 mV at the trigger point.
- ▶ The LOW level should be -83 mV± 7 mV at the trigger point.
- ▶ The upper peak voltage of the clock signal should be >-10 mV and the lower peak voltage <-110 mV.
- ▶ The SETUP time and the HOLD time of the data signal referred to the trigger point (data acquisition) should be <5 ns.

## 7.4.6 Adjustment of OSCILLATOR

Fasten a special cover with screws on the component side so that chamber A and F and thus various test points remain freely accessible. For adjustment of L507 and L506, this cover features two holes. It will be referred to as OSCILLATOR cover in the following.

- Setting: FREQUENCY 1000MHz
- Remove jumper X36/X37 and apply DC voltage to X37.
- · Connect spectrum analyzer to X89 (FDDS).
- ▶ Alternately adjust the oscillator according to the following table. The intended frequency values are 10.3 and 15.6 MHz. If these values cannot be obtained, the specified tolerance range is to be observed, and, if possible, the same frequency error should be obtained at both trimmers.

  In the case of trimmer OSZ3, either L506 or L507 or both coils can be adjusted.

Voltage X37	Trimmer	Nom. frequency at X89
18 ·V	OSZ3(L506/L507)	15.6 15.9 MHz
1.6 V	OSZ4 (R433)	10 10.3 MHz

• Replace jumper X36/X37.

# 7.4.7 Testing the BUFFER LOOP

## 7.4.7.1 Static Response

1038 7344 01 9

- · The OSCILLATOR cover must be fastened with screws.
- Setting:

FREQUENCY 1350.2/1351.4 MHz

▶ The voltage at P7 must be 14.6/18.0 +-1 V.

## 7.4.7.2 Transient Response

- Remove the DATA CODER option so that test point P28 becomes accessible.
- · The OSCILLATOR cover must be fastened with screws.
- Connect an oscilloscope to P35 (PD signal), which is triggered with the FRS signal at P28 (negative edge, trigger threshold 3 V).
- Setting: FREQUENCY acc. to table (narrowband PS)
- ▶ When the frequency changes from 1350.2 to 1351.4 MHz and vice versa, the voltage at P35 must be below 0.1 V 3 ms after triggering.
- Testing with a DATA CODER fitted.
- Setting: FREQUENCY acc. to table
  DIGITAL MOD 4FSK SOURCE EXT
  (broadband PS)
- ▶ When the frequency changes from 1350.2 to 1351.4 MHz and vice versa, the voltage must be below 0.1 V 70 us after triggering.

## 7.4.7.3 Transmission Response

- · The DATA CODER option must be fitted.
- The OSCILLATOR cover must be fastened with screws.
- Connect a modulation analyzer to X89 (FDDS) (e.g. FMB) and cut in a 23-kHz lowpass.
- Setting: FREQUENCY 835MHz
  DIGITAL MOD 4FSK SOURCE DATA (broadb. PS)
  -FILL-LIST DATA "1000"
- ▶ The FM-demodulated signal must feature a peak deviation of 4.6875 kHz +-1% and a modulation frequency of 1.5625 kHz +-1%. There must not be any overshoots.

# 7.4.8 Testing the Output Signal in CW Mode

· The OSCILLATOR cover must be fastened with screws.

**

- Connect a spectrum analyzer to output X89 (FDDS).
- Setting:

FREQUENCY acc. to table
DIGITAL MOD - FSK - SOURCE EXT/OFF
- DEVIATION 0Hz

▶ Set various frequencies according to the following table and check the frequency for SOURCE EXT and SOURCE OFF at the output.

FREQUENCY/MHz	1350.2	1351.4	
Nom. freq./MHz+-1kHz	14.351	15.551	

- ▶ The level must be 2 +-1.5 dBm and the harmonics suppression <-40 dBc.
- ▶ Check nonharmonic spuria according to the following table:

FREQU. in MHz	EXT / OFF	Carrier frequency in MHz	Offset frequency in MHz	Nonharm. spuria in dBc
1350.69275	EXT	14.84375+-0.1	+-1.5625	<-66
1350.69275	OFF	14.84375+-0.0001	+-1.5625	<-80
1351.27869	EXT	15.4296875+-0.1	+-1.5625	<-66
1351.27869	OFF	15.4296875+-0.0001	+-1.5625	<-80
835.1	EXT	15.1+-0.1	+-0.2	<-66
835.1	OFF	15.1+-0.0001	+-0.2	<-80

## 7.4.9 Testing the Interrupt Function

• Setting:

## FREQUENCY 1000MHz

▶ Remove jumper X36/X37. The error message "Digital synthesis buffer VCO unlocked" must be displayed.

## 7.4.10 Testing the Diagnosis

• Setting:

FREQUENCY 1000MHz
UTILITIES - DIAG - TPOINT...

TPOINT	Test point	Factor	Nom. voltage
300	+15V supply	4	1416 V
301	DCOD, OSC.tun. volt.	5	-100100 mV
302	DCOD, OSC. level	1	-2020 mV
303	DDS-GA clock level	1	0.51.5 V
304	Level at outp. FDDS	1	50200 mV
305	OSC. tuning voltage	5	1220 V
306	-15-V supply	4	-1416 V
307	+7.5-V supply	2	1416 V

## 7.4.11 Testing the CODAM Line

- Connect a signal generator (50  $\Omega)$  to X3.19/20 (SIG/GND) and apply 10 MHz/10 dBm.
- Connect a spectrum analyzer to X80.9/11 (SIG/GND) and set CENTER 10 MHz.
- ▶ The level to be measured at 10 MHz must be 4 dBm +-2 dB.

The module can be removed from its location after opening the instrument, unlocking the modules and loosening the RF connections at X81 and X89. The screening covers of the module are conventionally fastened with screws.

The module can be removed from its location after opening the instrument, unlocking the module and loosening the RF connections at X81 and X89. The screening covers of the module are conventionally fastened with screws.

# 7.6 Interface Description

Pin Zerej	Name	Inp./Output	Origin/Destination	Value range	Signal description
X80.A12	SERBUS-CLK	Input	A3, FRO X50.40	HCMOS level	Serbus cłock
X80.A14 X80.A15	SERBUS-DAT	bidir.	A3, FRO X50.39	HCMOS level	: Serbus data
X80.A17	SERBUS-INT	Output	A3, FRO X50.38	HCMOS level	Serbus interrupt
X80.A18	RES-P	Input	A3, FRO X50.28	HCMOS level	Serbus reset
X80.A19	DIAG-5V	Output	A3, FRO X50.44	-5V5V	Diagnosis
X80.A24	VA15-P	Input	A2, POWS1	14.80V15.75V 4466mA	Supply voltage analog
X80.A26	VA7.5-P	Input	A2, POWS1	7.45V7.95V 328500mA	Supply voltage analog
X80.A28	VD-5P	Input	A2, POWS1	5.10V5.25V 010mA	Supply voltage digital
X80.A30	VA15-N	Input	A2, POWS1	-15.75V14.85V 208310mA	Supply voltage analog
X80.A1	DATACLK	bidir.	A3, FRO	HCMOS level	Data clock of DATA CODER
X80.A2	DATA	bidir	A3, FRO	HCMOS level	Data signal of DATA CODER
X80.A3	BURST	bidir.	Rear panel	HCMOS level	BURST signal of DATA CODER
X80.A9	CODAM	Output	A10, OPU1	-1V+1V	AM signal from DATA CODER
X80.A32	LSWI	Output	A10, OPU1	HCMOS level	LEVEL-SWITCH signal to OPU
X81	REF50	Input	A5, MGEN X99	9dBm+-2dB	RF input, reference signal
X89	FDDS	Output	A9, SUM, X51	2dBm+-2dB	RF output, DDS signal

1038 7344 01

		•
arphi		
		:
		:
	(5)	
		1941



Schaltteillisten numerisch geordnet

Part lists in numerical order

Listes des pièces détachées par numéros de référence

	:
	:

ē	
behalten	Vor.
Unterlage	Rechte
ē	aile F
ວັ	
diese	SUD
õ	.≒
Ē	_

	comp. No.	Designa	tion		Stock No.	Manufacturer	Designation	contained in
	C50	CE 4,7UF+-10%		8 CE	0007.7275.00	SPRAGUE	293D 475 X9 O10 B2T	
	C77	TANTALUM CHIP CE 47UF+-20%50	V RM2,	5 CE	0008.7479.00	PANASONIC	ECA-1HFG470I	
	C79	CE 100UF+-20%2	5V RM2.5	CE	0008.7891.00	PANASONIC	ECA-1EFG101I	
	C81	ELECTROLYTIC C	OV RM2,5	CE	0008.7927.00	PANASONIC	ECA 1 AFG 221 I	
	C83	ELECTROLYTIC C CE 100UF+-20%2	5V RM2.5	CE	0008.7891.00	PANASONIC	ECA-1EFG101I	
ı	C100	ELECTROLYTIC C CE 100UF+-20%6 SMD-ELECTROLYT	,3V AL-CHI		0008.1841.00	VALVO	TYP 2222 139 63101	
	C102	CC 1NF+-1% 50V SMD CERAMIC CA	NPO 1206		0007.7398.00	AVX	1206 5A 102 FATOOJ	
	C110	CE 100UF+-20%6 SMD-ELECTROLYT	,3V AL-CHI		0008.1841.00	VALVO	TYP 2222 139 63101	
	C111	CC 100NF+-10%5	OV X7R 120	1	0007.5237.00	PHILIPS_CO	2238 581 55649	
	C112	CC 100NF+-10%5	OV X7R 120	6 cc	0007.5237.00	PHILIPS_CO	2238 581 55649	
	C114 120	CC 100NF+-10%5	OV X7R 120	6 cc	0007.5237.00	PHILIPS_CO	2238 581 55649	
	C129	CC 10NF+-10%50 CERAMIC CHIP C	V X7R 1206	СС	0099.8521.00	PHILIPS_CO	2238 581 16627	-0
	C130	CC 100NF+-10%50 CERAMIC CHIP C	OV X7R 120	6 CC	0007.5237.00	PHILIPS_CO	2238 581 55649	
	C131	CC 10NF+-10%50' CERAMIC CHIP C	V X7R 1206	cc	0099.8521.00	PHILIPS_CO	2238 581 16627	
	C132	CC 10NF+-10%50°CERAMIC CHIP C	V X7R 1206	СС	0099.8521.00	PHILIPS_CO	2238 581 16627	
Ì	C133	CC 10NF+-10%50' CERAMIC CHIP C	V X7R 1206	cc	0099.8521.00	PHILIPS_CO	2238 581 16627	
ı	C134	CC 10NF+-10%50'CERAMIC CHIP C		cc	0099.8521.00	PHILIPS_CO	2238 581 16627	
ı	C135	CC 10NF+-10%50° CERAMIC CHIP C	V X7R 1206	cc	0099.8521.00	PHILIPS_CO	2238 581 16627	
I	C150	CE 10UF+-20%50' SMD-ELECTROLYT		. CE	0008.1812.00	VALVO	TYP 2222 139 61109	
	C162	CC 10NF+-10%50 CERAMIC CHIP CA	APACITOR				2238 581 16627	
	C168	CC 100NF+-10%50 CERAMIC CHIP CA		6 CC	0007.5237.00	PHILIPS_CO	2238 581 55649	
	C180	CC 100NF+-10%50 CERAMIC CHIP CA	APACITOR				2238 581 55649	
	C182	CC 100NF+-10%50 CERAMIC CHIP CA	APACITOR				2238 581 55649	
	C186	CC 100NF+-10%50 CERAMIC CHIP CA					2238 581 55649	
	C200	CE 220UF+-20%10	APACITOR				ECA 1 AFG 221 I	
ı	C2O2	CC 100NF+-10%50 CERAMIC CHIP CA	APACITOR				2238 581 55649	
١	C203	CC 100NF+-10%50 CERAMIC CHIP CA	APACITOR				2238 581 55649	
	C204	CC 100NF+-10%50 CERAMIC CHIP CA	APACITOR				2238 581 55649	
	C205	CC 100NF+-10%50	APACITOR				2238 581 55649	
	C210	CC 10NF+-10%50V CERAMIC CHIP CA	APACITOR	-			2238 581 16627	
	C212	CC 100NF+-10%50 CERAMIC CHIP CA	APACITOR				2238 581 55649	
	C214 C216	CE 10UF +-10% C	APACITOR		0007.7246.00		293D 106 X9 025 D2W	
	C218	CC 10NF+-10%50\ CERAMIC CHIP CA CC 10NF+-10%50\	APACITOR				2238 581 16627	
	C218	CERAMIC CHIP CA	APACITOR				2238 581 16627	
	C219	SMD CERAMIC CAL	PACITOR		0007.7398.00		1206 5A 102 FATOOJ 2238 581 55649	
	C222	CERAMIC CHIP CA	APACITOR	i			2238 581 55649	
	C230	CERAMIC CHIP CA	APACITOR				2238 581 16627	
	C231	CERAMIC CHIP CA	APACITOR				2238 581 16627	
		CERAMIC CHIP CA			355.10207.00			
			·					
	1GPK	887 3PLU	Äl Datum Date		Schaltteil Parts li		Sachnummer Stock No.	Blatt-Nr. Page
ı		······································	r					

1038.7344.01 SA

1+

ROHDE&SCHWARZ

20 07.10.99

1GPK 887 3PLU ÄI Datum Date			Schalttellliste für Parts list for	Sachnummer Stock No.	Biatt-Nr. Page		
ROHDE	&SCH\	NARZ	20	07.10.99	EE DIGITALE SYNTHESE	1038.7344.01 SA	2+

Hech!e

100

SUD

Stock No.

CC 0007.7398.00 AVX

Manufacturer

Designation

1206 5A 102 FATOOJ

contained in

Für diese Unterlage behalten wir uns alle Rechte vor.

comp. No.

C622

Designation

1206

CC 1NF+-1% 50V NPO

SMD CERAMIC CAPACITOR

1GPK	887 3PLU	Äl	Datum Date	Schaltteill Parts lis		Sechnummer Stock No.	Blatt-Nr. Page
ROHDI	E&SCHWARZ	20	07.10.99	EE DIGITALE SY	YNTHESE	1038.7344.01 SA	3+

BL 0820.3602.00 FAIRCHILD 74AC74SC

D600

BL 74AC74SC

DUAL D-TYPE FLIPF

2XD-FLIPFL

Parts list for

EE DIGITALE SYNTHESE

Stock No.

1038.7344.01 SA

Page

4+

Date

20 07.10.99

Stock No.

Manufacturer

Designation

contained in

ROHDE&SCHWARZ

Comp. No

Designation

Für diese Unterlage behalten	Rechte vor.
D CD	alle Bile
Fur dies	wir uns

	Comp. No.	Designat	tion		Stock No.	Manufacturer	Des	ignation	conta	ined in	
	L701	LD 100UH 10%	0,06A 1210	LD	0007.9261.00	SIEMENS	B824	22-A1104-J(K)100			
	L705	RF CHOKE LD 56UH 10% 5, CHOKE	70HM 0,1A	LD	0067.3076.00	DALE	IM2				
	N100	BO LM294OCT LOV		во	0350.5809.00	NSC	LM29	40CT-5.0			
	N110	BO UA7905UC -5' VOLTAGE REGULA	V1AO VREGL	BO	0282.5449.00	NSC	LM79	05 CT			
	N120	BO LM2903D 2	XLP COMPAR		0520.7734.00	SIGNETICS	LM29	03(D)			
	N130		XLP COMPAR		0520.7734.00	SIGNETICS	LM29	O3(D)			
	N400	DUAL BM MAR8	MMIC		0656.4720.00	MINI-CIRCU	MAR8				
	N600	BROADBAND AMPL: BO MC1458D	2X OPAMP		0007.3763.00	SIGNETICS	MC14	58(D)			
	N700	OPERATION AMPL: BO NE5534D	OPAMP	-	0815.7555.00	SIGNETICS	NE55	34(D)			
	N702	OPERATIONAL AM BO AD829JR HISP LOW-NOISE HIGH	PEED OPAMP	во	1036.4254.00	ANALOG_DEV	AD82	9JR			
	P1	VL STECKLOETOES		VL	0078.2747.00	_	R&S-	ZCHNG.078.2747			
	P2	PLUG-IN SOLDER: VL STECKLOETOES	SE 7,5X1,1	VL	0078.2747.00	_	R&S-	ZCHNG.078.2747			
	Р3	PLUG-IN SOLDER: VL STECKLOETOES	SE 7,5X1,1	VL	0078.2747.00	_	R&S-	ZCHNG.078.2747			
	P4	PLUG-IN SOLDER		VL	0010.7250.00	AMP	1-92	8776-5			
	P5	PIN VL EINPRESSSTIF	T 5,6	VL	0010.7250.00	AMP	1-92	8776-5			
	P6	PIN VL STECKLOETOES		VL	0078.2747.00	_	R&S-	ZCHNG.078.2747			
	P7	PLUG-IN SOLDERS VL STECKLOETOES	SE 7,5X1,1	VL	0078.2747.00	_	R&S-	ZCHNG.078.2747			
	P8	PLUG-IN SOLDER	SE 7,5X1,1	VL	0078.2747.00	_	R&S-	ZCHNG.078.2747			
haften 'or.	P9	PLUG-IN SOLDERS VL STECKLOETOES	SE 7,5X1,1	VL	0078.2747.00	-	R&S-	ZCHNG.078.2747			
ge bei	P10	PLUG-IN SOLDER: VL STECKLOETOES	SE 7,5X1,1	VL	0078.2747.00	_	R&S-	ZCHNG.078.2747			
Für diese Unterlage behalten wir uns alle Rechte vor.	P11	PLUG-IN SOLDERS VL STECKLOETOES		VL	0078.2747.00	_	R&S-	ZCHNG.078.2747			
in est	P12	PLUG-IN SOLDERS VL STECKLOETOES		VL	0078.2747.00	_	R&S-	ZCHNG.078.2747		1	
Für dir Wir	P13	PLUG-IN SOLDER		VL	0010.7250.00	AMP	1-92	8776~5			
	P14	PIN VL EINPRESSSTIF	T 5,6	VL	0010.7250.00	AMP	1-92	8776-5		Ī	
	P15	PIN VL EINPRESSSTIF	₹T 5,6	VL	0010.7250.00	AMP	1-92	8776-5			
	P16	PIN VL EINPRESSSTIF	₹T 5,6	VL	0010.7250.00	AMP	1-92	8776-5			
	P17	PIN VL STECKLOETOES		VL	0078.2747.00	-	R&S-	ZCHNG. 078. 2747		-	
	P18	PLUG-IN SOLDERS VL STECKLOETOES		VL	0078.2747.00	-	R&S-	ZCHNG. 078. 2747			
	P20	PLUG-IN SOLDERS VL STECKLOETOES	SE 7,5X1,1	VL	0078.2747.00	_		ZCHNG.078.2747			
	P21	PLUG-IN SOLDERS VL STECKLOETOES	ING LUG SE 7,5X1,1		0078.2747.00			ZCHNG.078.2747		1	
	P22	PLUG-IN SOLDERI VL STECKLOETOES	ING LUG		0078.2747.00			ZCHNG.078.2747			
	P23	PLUG-IN SOLDERI VL STECKLOETOES	ING LUG		0078.2747.00			ZCHNG.078.2747			
	P24	PLUG-IN SOLDERI VL STECKLOETOES	ING LUG	1	0078.2747.00			ZCHNG.078.2747			
	P27	PLUG-IN SOLDERI VL STECKLOETOES	ING LUG		0078.2747.00			ZCHNG.078.2747			
	P28	PLUG-IN SOLDERI VL STECKLOETOES	ING LUG		0078.2747.00			ZCHNG.078.2747		- 1	
	P29	PLUG-IN SOLDERI VL STECKLOETOES	ING LUG		0078.2747.00			ZCHNG. 078. 2747			
	P30	PLUG-IN SOLDER! VL STECKLOETOES	ING LUG		0078.2747.00						
		PLUG-IN SOLDER	ING LUG					ZCHNG.078.2747		1	
	P32	VL EINPRESSSTIF PIN	-1 5,0	\v_	0010.7250.00	AMP	1-92	3776-5			
_	1GPK	887 3PLU	Sachnummer Stock No.		Blatt-Nr. Page						
95.0028-0693	1		20 07.10.99	E	EE DIGITALE SY	/NTHESE	1038.7344.01 SA			5+	

1GPK	887	3PLU	Äl	Datum Date	Schaltteilliste für Parts list for	Sachnummer Stock No.	Blatt-Nr. Page
ROHDE &	RSCHV	VARZ	20	07.10.99	EE DIGITALE SYNTHESE	1038.7344.01 SA	5+

Mecnie

9118

Sup

Dazeichnung

9	
080416	B VOL.
Cateriage	Rechte
	alle
21958	r uns
5	¥.

	Comp. No.		Dasignat	101		Stock No.	Manufacturer	Designation		Conta	neu m
	R117	RG 1KO		FK 10	00 1206	RG 0006.7271.00	ROEDERSTEI	D25			
	R118	CHIP RE		ΓK 10	00 1206	RG 0006.7271.00	ROEDERSTEI	D25			
		CHIP RE	SISTOR								
	R119	RG 1KO CHIP RE		rk 10	00 1206	RG 0006.7271.00	KOEDEKSTEI	D25			
	R121	RG 1KO		rk 10	00 1206	RG 0006.7271.00	ROEDERSTEI	D25			j
	R124	CHIP RE		rK 10	00 1206	RG 0006.7271.00	ROEDERSTEI	D25			l
ł	R128	CHIP RE		rK 10	0 1206	RG 0006.7271.00	ROEDERSTEI	D25			
		CHIP RE	SISTOR								l
	R129	RESISTO	SKOHM+-1% OR CHIP	61K I	100 1206	RG 0007.5950.00	KUEDEKSTEI	D25			
	R130	RG 2,7M CHIP RE	10HM+-5%T 	rK20	00 1206	0007.9984.00	ROEDERSTEI	D 25			
	R131	RG 27,4	KOHM+-1%	6TK 1	100 1206	RG 0007.5895.00	ROEDERSTEI	D25			
	R132	RESISTO RG 27,4	IKOHM+-1%	6TK 1	00 1206	RG 0007.5895.00	ROEDERSTEI	D25			ı
	R133	RESISTO	OR CHIP NKOHM+-1%	//TΚ 1	1206	RG 0007.5895.00	ROFDERSTEI	D25			
		RESISTO	R CHIP								
	R134	RESISTO	KOHM+-1% R CHIP	4IKT	100 1206	RG 0007.5895.00	KUEDEKSTET	D25			ļ
	R135	RG 27,4 RESISTO	KOHM+-1%	4TK 1	100 1206	RG 0007.5895.00	ROEDERSTEI	D25			
I	R136	RG 1KO	+-1% 7	TK 10	0 1206	RG 0006.7271.00	ROEDERSTEI	D25			
	R137		OHM+-19	%TK 1	100 1206	RG 0007.5566.00	ROEDERSTEI	D25			
	R140	RESISTO RG 1KO		rK 10	00 1206	RG 0006.7271.00	ROEDERSTEI	D25			ĺ
1	R142	CHIP RE	SISTOR		00 1206	RG 0006.7271.00		-			
		CHIP RE	SISTOR								I
	R143	RG 47,5	S OHM+-1% OR CHIP	41K1	100 1206	RG 0007.5566.00	ROEDERSTEI	D25			l
	R144	RG 47,5	S OHM+-1% OR CHIP	4TK 1	100 1206	RG 0007.5566.00	ROEDERSTEI	D25			I
haite vor.	R145	RG 47,5	5 OHM+-1%	4TK 1	100 1206	RG 0007.5566.00	ROEDERSTEI	D25			1
rur diese Unterlage behalten wir uns alle Rechte vor.	R146		OHM+-1%	4TK 1	100 1206	RG 0007.5566.00	ROEDERSTEI	D25			I
terra Te Re	R148	RESISTO RG 47,5	OR CHIP 5 OHM+-1%	4TK 1	100 1206	RG 0007.5566.00	ROEDERSTEI	D25			l
ls s	R149	RESISTO	OR CHIP OKOHM+-1%	/TK 1		RG 0007.0793.00					l
wir L		RG CHIP	RESIST	)R		RG 0007.5895.00					
2	R150	RESISTO	R CHIP								
	R151	RG 12,1 CHIP RE	KOHM+-1% SISTOR	KTK 1	100 1206	RG 0007.0841.00	ROEDERSTEI	D25			
	R152	RG 100, CHIP RE	OKOH+-1%	%TK 1	100 1206	RG 0007.1948.00	ROEDERSTEI	D25			
	R153	RG 130,	OKOH+-17	%TK 1	100 1206	RG 0007.5966.00	PHILIPS_CO	RCO2			
	R154		M WIDERS			RG 0007.5108.00	DRALORIC	CR 1206			
	R155		OR CHIP ( OHM+-1%1			RG 0006.8884.00	ROEDERSTEI	D25			
	R156	CHIP RE				RG 0007.1948.00					
		CHIP RE	SISTOR								
l	R157	RESISTO				RG 0007.5914.00	_				İ
	R158		OKOHM+-1% PRESISTO		100 1206	RG 0007.0793.00	ROEDERSTEI	D25			ļ
	R159	RG 90,9	KOHM+-19		100 1206	RG 0007.1931.00	PHILIPS_CO	RCO2	1		
	R160	CHIP RE	+-1%	TK 10	00 1206	RG 0006.7271.00	ROEDERSTEI	D25	1		
	R161	CHIP RE		TK 10	00 1206	RG 0006.7271.00	ROEDERSTEI	D25			
	R162	CHIP RE				RG 0007.5914.00					l
		RESISTO	OR CHIP								
	R163	RG 100, CHIP RE	,OKOH+-1% ESISTOR	%1K	100 1206	RG 0007.1948.00					
	R164	RG 33,2 RESISTO	2KOHM+-1; DR CHIP	%TK	100 1206	RG 0007.5914.00	PHILIPS_CO	RCO2			
	R165	RG 562	KOHM+-17	/TK	100 1206	RG 0007.6091.00	PHILIPS_CO	RCO2			
l		RESISTO	JK CHIP								
				Ţ			Data 60			w.	Black B
_	1GPK	887	3PLU	ÄI	Datum Date	Schaltteil Parts li			Sachnummer Stock No.		Blatt-Nr. Page
95.0028-0893	<b>Æ</b> S			20	07.10.99	EE DIGITALE S'	VNTHESE	1038	.7344.01	SA	7+
.0028	ROHD	E&SCH	WARZ		010.33	LE DIGITALE S				. 4FF-1	
8				l	Į						

1GPK	887	3PLU	ÄI	Datum Date	Schaltteilliste für Parts list for	Sachnummer Stock No.	Blatt-Nr. Page
ROHDE	RSCHV	VARZ	20	07.10.99	EE DIGITALE SYNTHESE	1038.7344.01 SA	7+

EE DIGITALE SYNTHESE

20 07.10.99

Manufacturer

Designation

1038.7344.01 SA

8+

contained in

ROHDE&SCHWARZ

Comp. No.

Designation

2	
behalten	
Unte	
Für diese	

	Comp. No.	Designat	ιρn	·		STOCK NO.	Manutacturer	Di	signation	CONTR	ineo iii
	R207	RG 4K75 +-1% 1 RESISTOR CHIP	K 10	00 1206	RG	0007.5820.00	PHILIPS_CO	RCO	2		
	R210	RG 68,1 OHM+-1% CHIP RESISTOR	TK 1	100 1206	RG	0006.8849.00	ROEDERSTEI	D25	·		
	R211	RG 562 OHM+-1%1	K 10	00 1206	RG	0006.9068.00	ROEDERSTEI	D25			:
١	R212	CHIP RESISTOR RG 22,1KOHM+-17	<b>ί</b> ΤΚ 1	100 1206	RG	0007.5872.00	PHILIPS_CO	RCO	2		
١	R215	RESISTOR CHIP RG 15,0KOHM+-1%	<b>ί</b> ΤΚ 1	100 1206	RG	0007.5843.00	PHILIPS_CO	RCO	2		
	R216		K 10	00 1206	RG	0006.7271.00	ROEDERSTEI	D25			
	R218	· ·	K 10	00 1206	RG	0006.7271.00	ROEDERSTEI	D25			
	R220	CHIP RESISTOR RG 56,2 OHM+-1%	(TK 1	100 1206	RG	0006.8826.00	PHILIPS_CO	RCO	2		
	R222	CHIP RESISTOR RG 68,1 OHM+-1%	(TK 1	100 1206	RG	0006.8849.00	ROEDERSTEI	D25			
	R224	CHIP RESISTOR RG 100 OHM+-1%T	K 10	00 1206	RG	0006.8884.00	ROEDERSTEI	D25			
١	R226	CHIP RESISTOR RG 6.81KOHM+-1%	TK 1	100 1206	RG	0007.0758.00	PHILIPS_CO	RCO	2		
١	R228	CHIP RESISTOR RG 221 OHM+-1%1				0007.5614.00			1206		
	R240	RESISTOR CHIP RG 562 OHM+-1%1				0006.9068.00					
	R241	CHIP RESISTOR RG 562 OHM+-1%7				0006.9068.00					
	R242	CHIP RESISTOR RG 562 OHM+-1%1				0006.9068.00					
	R243	CHIP RESISTOR RG 562 OHM+-1%1					_				
	İ	CHIP RESISTOR				0006.9068.00					
	R244	RG 562 OHM+-1%T				0006.9068.00					
1	R245	RG 562 OHM+-1%1 CHIP RESISTOR				0006.9068.00					
	R246	RG 562 OHM+-1%T CHIP RESISTOR				0006.9068.00					
	R247	RG 562 OHM+-1%T CHIP RESISTOR				0006.9068.00					
	R248	RG 562 OHM+-1%T CHIP RESISTOR				0006.9068.00					
	R249	RG 562 OHM+-1%T CHIP RESISTOR	'K 10	00 1206	RG	0006.9068.00	ROEDERSTEI	D25			
	R250	RG 1KO +-1% T CHIP RESISTOR	'K 10	00 1206	RG	0006.7271.00	ROEDERSTEI	D25			
	R252	RN 9X330 OHM+-2 RESISTOR NETWOR		L10 H5		0379.8306.00	BI_TECHNOL	L 10	D 1 S 331 M*		
Ì	R253	RG 332 OHM+-1%T RESISTOR CHIP	'K 10	00 1206	RG	0007.5650.00	DRALORIC	CR	1206		
	R256	RN 9X330 OHM+-2 RESISTOR NETWOR		L10 H5		0379.8306.00	BI_TECHNOL	L 10	D 1 S 331 M*		
ı	R257	RG 332 OHM+-1%T RESISTOR CHIP	K 10	00 1206	RG	0007.5650.00	DRALORIC	CR	1206		
١	R260	RG O-OHM WIDERS			RG	0007.5108.00	DRALORIC	CR	1206		
	R261	RG 121 OHM+-1%T CHIP RESISTOR			RG	0006.8903.00	PHILIPS_CO	RCO:	2		
	R262	RG 47,5 OHM+-1% RESISTOR CHIP	KTK 1	100 1206	RG	0007.5566.00	ROEDERSTEI	D25	,		
	R263	RG 100 OHM+-1%T CHIP RESISTOR	'K 10	00 1206	RG	0006.8884.00	ROEDERSTEI	D25			
	R264	RG 68,1 OHM+-1% CHIP RESISTOR	6TK 1	100 1206	RG	0006.8849.00	ROEDERSTEI	D25			
	R265	RG 6,81KOHM+-1%	4TK 1	100 1206	RG	0007.0758.00	PHILIPS_CO	RCO	2		
	R266	RG 221 OHM+-1%T	K 10	00 1206	RG	0007.5614.00	DRALORIC	CR	1206		į
	R267	RESISTOR CHIP RG 100 DHM+-1%1	TK 10	00 1206	RG	0006.8884.00	ROEDERSTEI	D25			Ī
	R268	CHIP RESISTOR RG 47,5KOHM+-17	(TK 1	100 1206	RG	0007.5950.00	ROEDERSTEI	D25	,		İ
	R269		TK 10	00 1206	RG	0006.7271.00	ROEDERSTEI	D25			
	R270	CHIP RESISTOR RG 47,5 OHM+-17	6TK 1	100 1206	RG	0007.5566.00	ROEDERSTEI	D25			
١	R271	RESISTOR CHIP RG 47,5 OHM+-17	4TK 1	100 1206	RG	0007.5566.00	ROEDERSTEI	D25			
		RESISTOR CHIP							any and a second		
				Datur-		Cab alsaeu	inte filir		6-21		Blatt-Nr.
٠,	1GPK	887 3PLU	Äl	Datum Date		Schalttelli Parts lis			Sachnummer Stock No.		Page
200-0	<b>%</b>	· ·	20	07.10.99		EE DIGITALE SY	NTHESE		1038.7344.01	SA	9+
ž	ROHD	E&SCHWARZ	1	1		_					

ROHDE&SCHWARZ

ROHDE&SCHWARZ

Comp. No.	Designation		Stock No.	Manufacturer	Designation	contained in
R602	RG 10,0K0HM+-1%TK100	1206	RG 0007.0793.00	ROEDERSTEI	D25	
R603	RG CHIP RESISTOR RG 10,0K0HM+-1%TK100	1206	RG 0007.0793.00	ROEDERSTEI	D25	
R604	RG CHIP RESISTOR RG 68,1KOHM+-1%TK100 CHIP RESISTOR	1206	RG 0007.1902.00	PHILIPS_CO	RCO2	
R605	RG 100 OHM+-1%TK100 CHIP RESISTOR	1206	RG 0006.8884.00	ROEDERSTEI	D25	
R606	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00	ROEDERSTEI	D25	
R607	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00	ROEDERSTEI	D25	
R610	RG 475 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5695.00	ROEDERSTEI	D25	
R611	RG 475 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5695.00	ROEDERSTEI	D25	
R612	RG 475 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5695.00	ROEDERSTEI	D25	
R614	RG 47,5KOHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5950.00	ROEDERSTEI	D25	
R618	RG 18,2 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5466.00	PHILIPS_CO	RCO2	
R619	RG 18,2 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5466.00	PHILIPS_CO	RCO2	
R620	RG 18,2 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5466.00		V	
R630	RG 100 OHM+-1%TK100 CHIP RESISTOR		RG 0006.8884.00			
R631	RG 68,1 OHM+-1%TK100 CHIP RESISTOR		RG 0006.8849.00	ROEDERSTEI	D25	
R632	RG 3,32KOHM+-1%TK100 RESISTOR CHIP		RG 0007.5789.00		RCO2	
R633	RG 221 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5614.00		CR 1206	
R634	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00			
R635	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00			
R636	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00			
R637 R640	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00			
R641	RG 100 OHM+-1%TK100 CHIP RESISTOR RG 68,1 OHM+-1%TK100	1206	RG 0006.8884.00			
R642	CHIP RESISTOR RG 3,32KOHM+-1%TK100		RG 0006.8849.00 RG 0007.5789.00			
R643	RESISTOR CHIP RG 221 OHM+-1%TK100		RG 0007.5769.00		CR 1206	
R646	RESISTOR CHIP RG 1KO +-1% TK100	1206	RG 0006.7271.00			
R647	CHIP RESISTOR RG 1KO +-1% TK100	1206	RG 0006.7271.00			
R650	CHIP RESISTOR RG 150 OHM+-1%TK100	1206	RG 0007.5589.00			
R652	RESISTOR CHIP RG 1KO +-1% TK100	1206	RG 0006.7271.00			
R653	CHIP RESISTOR RG 1KO +-1% TK100	1206	RG 0006.7271.00			
R702	CHIP RESISTOR RG 1KO +-1% TK100	1206	RG 0006.7271.00	ROEDERSTEI I	D25	
R704	CHIP RESISTOR RG 392 OHM+-1%TK100	1206	RG 0007.5672.00	DRALORIC (	CR 1206	
R705	RESISTOR CHIP RG 332 OHM+-1%TK100	1206	RG 0007.5650.00	DRALORIC (	CR 1206	
R706	RESISTOR CHIP RG 24,3KOHM+-1%TK100	1206	RG 0007.5889.00	DRALORIC (	CR 1206	
R707	RESISTOR CHIP RG 332 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5650.00	DRALORIC (	CR 1206	
R708	RG O-OHM WIDERSTAND RESISTOR CHIP O-OHM	1206	RG 0007.5108.00	DRALORIC (	CR 1206	
R709	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00	ROEDERSTEI	D25	
R710	RG 332 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5650.00	DRALORIC	CR 1206	
R712	RG 10,0KOHM+-1%TK100 RG CHIP RESISTOR	1206	RG 0007.0793.00	ROEDERSTEI	D25	
1GPK		Datum Date	Schaltteill		Sechnummer	Blatt-Nr.
I		~ B18	Parts lis	. 141	Stock No.	Page

1GPK	887	3PLU	ÄI	Datum Date	Schalttellliste für Parts list for	Sachnummer Stock No.	Blatt-Nr. Page
ROHDE8	kschi	WARZ	20	07.10.99	EE DIGITALE SYNTHESE	1038.7344.01 SA	11+

Comp. No.	Designatio	)N		Stock No.	Manufacturer	De	signation	contai	ned in
R713	RG 10,0KOHM+-1% RG CHIP RESISTOR		RG (	0007.0793.00	ROEDERSTEI	D25			
R715	RG 100 OHM+-1%TH		RG (	0006.8884.00	ROEDERSTEI	D25			
R716		K100 1206	RG (	0006.7271.00	ROEDERSTEI	D25	***************************************		
R717	CHIP RESISTOR RG 1KO +-1% TH CHIP RESISTOR	K100 1206	RG (	0006.7271.00	ROEDERSTEI	D25			
T200	LU HF-UEBERTR. ( WIDE-BAND TRANS		(	0276.3619.00	MINI-CIRCU	T 4-	-1 W38		
V100	AD BAV99 75 HIGH-SPEED DOUBL		AD (	0911.0092.00	VALVO	BAV	99		
V102		5V DUO UDI	AD (	0911.0092.00	VALVO	BAV	99		
V104		5V DUO UDI	AD (	0911.0092.00	VALVO	BAV	99		
V150		100V MOSF	(	0815.7961.00	SIEMENS	BSS	123 (-\$512)		
V152		5V DUO UDI	AD (	0911.0092.00	VALVO	BAV	99		
V153		5V DUO UDI	AD (	0911.0092.00	VALVO	BAV	99		
V154	AD BAV99 75	5V DUO UDI	AD (	0911.0092.00	VALVO	BAV	99		
V200	HIGH-SPEED DOUBL AE BB620 45, TUNING DIODE	O3PF CDI	(	0848.5251.00	SIEMENS	BB62	20		
V202		/O3PF CDI		0848.5251.00	SIEMENS	BB6	20		
V204		/O3PF CDI		0848.5251.00	SIEMENS	BB6	20		
V206		/O3PF CDI		0848.5251.00	SIEMENS	BB6	20		
V210	AK BFS17 N	15V 25MA	AK (	0010.6460.00	VALVO	BFS	17		
V220		15V 25MA	AK (	0010.6460.00	VALVO	BFS	17		
V222	1 GHZ WIDEBAND 1 AE HSMS2800	SCHOTTKY	AE (	0836.8421.00	HEWLETT_PA	HSMS	S-2800(#L31)		
V500	SCHOTTKY DIODE AE BB130PAAR 300			0372.2231.00	PHILIPS	BB 13	BO/PAAR		
V501	TUNING DIODE (PARE BB130PAAR 300	O/22PF CDI	,	0372.2231.00	PHILIPS	BB 13	BO/PAAR		
V502	TUNING DIODE (PARE BB130PAAR 300	0/22PF CDI	,	0372.2231.00	PHILIPS	BB 13	BO/PAAR		
V503	TUNING DIODE (PARE BB130PAAR 300	O/22PF CDI	(	0372.2231.00	PHILIPS	BB 13	BO/PAAR		
V504	TUNING DIODE (PARE BB130PAAR 300 TUNING DIODE (PARE)	O/22PF CDI	(	0372.2231.00	PHILIPS	BB 13	BO/PAAR		
V505	AE BB130PAAR 300 TUNING DIODE (PA	0/22PF CDI	•	0372.2231.00	PHILIPS	B813	BO/PAAR		
V507	AE BB212 2X500, TUNNING DIODE		1	0373.6901.00	PHILIPS_SE	BB2	12		
V510	AK BFQ81 N	16V 30MA		0920.1717.00	SIEMENS	BFQ	31 (-F1049)		
V512		16V 30MA		0920.1717.00	SIEMENS	BFQ	31 (-F1049)		
V514		16V 30MA		0920.1717.00	SIEMENS	BFQ	31 (-F1049)		
V516		45V 200MA	AK (	0007.2096.00	VALVO	всх.	71J GEGURTET		Ì
V518		45V 200MA	AK (	0007.2096.00	VALVO	всх.	71J GEGURTET		
V600	TRANSISTOR AE BAR14-1 DUAL	100V PIN		0820.3283.00	SIEMENS	BAR	14-1 (-A772)		
V601	PIN DIODE AE BAR14-1 DUAL	100V PIN		0820.3283.00	SIEMENS	BAR	14-1 (-A772)		
V603	PIN DIODE AE BAR14-1 DUAL	100V PIN		0820.3283.00	SIEMENS	BAR	14-1 (-A772)		
V605	PIN DIODE AE HSMS2800	SCHOTTKY	AE	0836.8421.00	HEWLETT_PA	HSM	S-2800(#L31)		
V610		15V 25MA	AK :	0010.6460.00	VALVO	BFS	17		
V612		15V 25MA	AK	0010.6460.00	VALVO	BFS	17		
V614	1 GHZ WIDEBAND AD BAS16 7 HIGH-SPEED DIOD	5V UDI	AD	0007.4924.00	VALVO	BAS	16 (A6P)		
1GPK	887 3PLU	Äl Detum		Scheltteil			Sachnummer Stock No.		Blatt-Nr.
		Al Date		Parts II:	st 101		Stock No.		Page
ROHD	E&SCHWARZ	20 07.10.99	E	E DIGITALE S'	YNTHESE		1038.7344.01	SA	12+

Für diese Unterlage behalten	wir uns alle Rechte vor.	

_	Comp. No.	Designation	Stock No.	Manufacturer	Designation	contained in
	V615	AD BAS16 75V UDI HIGH-SPEED DIODE	AD 0007.4924.00	VALVO	BAS16 (A6P)	
	V702	AK BC850B N 45V 200MA TRANSISTOR	AK 0007.7969.00	VALVO	BC850B	
	V704	AK BC860B P 45V 200MA TRANSISTOR	AK 0007.7975.00	MOTOROLA	BC860B	
	V708	AE HSMS2800 SCHOTTKY SCHOTTKY DIODE	AE 0836.8421.00	HEWLETT_PA	HSMS-2800(#L31)	
	X1	FP STIFTLEISTE 20P.2REIH.	FP 0520.6521.00	BINDER	11-0209-00-20	
	X2	CONNECTOR 20P.  FP STIFTLEISTE 20P.2REIH.  CONNECTOR 20P.	FP 0520.6521.00	BINDER	11-0209-00-20	
	хз	FP STIFTLEISTE 20P.2REIH. CONNECTOR 20P.	FP 0520.6521.00	BINDER	11-0209-00-20	
	X36	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP	1-928776-5	
	X37	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP	1-928776-5	
	X38	VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP	1-928776-5	
	X80	FP STECKERLEISTE 32POL. CONNECTOR 32P.	FP 0008.5718.00	DEUT_ELCO	16 8457 064 002 027	
	X81	FJ EINBAUSTECKER F.GS SMB ANGLE CONNECTOR	FJ 0602.8804.00	IMS	81.1524.201,	
	X89	FJ EINBAUSTECKER F.GS SMB ANGLE CONNECTOR	FJ 0602.8804.00	IMS	81.1524.201	
	Z52	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61ROOT101T1	
	Z54	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61ROOT101T1	
	Z56	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61R00T101T1	
	Z58	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61ROOT101T1	
	Z60	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61ROOT101T1	
	Z64	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61R00T101T1	
900	Z66	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61R00T101T1	
9 19	268	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61ROOT101T1	
	Z70	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61R00T101T1	
١	Z72	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61R00T101T1	
	Z74	LD T-FILTER 100PF SMD SMD-FILTER	1039.1356.00	MURATA	NFM61ROOT101T1	
	Z76	LD T-FILTER 3,3NF SMD SMD-FILTER	1039.1362.00	MURATA	NFM61R2OT332T1	
	Z78	LD T-FILTER 3,3NF SMD SMD-FILTER	1039.1362.00	MURATA	NFM61R2OT332T1	
	Z80	LD T-FILTER 3,3NF SMD SMD-FILTER	1039.1362.00	MURATA	NFM61R2OT332T1	
ľ	Z82	LD T-FILTER 3,3NF SMD SMD-FILTER	1039.1362.00	MURATA	NFM61R2OT332T1	
	:					
						į
						Ì
1						

Schaltteilliste für Parts list for

EE DIGITALE SYNTHESE

Sachnummer Stock No.

1038.7344.01 SA

Blatt-Nr. Page

13-

Datum Date

20 07.10.99

ÄΙ

95.0028-0693

1GPK

887 3PLU

ROHDE&SCHWARZ

Ç.				
				:



### XY-Liste

# **XY List**

## Erklärung der Spaltenbezeichnungen:

el. Kennz. Bauelement-Kennzeichen

Seite Leiterplatten-Seite, auf der sich das

**Bauelement befindet** 

X/Y Koordinaten (in Millimeter) des Bauelementes auf der

Leiterplatte bezogen auf den Nullpunkt

Planq., Bl. Planquadrat und Seite des Schaltbildes

für das jeweilige Bauelement

### Explanation of column designations:

Part Identification of instrument part

Side Side of the PC board on which instrument part is

positioned

X/Y Coordinates (in units of millimeters) of the component

on the PC board in reference to zero point

Sqr, Pg Square and page of the diagram for

the respective instrument part

			:
			:

	Ser	cvic	e-Rel	evar	nte Bai	uteile /	Ser	vice-	-Rel	evant (	Componen	ts 		
Part Si	ide X	Y	Sqr	Pg	Part	Side X	Y	Sqr	Pg	Part	Side X	Y	Sqr	Pg
L506	В 240	63	10C	4	P15	B 231	106	4B	3	P35	в 177	67	6E	4
L507	B 226	45	10C	4	P16	B 252	94	5B	3	P39			10E	4
Pl	B 134	72	5D	2	P17	B 90			2	R214			3B	
	B 121	72		2	P18	B 76			2	R433				4
	B 196			3	P20	в 69			5	Х1	В 164			
		94		3	P21	B 46			5	X2	B 164			
	B 231			3	P22	B 107			2	Х3				
	B 278	21		4	P23	B 88			2	X36			7D	
P7	B 205	76		4	P24	B 137			2	X37			8D	
P8			12E		P27	В 88			2	X38	В 200		8D	
	B 94		12E		P28	B 148			2	X80A			1D	2
	B 293				P29	B 116			2	X80D				_
	B 250				P30	B 109	128	10C	2	L .	B 17			
	B 264			4	P32	B 215 B 217	138	5D	3	X89	в 296	15	5B	4
P13	B 255	94	5B	. ال د	P33	B 217	138	5D	3					
P14	R 501	94		ئ 	P34	B 274	• TTP	- 6C	3	 				
					+					+	ant Comp			
										·				
	B 283			3	C200				3	C408				
	B 139			5	C202				3	C409			7D	
	B 177			5	C203	A 187			3	C410			7D	
	B 182	30		5	C204				3	C411			7D	
	B 106	18		5	C205				3	C412			7E	
	B 106	26			C210				3	C414				
	B 69				C212	A 215				C420				
C102 C110	A 113 B 57	49 36			C214	A 227 B 227				C500 C502			8B 10C	
C111	A 81	86		5	C218					C502				
C111	A 124	78		5	C218	B 23		4A	3	C505	B 250		10C	
C114	B 102	114		5	C220	A 22		3B	3	C508	B 250		10C	
C115	B 102			5	C222		7 106		3	C510	B 263		11D	
C116	B 146			5	C230		5 137		3	C512	B 275		10D	
C117	B 142			5	C231	A 200		5E	3	C514	A 257		11D	
C118	B 145			5	C232		1 133	5E	3	C514	B 269		11E	
C119	B 124			5	C233		126	6D	3	C518	B 255	57		
C120	B 150	97		5	C300		130	6C	3	C519	A 244		11B	
C129		119		2	C302		5 122	6C	3	C600	A 224	24	5B	
C130		107		2	C304		108	6C	3	C602	A 266	24	6B	
C131	A 156			2	C306		125	6C	3	C604	A 250		6B	
C132	A 151			2	C308		5 112	6C	3	C620	A 244	32	2C	
C133	A 151			2	C310		2 103	6B	3	C621	A 252	36	2B	
C134	A 140			2	C312		1 103	5B	3	C622	A 281	22	3B	
C135	A 140			2	C401		116		3	C623	B 278		4c	
C150	B 110	53		5	C402		9 117		3	C624			3в	
	A 114			2	C403		7 111	7C	3	C625	B 295		4B	
C162	A 103	62	10E	2	C404	B 299	99	7C	3	C626	В 289	30	4B	4
C162	B 103	128	6D	5	C405	B 29	5 104	8C	3	C627	B 295	30	4B	4
	B 105	69	7D	5	C406					C628			4B	4
C168 C180		126	6D	5	C407	В 29	96	8C	3	C629	В 287	15 	5B	4
C168	B 124									1				
C168 C180 C182	B 124	+ 	Datum	n		X,	Y-Lis	te f	nr	Sach	-Nummer		R	latt
C168 C180 C182 C186			Datum Date				Y-Lis Y-lis			Sach Stoc	-Nummer k-Nr		-	latt age
C168 C180 C182	B 124				+					i .			-	
C168 C180 C182 C186 	B 124				EE DI		Y-lis	t f		Stoc			-	



Part Si	de	X	Y	Sqr 1	Pg	Part Si	.de	X	Y	Sqr 	Pg	Part S	ide X 	Y 	Sqr 	Pg 
C630	В	281	 15	5B	4	D600-B				4E	4		A 179	58	5E	
C631	A :	267	17	5B	4	D600-C				5B	5	N700-B			5C	
C640	В	250	30	2D	4	D700-A	A	178	69	6E	4	N702-A	A 182	51	6D	
C641	в	241	36	3E	4	D700-B				6E	4	N702-B			6C	
		217	34	4D	4	D700-C				7E	4	P40	в 140	29	2F	
		250	18	2E	4	D700-D				7E	4	P41	B 135	29	2E	
		241	12	3F	4	L76	В	182	18	2C	5	P42	B 150	29	2E	
		217	11	4E	4	L78		182	23	2B	5	P43	в 156	29	2D	
		296	28	4B	4	L80		111	18	2E	5	P44	B 145	29	2D	
		290	22	4B	4	L82		111	23	2D	5	R48	A 121	18	2D	
		185	49	5C	5	L110		109	78	5F	5	R49	A 134	21	20	ļ
		191	49	5C	5	L135		141	94	7F	5	R50	A 146	22	2B	
		192	69	7E	4	L150		119	55	6E	5	R51	A 149	19	2B	
						L200		182	96	3D	3	R52	в 143	29	3F	
		192	62	7E	4				128	3D	3	R52	B 141	45	3F	
C705		192	73	7E	4	L201		217					A 138	29	3E	
C706		205	72	7C	4	L202		195	91	2C	3	R54				
C708		185	60	6E	4	L204		200	96	2C	3	R55	A 136		3E	
C710		188	60	6C	4	L206		215	91	2B	3	R56	A 153	29	3E	
C712		195	54	6C	4	L208		218	96	2B	3	R57	A 151	45	3E	
D20A	В	196	131	3E	3	L210		215	96	2B	3	R58	A 158	29	3D	
D50-A	A	137	17	2C	2	L212		221	105	3B	3	R59	A 156	45	3D	
D50-B				2C	2	L214		237	103	4B	3	R60	A 148	29	3D	
D50-C				2B	2	L216	A	203	128	5E	3	R61	A 146	45	30	)
D50-D				2B	2	L300	Α	277	119	6C	3	R64	A 112	29	30	!
D50-E				2D	5	L302	A	275	103	6B	3	R65	A 110	45	30	!
D110-A	В	128	77	5D	2	L304	A	268	100	6B	3	R66	A 123	29	30	;
D110-B	_			5E	5	L306		264		5B	3	R67	A 121	45	30	;
D112-A	B	83	77	7C	2	L403		299	104	7C	3	R68	A 128	29	3E	ţ
D112-B	_			6E	5	L405			102	8C	3	R69	A 126	45	3E	3
D120-A	Δ	9.8	112	4B	2	L406		293	89	8C	3	R70	A 133	29	3 E	
D120-B	•	70	112	5B	2	L408		298	72	7D	3	R71	A 131	45	3E	
D120-C				5B	2	L500		217	71	8B	4	R72	A 117	29	3E	
					2	L502		214	72	8C	4	R73	A 116	45	3E	
D120-D				4A	1	L502		233	77	8C	4	R74	A 107	29	3 <i>P</i>	
D120-E	_	~~		7E	5						4	R75	A 107	45	3 <i>P</i>	
D125-A	A	98	98	4B	2	L508		247		11C	-	1				
D125-B				5B	2	L514		269		11E	4	R92	B 100	78	6E	
D125-C				5B	2	L516		279		11E		R93	B 100	81		
D125-D				3B	2	L600		230	30	5B		R94	B 100	83		
D125-E				7 <b>E</b>	5	L602		289	28	4B		R95	В 100	86		
D130-A	A	142	124		2	L603		290	15	5B		R96	B 100	88		
D130-B				8E	5	L700		189	46	5C		R97	в 100	91		
D135-A	A	147	95	7E	2	L701		193	52	5C		R98	в 100	93		
D135-B				11D	2	L705	В	203	76	8C	4	R101	A 154			
D135-C				11D	2	N100	В	74	31	3E	5	R102	A 159	55		
D135-D				11C	2	N110	В	51	31	3D	5	R103	A 149	55	41	2
D135-E				8E	5	N120-A	A	98	126	9C	2	R104	A 151	55	5 E	C
D150-A		142	109		2	N120-B				9C		R106	A 156	55	51	C
D150-B				5E	5	N120-C				7E		R108	A 146		51	C
D155-A		121	109		2	N130-A		100	67	11E		R110	B 145			
D155-R			. U 3	6E	5	N130-E				11E		R111	B 145			
D155-B		171	124		2	N130-C				7E		R112	B 145			
		121	124					293	70			R113	B 145			
D175-B				11C	2	1						ŀ	B 145			
D175-C		<b></b> -		6E	5	N600-A		Z5/	24				B 145			
D300			125		3	N600-E				6B		1				
D600-A	B +	226	27 +	4D	4	N600-0				6B 		+			+-	
	-	-I	1	Datur	n				-Lis			9	Nummer			31
ROHDE			- 1	Date				XY	-lis	t f	or	Stock	-Nr		1	Pa
&	+					+	. <b></b>					·+			+· !	
SCHWARZ	i		į			EE DIGI									İ	;
00111111111			1	22.13		DIG			*****	~~~		1 1000	7344.01	***		

Part S:	ide	: X	Y	Sqr	Pg	Part S		e X		Sqr	Pg			¥	Sqr	P
R117		124	76		2	R177		142		8E	5	R252-D			40	
R118		112	76		2	R178	A	155	109	5E	5	R252-E			4C	
R119	A	115	79	5C	2	R179	A	84	77	6B	2	R252-F			40	;
R120	В	131	101	6D	2	R180	A	72	90	6A	2	R252-G			4C	;
R121	A	135	99	6D	2	R181	Α	138	107	6D	2	R252-H			4C	;
R122	A	132	99	6D	2	R182	A	118	107	6C	2	R252-I			40	:
R123	A	130	99	6D	2	R183	A	75	82	7 <b>A</b>	2	R253	A 243	105	4C	:
R124		127	99		2	R184		132			2	R256-A				
R125		124	99		2	R185		130			2	R256-B			40	
R126		122	99		2	R186		132			2	R256-C			40	
R127		119	99		2	R187		130			2	R256-D			40	
R128		104			2	R188		156			2	R256-E			40	
R129		95			2	R189		167	74	3B	5	R256-F			40	
R130		95			2	R190	A		34	3D	5	R256-G			40	
R131		159			2	R190		97				1				
						1			82	7A	2	R256-H			40	
R132		154			2	R192		77	89	7A	2	R256-I		100	4C	
R133		151			2	R193	A		98	7A	2	R257	A 241		4C	
R134		136			2	R194		97	84	7A	2	R260	B 144		4E	
R135		140			2	R195	A		87	7A	2	R261	B 154			
R136		92	97		2	R196		100	79	A8	2	R262	B 150			
R137		149			2	R197		49	37	3D	5	R263	B 176		4D	
R140		155			2	R198	A		34	3C	5	R264	В 179		4D	
R142		134			2	R200		187		2E	3	R265	B 190		4D	
R143		140	99		2	R201		189		2E	3	R266	B 201	140	5E	
R144	Α	117	99	6C	2	R202	Α	192	115	2E	3	R267	B 199	136	5E	
R145	A	114	99	6C	2	R203	Α	199	115	2D	3	R268	A 191	126	6E	
R146	В	141	85	6C	2	R204	A	202	115	2D	3	R269	A 205	136	5E	
R148	В	141	88	6C	2	R205	A	204	115	2D	3	R270	A 189		2E	
R149	Α	142	103	6C	2	R206		178		2D	3	R271	A 192		2E	
R150	Α	116	133	9C	2	R207		178		2D	3	R272	A 178		2E	
R151		118			2	R210		154		4E	3	R273	A 178		2E	
R152		96			2	R211		147		4E	3	R274	A 178		2E	
R153		100			2	R212		235		3B	3	R277	A 194		2D	
R154		103			2	R215		228		3B	3	R300	A 261		5C	
R155		134			5	R216		224		3C	3	R302	A 261			
R156		167	76		5	R218					_				5C	
R157		156	74		5	R218		224 222		3C	3	R304	A 257		5C	
						1			96	2A	3	R306	A 257		5C	
R158	A	92			2	R222		225	88	3A	3	R310	A 275		6C	
R159	A	74	34		5	R224		228	86	2A	3	R312	A 268		6C	
R160		114	126		2	R226		228	92	3A	3	R314	A 253	97	5B	
R161		114			2	R228		220	98	3B	3	R400	B 288		6C	
R162	Α	114			2	R240		234		4C	3	R401	B 290		7C	
R163	A	80	34		5	R241		234		4C	3	R402	B 297		7C	
R164	A	95		10E	2	R242	В	234	129	4C	3	R403	B 290	89	7D	
R165	A	98	71	11E	2	R243	В	234	126	4C	3	R404	A 290	75	7D	
R166	Α	98	61	11E	2	R244	В	234	124	4C	3	R405	B 293	64	7D	
R167	Α	105		10E	2	R245		234		4C	3	R406	B 295	91	8C	
R168		100		11E	2	R246		234		4C	3	R407	A 298	55	7E	
R169		102		11E	2	R247		234		4C	3	R408	A 289	53	7E	
R170		109		11E	2	R248		234		4C	3	R409	A 289	59	7E	
R171		109		11E	2	R249		234		4C	3	R420	A 294		9F	
R171 R172	A	93		10D	2	R250		237		4C	3	R424	A 287		9r 8E	
						1										
R174		108	106		5	R252-A	ಭ	243	7.7.7	4C	3	R502	B 260	73		
R175		108			5	R252-B				4C	3	R503	A 261		11D	
R176	-B +	140	121 +	8E	5	R252-C				4C	3	R504	В 272 	51 	11E	_
	-	-I		Datum						te f		Sach-N			В	
ROHDE &	 		 	Date	<b></b>	<b> </b>		XY-	-list	t fo	or 	Stock-	Nr 		P	ē
SCHWARZ	<b>-</b> 					EE DIGI					_ <b>_</b> -	,				
				22.11					THE			1038.7			1	

Part S	ide X	Y	Sqr	Pg	Part	Side	×	Y	Sqr	Pg	Part	Side	x	Y 	sqr	Pg
R505	в 269	48	11E	4	R643		238	12	3F	4	V502		222	68	8B	4
R506	B 272		11E	4	R646		217	18	4E	4	V503		224	55	7B	4
R510	B 244		11C	4	R647		215	14	5E	4	V504		227	68	8B	_
R512	B 250		11C	4	R650		212	24	4E	4	V505		229	55	7B	4
R514	B 255		10C	4	R652		261	30	6B	4	V507		236	74	8C	_
R516	B 255		10C	4	R653		269	28	6B	4	V510		257		10D	4
R518	B 261	63	11C	4	R702		177	64	6E	4	V512		252	65	10C	4
R519	A 257	42	11B	4	R704	Α	179	67	6E	4	V514		257		10C	
R520	B 258	48	10B	4	R705	A	186	67	6E	4	V516		258	52	10B	
R521	B 247	45	9B	4	R706		179	64	6E	4	V518		250	47	10B	
R600	A 247	34	2C	4	R707		186	64	6E	4	A600		289	35	3B	
R601	A 247	27	2C	4	R708	A	187	69	7E	4	V601		294	35	3B	
R602	A 252	42	2C	4	R709	A	179	54	5D	4	V603		283	32	4B	
R603	A 252	33	2B	4	R710	A	203	73	8D	4	V605		276	14	5B	
R604	A 255	22	3C	4	R712	A	196	75	7E	4	V610		237	16	3E	
R605	A 266	22	3B	4	R713	A	190	77	8E	4	V612		237	34	3D	
R606	A 281	25	3B	4	R715	A	197	56	7D	4	V614		216	22	4E	
R607	B 278	24	3B	4	R716	Α	194	60	6D	4	V615		216	28	4E	4
R610	В 286	37	3B	4	R717	A	199	56	6D	4	V702		196	64	7D	4
R611	B 293	33	3B	4	T200	В	235	92	4B	3	V704	A	200	64	7C	4
R612	в 286	30	4B	4	V100	A	154	51	4E	2	V708	В	179	56	6D	
R614	A 274	17	5B	4	V102	A	159	51	4E	2	Z52	В	141	35	3F	
R618	в 272	30	4C	4	V104	A	149	51	4E	2	Z54	В	136	35	3E	
R619	B 268	33	4C	4	V150	A	103	122	9C	2	Z56	В	151	35	3E	2
R620	B 265	30	4C	4	V152	A	103	73	10E	2	Z58	В	156	35	3D	2
R630	B 250	33	2D	4	V153	A	105	75	10E	2	Z60	В	146	35	3D	
R631	В 244	30	2D	4	V154	A	125	120	9E	2	Z64	В	110	35	3C	2
R632	B 237	30		4	V200	В	185	88	2C	3	Z66	В	121	35	30	2
R633	В 238	36	3E	4	V202		195	88	2C	3	Z68	В	126	35	3B	2
R634	A 225	34			V204	В	205	88	2B	3	Z70	В	131	35	3B	2
R635	A 222	34			V206		215	88	2B	3	Z72	В	116	35	3B	2
R636	В 220	31			V210		228	96	ЗА	3	Z74	В	105	35	3A	. 2
R637	B 220	37			V220		191	136	5D	3	Z76	В	177	35	30	5
R640	B 250	16			V222		189		6E		Z78	В	182	35	3B	5
R641	B 244	18			V500		217	68	8B	4	z80	В	96	23	3E	5
R642	B 237				V501		218	55	7B	4	Z82	В	96	28	30	5

ROHDE	 Datum Date	XY-Liste for XY-list for	Sach-Nummer Stock-Nr	Blatt Page
SCHWARZ	22.11.94	EE DIGITALE_SYNTHESE DIGITAL_SYNTHESIS	1038.7344.01 XY	4-



**SERVICE INSTRUCTIONS** 

**Summing loop** 

1038.7196.02

					:
Ġ.					
	£				

## Contents

77	Charlies and Densin of the Wadula
7.	Checking and Repair of the Module
7.1	Functional Description
7.1.1	Oscillators
7.1.2	Output Stage 5
7.1.3	Sampling Mixer 5
7.1.4	IF Stage 5
7.1.5	Phase Control
7.1.6	Preset, Sequence Control and Interrupt 6
7.1.6	Calibration6
7.2	Measuring Equipment and Accessories 7
7.3	Troubleshooting
7.3.1	Sync Error
7.3.2	Distortions with Broadband Modulation 7
7.3.3	Spectral Purity 7
7.3.4	Calibration
7.4	Testing and Adjustment
7.4.1	Testing the Data Transmission and Current
	Supply
7.4.2	Testing the VCO Preset
7.4.2.1	Testing the D/A Converter
7.4.2.2	Testing the VCO Tuning Voltage 8
7.4.2.3	Testing the Sequence Control
7.4.3	Testing and Adjustment of Oscillators
7.4.3.1	Adjusting the VCOs9
7.4.3.2	Measuring the Characteristic of the VCOs 10
7.4.4	Adjusting/testing the SRD Comb Generator 10
7.4.5	Testing the Sampling Mixer
7.4.5.1	Operating Point of Sampler
7.4.5.2	
7.4.6	Frequency Response of Sampler
7.4.6.1	Adjusting the IF Stage
	Kø Adjustment
7.4.6.2	Adjusting the RF Level at the Sampler 11
7.4.6.3	Testing the RF and LO Level of the Phase
m 4 m	Detector
7.4.7	Testing the Calibration
7.4.8	Testing the Transient Response
7.4.9	Tables and Interfaces 13
7.4.9.1	Digital Interface
7.4.9.2	Operating Points and Levels of RF
	amplifiers
7.4.9.3	Operating Points of Dividers, VCOs and Pin
	Switches 14
7.4.9.4	Diagnostic Points 15
7.4.9.5	Supply Voltages 15
7.5	Removal and Assembly
7 6	Interface Description 15

Part list Coordinates list Circuit diagram Layout diagram

### 7.1 Functional Description

In the summing loop, the octave from 750 to 1520 MHz is generated from the signals of the modules Step Synthesis and Digital Synthesis. Therefore the step signal is used to convert the RF-frequency to an intermediate frequency by a sampling mixer. This IF is synchronized in a phase-locked loop with the output frequency of the Digital Synthesis. Switch-selected dividers permit to extend the frequency range to 93.75 to 1520 MHz.

#### 7.1.1 Oscillators

The two oscillators are controlled using the two switching bits 'OSZ1' and 'OSZ2'. 'OSZ1' switches the VCO from 750 to:1100 MHz, 'OSZ2' the VCO from 1100 to 1520 MHz. A load-independent current feed circuit stabilizes the operating point of the oscillating transistor. The VCO for the upper frequency band provides its smallest frequency with the greatest tuning voltage.

#### 7.1.2 Output Stage

The output frequency range is extended by a divider by 2 and a divider by 4. The division factor 8 results from series connection of the two dividers. The bit 'T2-ENA' switches the divider by 2, 'T4-ENA' the divider by 4. The switching diodes are driven by the bits 'SW1' to 'SW6'.

### 7.1.3 Sampling Mixer

The output signal of the RF oscillators is applied to the sampler via the 3-stage PLL driver with level controller V440. The output signal of the Step Synthesis is amplified by the pulse driver and taken to the step recovery diode. Via R405, the bias current and thus the operating point of the SRD is determined. It generates 350-ps pulses, which are applied to the sampler via balun T405. The sampler mixes the RF signal of the oscillators with the comb spectrum from the SRD multiplier, using the 7th to the 14th harmonic of the signal from the reference step synthesis. An IF of approx. 15 MHz (14.2 to 15.6 MHz) is produced.

### 7.1.4 IF Stage

The output voltage of the sampler is applied to the IF driver V455 via the buffer V450 and the level controller V453. A level control ensures a constant IF level at the phase detector and thus a constant K $\phi$  of the phase-locked loop. A lowpass filter suppresses high-frequency mixture products of the sampler.

### 7.1.5 Phase Control

The LO driver V1 amplifies the output signal of the Digital Synthesis and applies it to the LO input of phase detector D1. A lowpass filter at the output of D1 suppresses the reflection band, an additional filter pole the intermediate frequency. The current feedback operational amplifier N30 is connected up as non-inverting integrator. Using the analog multiplexer D20, its gain can be set in 8 steps, which permits to compensate for the slope of the VCO. A small offset current applied by V95 prevents parasitic synchronization of the PLL during calibration. FET switches V51 and V50 permit to select between 2 control bandwidths. The small bandwidth (approx. 270 kHz) produces a better spectral purity, the large one (approx. 2 MHz) allows for broadband modulations.

### 7.1.6 Preset, Sequence Control and Interrupt

Since the control loop does not contain any frequency-sensitive phase detector, the oscillators must be preset inside the lock-in range of the PLL. Therefore a table with D/A converter tuning values is used, and linear interpolation is performed. The calibration frequecies are 10 MHz apart from each other. The D/A converter D10-A sets the preset voltage corresponding to the data word 'TUNE'. This voltage is amplified by a factor of 1.73 by means of N15-A and applied via a charging circuit to the compensation input of loop integrator N30. Since there is only one amplifier stage with the voltage gain 1 between the compensation input and the integrator output, the preset voltage generated by the D/A converter corresponds to the VCO tuning voltage. When the frequency is changed, the control bandwidth is first switched to narrowband as long as the preset voltage remains applied. During lock-in, the bandwidth is large. Subsequently, the bandwidth is determined by the bit PLL-BW. The switching time constants are determined by monoflops D560 and triggered by the module strobe.

For identification of asynchronous mode, the difference between preset voltage and VCO tuning voltage formed by the operational amplifier N17 is used. Window comparator N550 determines the thresholds and applies the interrupt to the serbus decoder.

#### 7.1.6 Calibration

For generating the calibration table with tuning values, the preset voltage is searched for starting at the lower end of the tuning range, where the VCO tuning voltage is the same as the preset voltage. The modules Digital Synthesis and Step Synthesis must provide the appropriate frequencies to this end. In order to prevent parasitic synchronization, the bit 'CAL OFF' must be low. A small offset current at the integrator input makes sure that the loop can no longer lock on spurious signals.

### 7.2 <u>Measuring Equipment and Accessories</u>

- RF spectrum analyzer (FSA)
- DC voltage source
- Signal generator (SMHU, SMGU, SME, SMT)
- DC voltmeter (UDS5)
- Dual-channel storage oscilloscope (>100 MHz)
- Service kit (order number 1039.3520)

### 7.3 Troubleshooting

The nominal values of the diagnostic points which are checked during troubleshooting are to be found below 7.4.10 'Tables and Interfaces'.

#### 7.3.1 Sync_Error

PLL does not lock Check VCO preset

Adjust SRD comb generator

Check sampling mixer

Adjust IF stage

PLL locks to the wrong

frequency

Check sequence control

Adjust IF stage Check calibration

#### 7.3.2 Distortions with Broadband Modulation

Useful transmission function Adjust VCOs

faulty

Check calibration

Adjust Kø

### 7.3.3 Spectral Purity

Spuriae in the vicinity of

the carrier

Check SRD comb generator

Adjust Kø

Check operating point of sampler

Spuriae approx. 15MHz from

the carrier

Check level at RF and LO port of PD

### 7.3.4 Calibration

Calibration routine does not

converge

Adjust VCOs

Check offset supply at integrator

E-3

### 7.4 Testing and Adjustment

All measured values without tolerance specifications are meant to be understood as approximate values. Voltage specifications without further designation are DC voltages.

The service kit includes an adapter which permits to make the module accessible. The adapter is plugged into the chassis instead of the module and the RF connections are restored at the appropriate sockets on the bottom side. The module can then be inserted on the adapter.

If the module is operated with the cover on the component side opened up, the two oscillator chambers must be closed using a test cover.

### 7.4.1 Testing the Data Transmission and Current Supply

In accordance with the instrument standard, the module is driven via a serial interface using the SERBUS-D component. The settings and the associated data are to be obtained from the section 'Digital Interfaces'.

The current consumption can be checked by replacing coils L580 to L584 by an ammeter each. The nominal values of the respective supply voltages are to be found in the section 'External Interfaces'.

The supply voltages internally generated on the module are to be obtained from the table in the section 'Tables and Interfaces'.

#### 7.4.2 Testing the VCO Preset

## 7.4.2.1 Testing the D/A Converter

- Remove jumper X15
- Settings: FREQUENCY 1100 MHz
  UTILITIES DIAG TPOINT 607
- ▶ The tuning voltage at the voltmeter must be 19 V with the VCO correctly adjusted. When increasing the output frequency in 10-MHz steps up to 1520 MHz, the preset voltage must continuously decrease in steps of 330 to 660 mV to approx. 2 V. The preset voltage is derived from the currently valid calibration table and is subject to manufacturing tolerances of the oscillators so that only a qualitative statement on the function of the D/A converter is possible.
- Replace jumper X15.

#### 7.4.2.2 Testing the VCO Tuning Voltage

- Remove jumper X50.
- Short-circuit resistor R48 (revision 5 and higher insert jumper X16)
- Settings: FREQUENCY 1100 MHz
  UTILITIES DIAG TPOINT 606
- ▶ The test is performed as in section 7.4.2.1.

- Replace jumper X50
- Remove short-circuit at R48

### 7.4.2.3 Testing the Sequence Control

Use the storage oscilloscope to record the voltage curves of test points MP57 and MP58. The trigger is released on the module strobe at test point MP40. The time constants are to be obtained from Fig. 1.

- Storage oscilloscope channel 1 at MP40 channel 2 at MP57 or MP58
- Settings:

Frequency change from 800 to 900 MHz

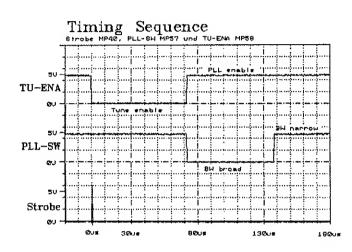


Fig.1

#### 7.4.3 Testing and Adjustment of Oscillators

### 7.4.3.1 Adjusting the VCOs

- Remove jumper X50 , connect DC voltage source to X50B and set 2V
- Connect spectrum analyzer to X91 (FSUM)
- Settings:

FREQUENCY 800 MHz UTILITIES DIAG TPOINT 605

- ▶ Adjust the frequency of the output signal FSUM at X91 to 750 ±0.5 MHz using trimmer C100.
- Set the DC voltage source at X50B to 19 V
- Settings:

FREQUENCY 1200 MHz UTILITIES DIAG TPOINT 605

9

- ▶ Adjust the frequency of the output signal FSUM at X91 to 1100 ±0.5 MHz using trimmer C120.
- ▶ The diagnostic voltage 'oscillator level' must be between 30 and 100 mV for both VCOs.
- Insert jumper X50

### 7.4.3.2 Measuring the Characteristic of the VCOs

- Remove jumper X50, connect DC voltage source to X50B and set 2 V.
- Connect spectrum analyzer to X91 (FSUM)
- Settings:

FREQUENCY 800 MHz UTILITIES DIAG TPOINT 604

- ▶ With a tuning voltage of 2 V, the frequency of FSUM must be 750 MHz. When increasing the tuning voltage, the output frequency must increase continuously until 1100 MHz are achieved at 18 to 20.5 V (nominal value: 19 V). The output level of FSUM must lie between 7 and 11 dBm.
- Set DC voltage source at X50B to 19 V
- Settings:

FREQUENCY 1200 MHz
UTILITIES DIAG TPOINT 605

- ▶ With a tuning voltage of 19 V, the frequency of FSUM must be 1100 MHz. When reducing the tuning voltage, the output frequency must decrease continuously until 1520 MHz are reached at 0.5 to 3 V (nominal value: 2 V). The output level of FSUM must lie between 7 and 11 dBm.
- ▶ The diagnostic voltage 'output signal FSUM' must lie between 150 and 350 mV.
- Insert jumper X50

# 7.4.4 Adjusting/testing the SRD Comb Generator

• Settings:

FREQUENCY 839 MHz
UTILITIES DIAG TPOINT 603

▶ Up to revision 4 adjust the diagnostic voltage 'Pulse amplitude' to maximum using potentiometer R405. Revision 5 and higher doesn't need any adjustment. The diagnostic voltage must lie between 1.1 and 3.5 V (typ. 1.8 V) for both cases.

## 7.4.5 Testing the Sampling Mixer

### 7.4.5.1 Operating Point of Sampler

· Settings:

- FREQUENCY 839 MHz
- ▶ The DC voltage at R421 or R429 must be greater than +1 V or smaller than -1 V (measured with 100-kohm series resistor).

E-3

#### 7.4.5.2 Frequency Response of Sampler

- Remove jumper X47
- Short-circuit resistor R48 (revision 5 and higher insert jumper
- Connect probe of oscilloscope to test point MP67

• Settings:

UTILITIES DIAG TPOINT 602

FREOUENCY 757 MHz

863 MHz

969 MHz

1075 MHz

1181 MHz

1287 MHz

1393 MHz

1499 MHz

- First adjust the diagnostic voltage to 50 mV using potentiometer R440 at the given frequencies. The IF at test point MP67 must be 450 ±100 mVpp. The maximum level frequency response must not be greater than ±50 mVpp.
- Remove short-circuit at R48
- Insert jumper X47

After measuring the frequency response of the sampler, it is absolutely necessary to adjust the IF stage (7.4.6).

#### 7.4.6 Adjusting the IF Stage

#### 7.4.6.1 <u>Kø Adjustment</u>

- Connect probe of oscilloscope to test point MP30
- · Reconnect jumper X20 to ground
- Short-circuit resistor R48 (revision 5 and higher insert jumper X16)
- Settings:

FREQUENCY 1000 MHz UTILITIES DIAG TPOINT 601

- ▶ Adjust the voltage at test point MP30 to 540 mVpp using potentiometer R476.
- ▶ The waveform of the signal approximates a triangle. The diagnostic voltage 'IF level' is 190 ±90 mV after the adjustment.
- Remove short-circuit at R48
- · Reconnect jumper X20 to its normal position

#### 7.4.6.2 Adjusting the RF Level at the Sampler

- Connect probe of oscilloscope to test point MP67
- Connect voltmeter to test point MP69
- Remove jumper X47
- Reconnect jumper X20 to ground
- Short-circuit resistor R48 (jumper X43)

- Settings: FREQUENCY 1298 MHz
  UTILITIES DIAG TPOINT 602
- ▶ Adjust the IF signal at the oscilloscop to 350 mVpp using potentiometer R440
- ▶ The diagnostic voltage must be about 35 mV. The waveform at MP67 must be sinewave without distortions.
- Insert jumper X47.
- Settings:

#### FREQUENCY 1100 MHz

- ▶ The IF control voltage at MP69 must be smaller than 3.5 V
- Remove short-circuit at R48
- Reconnect jumper X20 to normal position

### 7.4.6.3 Testing the RF and LO Level of the Phase Detector

- Connect probe of oscilloscope to test point MP68 or MP9
- Settings:

### FREQUENCY 1000 MHz

▶ A peak voltage of approx. 0.9 Vpp must be applied to test point MP68 (RF port of phase detector) and a peak voltage of 1.8 Vpp at test point MP9 (LO port of phase detector). The waveform must correspond to a sinewave signal.

### 7.4.7 Testing the Calibration

Before testing the preset table, it must be newly set up.

- Settings: : UTILITIES CALIB SUM (Perform calibration)
- Reconnect jumper X20B to ground
- Short-circuit resistor R48 (revision 5 and higher insert jumper X16)
- Connect spectrum analyzer to X91 (FSUM)
- Settings: FREQUENCY 750.01 to 1520 MHz in 10-MHz steps UTILITIES DIAG TPOINT 600
- ▶ Immediately after calibration of the module, the frequency measured using the analyzer may deviate from the set frequency by max. 500 kHz. The voltage applied to diagnostic point 'PLL differential voltage' should have an average value of -80 mV and must not exceed -200 mV.
- Reconnect jumper X15 to normal position
- Remove short-circuit at R48

### 7.4.8 Testing the Transient Response

- Connect probe of oscilloscope to test point MP30
- Settings: FREQUENCY 751 MHz <-> 1101 MHz 1100 MHz <-> 1520 MHz
- ▶ 300 to 400 us after the module strobe the voltage change at the output of the phase detector must not exceed 10 mV. A voltage curve as shown in Fig. 2 is obtained.

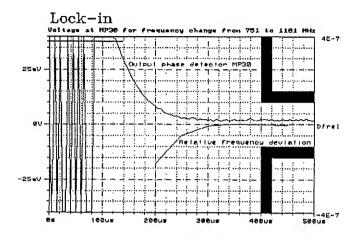


Fig.2

### 7.4.9 Tables and Interfaces

# 7.4.9.1 Digital Interface

Subaddress 0 (Serout, CLK1, WR1):

Lat	Latch Designation		Function					
D533	11	KOSET-2	Compensation VCO slope		MSB			
	12	KOSET-1	·					
	13	KOSET-0			LSB			
	14	CAL-OFF	Offset for calibration	0=on	1=off			
	7	TRIG-ENA	Trigger sequence control	0=off	1=on			
	6	free						
	5	TUNE-9	Preset for VCOs	ļ	MSB			
	4	TUNE-8						
D532	11	TUNE-7						
	12	TUNE-6						
	13	TUNE-5						
	14	TUNE-4						
	7	TUNE-3						
	6	TUNE-2						
	5	TUNE-1						
	4	TUNE-0			LSB			

Latch Designation		Designation	Function					
D531	11	SW6	Pin switch 6 switched with :8	0=off	1=on			
	12	SW5	Pin switch 5 switched with :4	0=off	1=on			
	13	SW4	Pin switch 4 switched with :2	0=off	1=on			
	14	SW3	Pin switch 3 switched with :4	0=off	1=on			
	7	SW2	Pin switch 2 switched with :2	0=off	1=on			
	6	SW1	Pin switch 1 switched with :1	0=off	1=on			
	5	ENA-T4	Divider :4 enable	0=off	1=on			
	4	ENA-T2	Divider :2 enable	0=off	1=on			
D530	11	PLL-ENA	Activate PLL	0=off	1=on			
	12	PLL-BW	Select control bandwidth	0=broad	1=narrow			
	13	OSZ2	Activate VCO2 (1100 - 1520 MHz)	0=off	1=on			
	14	0SZ1	Activate VCO1 ( 750 - 1100 MHz)	0=off	1=on			
	7	DIAG-ENA	Activate diagnosis	0=off	1=on			
	6	DMUX-2	Address of diagnostic points	:	MSB			
	5	DMUX-1	- '					
	4	DMUX-0			LSB			

# 7.4.9.2 Operating Points and Levels of RF amplifiers

Amplif	ier	Operating point	RF level, Frequency	Remark
V1	Pin2 Pin3	1.2 V 5.2 V	2 dBm 15 MHz 7 dBm "	Level of Fdsyn LO level for phase detector D1
V400	Pin1,3 Pin2	8.5 V	5 10 440 499	
	Pin4	9.3 V 13.2 V	5 dBm 110 MHz 20 dBm "	Level of Fstep Level for control of step recovery diode
V450	Pin1 Pin2	9.6 V 1.4 V	.35 Vpp 15 MHz	Nominal value applies to V45 removed
V455	Pin2	.9 V	15 MHz	RF level for phase detector D1
	Pin4	5.1 V	n	

The integrated RF amplifiers of the type MSA0386 and MSA0486 feature a collector voltage of 4.5 and 4.9 V, respectively, in their operating point. All RF levels are to be measured using a probe >500 ohms.

7.4.9.3 Operating Points of Dividers, VCOs and Pin Switches

Component	Test point	Function	Meas. value	Remark
V105	Current across R109	Oscillator 1	30 mA	Operating point
V129	Current across R129	Oscillator 2	30 mA	of VCOs
V259	Pin1	Pin switch	.9 V	with :1,:2,:4,:8
V260	11	н	н	division factor
V270	н	tt	+	
V276	#	n	,,	
V277	#	ч	*	
V278	Pin3	н	n	
V280	Pin2	Ħ	-1.1V	with :1,:2,:4
			+1.5V	with :8
V401	MP 37	SRD bias current	2.9V	Pulse amplitude adjusted
V440	MP 41	Level controller	1.5V	RF level at sampler
V453	MP 69	Level controller	1 - 4V	IF amplitude control

### 7.4.9.4 Diagnostic Points

Diagnostic point	Nom.value	Value range	Remark
600		-170 - 30 mV	PLL differential voltage /*
		-600 - 600 mV	/**
601	220 mV	180 - 250 mV	IF level
602	35 mV	20 - 50 mV	RF level at sampler
603	1.5 V	1.1 - 2.5 V	Pulse amplitude
604	200 mV	80 - 300 mV	Output level FSUM
605	70 mV	30 - 150 mV	Oscillator level
606		.5 - 20.5 V	VCO tuning voltage
607		.5 - 20.5 V	Preset voltage

^{/*} applies only immediately after calibration of summing loop

### 7.4.9.5 Supply Voltages

List of supply voltages generated on the module:

Voltage	Test point	Nom. value	Tolerance window
-5 V	MP 70	-5.0 V	-4.55.5 V
21 V	MP 80	21.3 V	20.2 22.4 V
5 V	MP 21	5.5 V	5.2 6.0

### 7.5 Removal and Assembly

After opening the instrument, unlocking the modules and disconnecting the RF connections at X91, X97 and X99, the module can be removed from its location.

The screening covers are conventionally fastened with screws. During operation with open screening cover, make sure that the two chambers J and K are closed by an appropriate test cover on the component side.

### 7.6 Interface Description

Pin	Name	Inp./Output	Origin/Destir	ation	Value range	Signal description
X9.A12	SERBUS-CLK	Input	A3, FRO X5	0.40	HCMOS level	Serbus clock
X9.A14 X9.A15	SERBUS-DAT	bidir.	A3, FRO X5	0.39	HCMOS level	Serbus data
X9.A16	SERBUS-SYNC	Input	A3, FRO X5	0.37	HCMOS level	Serbus synchronization
X9.A17	SERBUS-INT	Output	A3, FRO X5	0.38	HCMOS level	Serbus interrupt
X9.A18	RES-P	Input	A3, FRO X5	0.28	HCMOS level	Serbus reset
X9.A19	DIAG-5V	Output	A3, FRO X5	0.44	-5V5V	Diagnosis
X9.A26	VA24-P	Input	A2, POWS1		23.400V24.60 30 80mA	Supply voltage analog

^{/**} tolerance window for interrupt

Pin	Name	Inp./Output	Origin/Destination	Value range	Signal description
X9.A24	VA15-P	Input	A2, POWS1	14.80V15.75V 150290mA	Supply voltage analog
X9.A26	VA7.5-P	Input	A2, POWS1	7.45V7.95V 300550mA	Supply voltage analog
X9.A28	VD-5P	Input	A2, POWS1	5.10V5.25V 5 20mA	Supply voltage digital
X9.A30	VA15-N	Input	A2, POWS1	-15.75V14.85V 50200mA	Supply voltage analog
X91	FSUM	Output	A10, OPU1 X101	611dBm 93.75 - 1520MHz	Output frequency
Х97	FSTEP	Input	A7, REFSS X75	5 ±1dBm 103117 MHz	Reference step
Х99	FDSYN	Input	A8. DSYN X89	2 ±2dBm 14.315.6 MHz	Dig. synthesis



Schaltteillisten numerisch geordnet

Part lists in numerical order

Listes des pièces détachées par numéros de référence

			:
ą.			
·			

Stock No.

CC 0007.7398.00 AVX

Manufacturer

Designation

1206 5A 102 FATOOJ

contained in

95.0028-0893

diese

Fü

comp. No.

C1

Designation

1206

CC 1NF+-1% 50V NPO

		Page
SCHWARZ 46 07.10.99 ED SUMMIERSCHLEIFE 1038.7196.01 S	SA	1+
SCHWARZ 46 07.10.99 ED SUMMIERSCHLEIFE 1U38./196.U1 S	5,	`

	Comp. No.	Design	tion			Stock No. Manufacturer			ezeichnung Jesignation		aiten in tained in
	C105	CC 3,9PFO,1PFE SMD-CERAMIC-CA	OV	NPO 0603	CC	0009.4509.00			M39COG***B50ZPT		· · · · · · · · · · · · · · · · · · ·
	C106	CC 100PF+-10% CAPACITOR	MAL	NPO 0805	cc	0082.2948.00	MURATA	GR	M40 COG 101 K50ZPT		
	C107	CC 4,3PF0,25PF		NPO 0805	СС	0093.5643.00	MURATA	GRI	M4OCOG4R3C5OPT		
	C108	CAPACITOR CE 22UF+-20%35			CE	0009.6253.00	PANASONIC	EEV	/ HB 1V 220P		
	C119	SMD ELECTROLYT	V N	IPO 1206	СС	0099.8850.00	AVX	120	06 A 221 F 3		
	C120	CERAMIC CHIP C	. 7F	RDX13		0048.6109.00	TRONSER	60-	-0722-15010-906		
	C121	AIR-TYPE TRIMM CC 10PF+-0,25	50V		СС	0099.8480.00	MURATA	GRN	142-6COG 100 C50PT		
	C122	CERAMIC CHIP C CC 100NF+-10%5	OV	X7R 1206	СС	0007.5237.00	PHILIPS_CO	223	88 581 55649		
	C123	CERAMIC CHIP C	OV	X7R 1206		0007.5237.00					
	C124	CERAMIC CHIP C CC 2,7PF0,25PF		CITOR NPO 0805	cc	0093.5572.00	PHILIPS_CO	222	2 861 15278		
	C125	CAPACITOR CC 3,3PF+-0,1P	F50	VC0G0603	СС	0008.2125.00	AVX	060	3 5J 3R3 BAW		
	C126	SMD-CERAMIC CA CC 100PF+-10%		ITOR NPO 0805	СС	0082.2948.00	MURATA	GRN	140 COG 101 K50ZPT		
	C127	CAPACITOR CC 2,2PFO,25PF		NPO 0805	СС	0093.5566.00	MURATA	GRIV	140 COG 2R2C 50PT		
	C128	CAPACITOR CC 220PF+-1%50			СС	0099.8850.00	AVX		6 A 221 F 3		
	C140	CERAMIC CHIP C	V N	PO 1206	СС	0099.8415.00	MURATA	GRIV	42-6COG 101F50ZPT		
	C141	CERAMIC CHIP C CC 100NF+-10%5	00	X7R 1206	СС	0007.5237.00	PHILIPS_CO	223	8 581 55649		
	C142	CERAMIC CHIP C	VC	NPO 1206	l	0099.8667.00			42-6COG 1RO C5OPT		
	C143	CERAMIC CHIP C	V N	PO 1206	СС	0099.8415.00	MURATA	GRM	42-6COG 101F50ZPT		
	C144	CERAMIC CHIP CA	NΡ	0 1206	СС	0007.7398.00	AVX	120	6 5A 102 FATOOJ		İ
	C210	SMD CERAMIC CAL	10V	7343	CE	0007.7300.00	SPRAGUE	293	D X9 O10 D2W		
	C236	TANTALUM CHIP (CC 100NF+-10%50	OV :	X7R 1206	СС	0007.5237.00	PHILIPS_CO	223	8 581 55649		
-	C250	CERAMIC CHIP CA	OV :	X7R 1206	сс	0007.5237.00	PHILIPS_CO	223	8 581 55649		
	C251	CERAMIC CHIP CA	/ N	PO 1206	СС	0099.8415.00	MURATA	GRM	42-6COG 101F50ZPT		
	C255	CERAMIC CHIP CA	/ N	PO 1206	СС	0099.8415.00	MURATA	GRM	42-6COG 101F50ZPT		
	C257	CERAMIC CHIP CA	OV :	X7R 1206	СС	0007.5237.00					
	C259	CERAMIC CHIP CA	/ N	PO 1206	СС	0099.8515.00	AVX	120	6 5 A 471 F 3		
	C260	CERAMIC CHIP CA	/ N	PO 1206	СС	0099.8415.00	MURATA	GRM	42-6C0G 101F50ZPT		
	C261	CERAMIC CHIP CA	/ N	PO 1206	СС	0099.8515.00			6 5 A 471 F 3		
	C263	CERAMIC CHIP CA	/ NI	PO 1206	СС	0099.8515.00	AVX	120	6 5 A 471 F 3		
	C264	CERAMIC CHIP CA	) V	X7R 1206	СС	0007.5237.00					
	C265	CERAMIC CHIP CA	)VX	7R 1206	СС	0099.8444.00	AVX	120	6 5 C 222 KA 3		
	C266	CERAMIC CHIP CA	)VX	7R 1206	СС	0099.8444.00	AVX	120	6 5 C 222 KA 3		
	C268	CERAMIC CHIP CA	)V (	X7R 1206	СС	0007.5237.00	PHILIPS_CO	223	3 581 55649		
	C269	CERAMIC CHIP CA	)V )	X7R 1206	СС	0007.5237.00	PHILIPS_CO	223	3 581 55649		
	C271	CERAMIC CHIP CA	V X	X7R 1206	СС	0007.5237.00	PHILIPS_CO	223	3 581 55649		
	C272	CERAMIC CHIP CA	/ NI	0 1206	СС	0099.8415.00	MURATA	GRM	42-6COG 101F50ZPT		
	C273	CERAMIC CHIP CA	/ NI	PO 1206	СС	0099.8515.00	AVX	120	3 5 A 471 F 3		
	C274	CERAMIC CHIP CA CC 1NF+-1% 50V SMD CERAMIC CAP	NP(	1206	СС	0007.7398.00	AVX	120	5 5A 102 FATOOJ		1
	C275	CC 1NF+-1% 50V	NP(	1206	СС	0007.7398.00	AVX	120	3 5A 102 FATOOJ		
		SMD CERAMIC CAPACITOR									
H	1GPK	887 3PLU	x.	Datum		Schaltteill	ste für		Sachnummer		Blatt-Nr.
-	- IGFN	00/ 3PLU	Äl	Date		Parts lis			Stock No.		Page
	BUNDE	2 CCHNIAD7	46	07.10.99	Е	D SUMMIERSCHL	EIFE.		1038.7196.01	SA	2+
	RUNDE&SCHWARZ		ROHDE&SCHWARZ								

wir uns aile Hechte vor.

┒	comp. No.	· · · · · · · · · · · · · · · · · · ·	·····		Stock	No.	Manufacturer	D	esignation	contained in
	C276	CC 100NF+-10%50 CERAMIC CHIP CA	V X7R 120	)6 C	0007.5	237.00	PHILIPS_CO	223	88 581 55649	
	C277	CC 100NF+-10%50	V X7R 120	6 CC	0007.5	237.00	PHILIPS_CO	223	38 581 55649	
	C279	CERAMIC CHIP CA CC 2,2NF+-10%50	VX7R 1206						06 5 C 222 KA 3	
	C280	CERAMIC CHIP CA CC 470PF+-1%50V	PACITOR	-						
	C281	CERAMIC CHIP CA	PACITOR						06 5 A 471 F 3	
		CC 100NF+-10%50 CERAMIC CHIP CA	PACITOR		0007.5	237.00	PHILIPS_CO	223	88 581 55649	
	C282	CC 470PF+-1%50V CERAMIC CHIP CA	NPO 1208	cc	0099.8	515.00	AVX	120	06 5 A 471 F 3	
1	C283	CC 1PF+-0,25 50	V NPO 120	6 CC	0099.8	667.00	MURATA	GRN	142-6COG 1RO C5OPT	
	C284	CERAMIC CHIP CA	NPO 1206	cc	0007.7	398.00	AVX	120	06 5A 102 FATOOJ	
I	C285	SMD CERAMIC CAP CC 4,7PF+-0,25							142-6COG 4R7C 50PT	
ı	C286	CERAMIC CHIP CA CC 1NF+-1% 50V	PACITOR							
		SMD CERAMIC CAP	ACITOR						06 5A 102 FATOOJ	
	C287	CC 470PF+-1%50V CERAMIC CHIP CA	PACITOR		0099.8	515.00	AVX	120	06 5 A 471 F 3	
١	C288	CC 470PF+-1%50V CERAMIC CHIP CA	NPO 1206	cc	0099.8	515.00	AVX	120	6 5 A 471 F 3	
	C289	CC 1NF+-1% 50V	NPO 1206	cc	0007.7	398.00	AVX	120	6 5A 102 FATOOJ	
	C290	SMD CERAMIC CAP CC 470PF+-1%50V	NPO 1206	cc	0099.8	515.00	AVX	120	6 5 A 471 F 3	
Ī	C291	CERAMIC CHIP CA CC 470PF+-1%50V	NPO 1206						6 5 A 471 F 3	
	C292	CERAMIC CHIP CA CC 100NF+-10%50	PACITOR			4			8 581 55649	
١	C294	CERAMIC CHIP CA	PACITOR							
		CC 2,2NF+-10%50 CERAMIC CHIP CA	PACITOR						6 5 C 222 KA 3	
1	C295	CC 100NF+-10%50' CERAMIC CHIP CAI		6  CC	0007.5	237.00	PHILIPS_CO	223	8 581 55649	
ı	C400	CC 470PF+-1%50V CERAMIC CHIP CAI	NPO 1206	cc	0099.85	515.00	AVX	120	6 5 A 471 F 3	
	C401	CE 10UF +-10% 2!	5V 734	3 CE	0007.72	246.00	SPRAGUE	293	D 106 X9 025 D2W	
	C402	TANTALUM SMD-CAI CE 22UF+-20%35V	RUND SMD	CE					HB 1V 220P	
	C403	SMD ELECTROLYTIC CC 100NF+-10%50V	V X7R 120	.					8 581 55649	
	C404	CERAMIC CHIP CAP CC 470PF+-1%50V	PACITOR			1			6 5 A 471 F 3	
	C405	CERAMIC CHIP CAP CC 470PF+-1%50V	PACITOR	i		1				
l		CERAMIC CHIP CAR	PACITOR						6 5 A 471 F 3	
	C406	CE 22UF+-20%35V SMD ELECTROLYTIC	RUND SMD CAPACIT	CE.	0009.62	253.00	PANASONIC	EEV	HB 1V 220P	
ļ	C407	CC 0,47PF+-0,259 CERAMIC CHIP CAP	PF50V 080		1002.49	951.00	VALVO	222	2 8611 5477	
ı	C408	CC 470PF+-1%50V	NPO 1206	cc	0099.85	515.00	AVX	1206	6 5 A 471 F 3	
	C409	CERAMIC CHIP CAP CC 100PF+-1%50V	NPO 1206	СС	0099.84	115.00	MURATA	GRM4	42-6COG 101F50ZPT	
	C420	CERAMIC CHIP CAF	PACITOR NPO 080		0082.73				40C0G330K50ZPT	
	C421	CAPACITOR CC 33PF+-10%	NPO 080							
	C422	CAPACITOR			0082.73				4OCOG33OK5OZPT	
١		CC 4,7PF+-0,25 ECERAMIC CHIP CAP	PACITOR		0007.82	l		GRM4	12-6CDG 4R7C 50PT	
	C429 431	CC 220PF+-1%50V CERAMIC CHIP CAF		CC	0099.88	350.00	ΔVX	1206	5 A 221 F 3	
	C432	CC 1,5PF+-0,25 E CERAMIC CHIP CAP	50VNP0120	s cc	0007.81	59.00	MURATA	GRM4	12-6COG 1R5 C50PT	
	C433	CC 1,5PF+-0,25 5	50VNP0120	s cc	0007.81	59.00	MURATA	GRM4	12-6COG 1R5 C50PT	
	C434	CERAMIC CHIP CAP CC 220PF+-1%50V	NPO 1206	СС	0099.88	50.00			5 A 221 F 3	
	437 C438	CERAMIC CHIP CAP			0099.86				12-6COG 1RO C5OPT	
	C439	CERAMIC CHIP CAP	PACITOR							
		SMD CERAMIC CAPA	CITOR		0007.73				5 5A 102 FATOOJ	
	C440 443	CC 100NF+-10%50V CERAMIC CHIP CAF	PACITOR	CC	0007.52	237.00	PHILIPS_CO	2238	3 581 55649	
	C445	CC 47PF+-1%50V C CERAMIC CHIP CAP	DG 1206	cc	0099.84	196.00	MURATA	GRM4	12-6COG 470F50XPT	
-	100%	007 00:	y. Datum			Schaltteillis	in für		51	T #
-	1GPK	887 3PLU /	Date Date		`	Parts list			Sachnummer Stock No.	Blatt-Nr. Page

ED SUMMIERSCHLEIFE

SUMMING-LOOPS

1038.7196.01 SA

3+

ROHDE&SCHWARZ

	Comp. No.	Designat	lon			Stock No.	Manufacturer	De	signation	conte	lned in
	C448	CC 1NF+-1% 50V			СС	0007.7398.00	AVX	120	6 5A 102 FATOOJ		
	C449	SMD CERAMIC CAP CC 100NF+-10%50	) V	X7R 1206	СС	0007.5237.00	PHILIPS_CO	223	8 581 55649		
	C450	CERAMIC CHIP CA CC 100NF+-10%50	ג עכ	X7R 1206	СС	0007.5237.00	PHILIPS_CO	223	8 581 55649		
	C451	CERAMIC CHIP CA CC 10NF+-10%50V			СС	0099.8521.00	PHILIPS_CO	223	8 581 16627		
	C453	CERAMIC CHIP CA			cc	0007.7398.00	AVX	120	6 5A 102 FATOOJ		
	C454	SMD CERAMIC CAP CC 10NF+-10%50V				0099.8521.00					
i	C455	CERAMIC CHIP CA CC 82PF+-1%50V							42-6COG 820F50ZPT		
	C456	CERAMIC CHIP CA	PAC	CITOR					42-6CDG 8R2 C5OPT		
	C457	CERAMIC CHIP CA	PAC	CITOR		0099.8396.00			42-6COG 220F50ZPT		
	C458	CERAMIC CHIP CA	PAC	CITOR		0099.8838.00			42-6COG 121F50ZPT		
	C459	CERAMIC CHIP CA	PAC	CITOR		0099.8815.00					
	C460	CERAMIC CHIP CA	PAC	CITOR					42-6COG 680F50ZPT		
		CC 10PF+-0,25 5 CERAMIC CHIP CA	PAC	CITOR					42-6COG 100 C50PT		
	C461	CC 100NF+-10%50 CERAMIC CHIP CA	PAC	CITOR		0007.5237.00					
	C462	CC 10PF+-0,25 5 CERAMIC CHIP CA	PAC	CITOR					12-6COG 100 C50PT		
	C463	CC 100NF+-10%50 CERAMIC CHIP CA				0007.5237.00					
	C465	CC 1NF+-1% 50V SMD CERAMIC CAP							3 5A 102 FATOOJ		
	C466	CC 100NF+-10%50 CERAMIC CHIP CA			CC	0007.5237.00	PHILIPS_CO	2238	3 581 55649		
-	C468	CC 100NF+-10%50 CERAMIC CHIP CA			CC	0007.5237.00	PHILIPS_CO	2238	3 581 55649		
	C470	CC 1NF+-1% 50V SMD CERAMIC CAP			CC	0007.7398.00	AVX	1206	5 5A 102 FATOOJ		
	C471	CC 220PF+-1%50V CERAMIC CHIP CA			CC	0099.8850.00	AVX	1206	6 A 221 F 3		
	C472	CE 10UF +-10% 1 TANTALUM CHIP C	OV	6032	CE	0007.7281.00	SPRAGUE	2930	7-106X9 016 C2W		
	C478	CE 10UF +-10% 2 TANTALUM SMD-CA	5V	7343	CE	0007.7246.00	SPRAGUE	293	) 106 X9 025 D2W		
	C479	CE 10UF +-10% 2 TANTALUM SMD-CA		7343 CITOR	CE	0007.7246.00	SPRAGUE	2930	) 106 X9 O25 D2W		
	C485	CC 100NF+-10%50 CERAMIC CHIP CA			CC	0007.5237.00	PHILIPS_CO	2238	3 581 55649		
	C495	CC 2,2PF+-0,25 CERAMIC CHIP CA			CC	0007.8171.00	MURATA	GRM4	12-6COG 2R2 C5OPT		
	C498	CC 120PF+-1%50V CERAMIC CHIP CA			CC	0099.8838.00	MURATA	GRM4	12-6COG 121F50ZPT		
ı	C499	CC 100NF+-10%50 CERAMIC CHIP CA			CC	0007.5237.00	PHILIPS_CO	2238	3 581 55649		
	C545	CC 1NF+-1% 50V SMD CERAMIC CAP			СС	0007.7398.00	AVX	1206	5 5A 102 FATOOJ		
	C551	CC 100NF+-10%50 CERAMIC CHIP CA	V X	7R 1206	CC	0007.5237.00	PHILIPS_CO	2238	3 581 55649		
	C554	CC 47NF+-10%50V CERAMIC CHIP CA	X7	'R 1206	СС	0007.5195.00	AVX	1206	5 5 C 473 KA 3		
	C561	CC 10NF+-10%50V CERAMIC CHIP CA	X7	'R 1206	CC	0099.8521.00	PHILIPS_CO	2238	3 581 16627		
	C562	CC 10NF+-10%50V CERAMIC CHIP CA	X7	'R 1206	CC	0099.8521.00	PHILIPS_CO	2238	3 581 16627		
	C565	CE 10UF +-10% 1 TANTALUM CHIP C	OV	6032	ÇE	0007.7281.00	SPRAGUE	2930	)-106X9 016 C2W		
	C567	CC 100NF+-10%50 CERAMIC CHIP CA	V X	7R 1206	CC	0007.5237.00	PHILIPS_CO	2238	3 581 55649		ļ
	C570	CC 100NF+-10%50 CERAMIC CHIP CA	V X	7R 1206	СС	0007.5237.00	PHILIPS_CO	2238	3 581 55649		
	C571	CE 10UF +-10% 1 TANTALUM CHIP C	OV	6032	CE	0007.7281.00	SPRAGUE	2930	)-106X9 016 C2W		
	C573	CC 100NF+-10%50 CERAMIC CHIP CA	V X	7R 1206	СС	0007.5237.00	PHILIPS_CO	2238	3 581 55649		
	C579	CC 330PF+-1%50V CERAMIC CHIP CA	NP	0 1206	СС	0099.8873.00	AVX	1206	5 5A 331 F 3		
	C580	CE 220UF+-20%35 ELECTROLYTIC CA	V	RM5	CE	0008.7904.00	PANASONIC	ECA	1 VFG 221 B		
			•••								
ł	1GPK	887 3PLU	ÄI	Datum Date		Scheitteitil Parts lis			Sachnummer		Blatt-Nr.
	<i>f</i>	.,,,		···· · · · · · · · · · · · · · · · · ·					Stock No.		Page
	ROHDI	E&SCHWARZ	46	07.10.99		D SUMMIERSCHL	EIFE		1038.7196.01	SA	4+
					5	SUMMING-LOOPS					

wir uns alle Rechte vor.

c	
behalten	vor.
	9
1838	Rechte
Unterlage	<u>a</u>
diese	uns
ē	**

	Comp. No.	Designat	ion			Stock No.	Manufacturer	Đ	esignation	contal	ned in
	C581	CE 100UF+-20%35 ELECTROLYTIC CA		RM5		0008.7510.00	PHILIPS_CO	222	2 116 90042		
	C582	CE 220UF+-20%35	٥٧	RM5	CE	0008.7904.00	PANASONIC	ECA	1 VFG 221 B		
	C583	CE 220UF+-20%35	5V	RM5	CE	0008.7904.00	PANASONIC	ECA	1 VFG 221 B		
ı	C584	ELECTROLYTIC CA	5V R	M2.5	CE	0008.7891.00	PANASONIC	ECA	-1EFG101I		
	C589	ELECTROLYTIC CA CE 100UF+-20%16 SMD-ELECTOLYTIC	SV R	UND SMD		0009.6553.00			V100F(G)S		
	D1		EXER	O.5GHZ	BM	0207.3465.00	MINI-CIRCU	SRA	.1		
	D10	MIXER BJ PM7533GS	1X	10B-DAC		2033.1473.00	ANALOG_DEV	AD7	533KR		
	D20	D/A-CONVERTER BL PC74HC4051T				0007.3592.00	PHILIPS_SE	(PC	)74HC4051(D/T)		
	D260	8CHANNEL ANAL.N BL UPB581C IC PRESCALERDIV	2:1	PRESC	BL	0840.6113.00	NEC	(UP	)B581C		
	D270	BL UPB582C IC PRESCALER		PRESC	BL	0820.3390.00	NEC	(UP	)B582C		
	D500	BG TH3032.1C SE	RBU.	SD ASIC	BG	0008.6143.00	THESYS	тнз	032.10		
	D530	IC GATE ARRAY BL PC74HCT4094T				0007.6885.00	PHILIPS	(PC	)74HCT4094(D)		
	533 D540	8-STAGE SHIFT&S BL PC74HCT40511	8C			0007.6827.00	PHILIPS	(PC	)74HCT4051(T)		
ľ	D545	ANALOG MULTIPLE BL PC74HCT132T	4X2		BL	0007.6340.00	PHILIPS	(PC	)74HCT132(D/T)		
	D560	NAND SCHMITT TR BL PC74HCT123T	2XM		BL	0007.6333.00	PHILIPS_SE	(PC	)74HCT123(D/T)		
ı	D570	DUAL MULTIVIBRA BL PC74HCT132T NAND SCHMITT TR	4X2			0007.6340.00			)74HCT132(D/T)		
ı	L6				LD	0007.9926.00	SIEMENS	B82	422-A3471-J(K)100		
۱	L18	RF CHOKE LD 10UH 10%	0,18	BA 1210		0007.9255.00			422-A1103-J(K)100		
	L20	RF CHOKE LD 820NH 5% OR8				0355.9890.00			5-18		
	L21	HIGH FREQUENCY LD 1UH 10% 1,00	CHO	(E	LD	0067.2863.00		IM2			
	L22	CHOKE LD 1,5UH 5% OR2				0067.3247.00			5-24		
	L26	CHOKE LD 2,7UH 10%0,5			LD			IM2			
	L90	CHOKE				6006.0130.00			422-A1102-J(K)100		
	L91	RF CHOKE				0007.9255.00			422-A1103-J(K)100		
	L 100	RF CHOKE LD 100NH 10% 0,	-		İ	0067.2740.00		IM2	// / / / / / / / / / / / / / / / /		
l	L102	CHOKE LD 100NH10%OR21		·		0691.0733.00			3 1012200		
۱	L103	CERAMIC CHIP CO LD 100NH10%OR21	)IL			0691.0733.00					
	L 105	CERAMIC CHIP CO LD 100NH10%OR21	IL			0691.0733.00			3 1012200 3 1012200		
	L109	CERAMIC CHIP CO	IL	7A 1210	ın	0520.7870.00					
	L120	RF CHOKE LD 100NH 10% 0,				0067.2740.00			422-A 1222-J(K) 100		
	L120	CHOKE		·	""		_	IM2	2 1010000		
		LD 100NH10%OR21	IL			0691.0733.00			3 1012200		
	L123	LD 100NH10%OR21 CERAMIC CHIP CO	IL			0691.0733.00			3 1012200		
	L125	LD 100NH10%0R21 CERAMIC CHIP CO	IL			0691.0733.00			3 1012200		
	L140	RF CHOKE	0,44	4A 1210	LD	0007.9249.00	SIEMENS	B82	422-A3101-J(K)100		
	L160 L161	LL LUFTSPULE LL LUFTSPULE				1038.7338.00					
	L179	RF CHOKE			LD	6006.0130.00	SIEMENS	B82	422-A1102-J(K)100		
	L250	LD 1UH 10% RF CHOKE	0,38	BA 1210	LD	6006.0130.00	SIEMENS	B82	422-A1102-J(K)100		
	L251	LD 2,2UH 10% RF CHOKE	0,2	7A 1210	LD	0520.7870.00	SIEMENS	B82	422-A1222-J(K)100		
	100:	000 000	, I	Datum		Schaltteilli	ste für	Sachnummer		Blatt-Nr.	
-	1GPK	887 3PLU	Äl	Date	<u> </u>	Parts lis			Stock No.		Page
		1	- 1		ı			i			

ED SUMMIERSCHLEIFE

SUMMING-LOOPS

1038.7196.01 SA

ROHDE&SCHWARZ

ED SUMMIERSCHLEIFE

SUMMING-LOOPS

1038.7196.01 SA

6+

95.0026-0693

ROHDE&SCHWARZ

pehalten	VOT.
#3	20
Untarlage	Rechte
0	•
5	ŧ
diese	SES
õ	-
2	×

95.0026-0893

	Comp. No.	Designati	on			Stock No.	Manufacturer	De	esignation	conta	inad in
1	MP9	VL EINPRESSSTIF	Т :	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	MP21	PIN VL EINPRESSSTIF PIN	Т !	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	МРЗО	VL EINPRESSSTIF	Т :	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	MP32	VL EINPRESSSTIF	Т!	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	37 MP40	PIN VL EINPRESSSTIF	Т !	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	MP41	PIN VL EINPRESSSTIF PIN	T S	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	MP55	VL EINPRESSSTIF	T S	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	MP56	VL EINPRESSSTIF	Т :	5,6	VL (	0010.7250.00	AMP	1-9	28776-5	:	
	MP67	VL EINPRESSSTIF	T	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	MP80	VL EINPRESSSTIF PIN	T 5	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	N10	BO NE5534D		OPAMP		0815.7555.00	SIGNETICS	NE5	534(D)		
	N15		2XL	N OPAMP	(	0007.7798.00	SIGNETICS	NE5	532D .		
	N17		PRE	IFIER C OPAMP		1036.4390.00	PMI	0P9	7F(S)		
ı	N3O	LOW POWER OPAMP BO AD846BN CF		OPAMP	(	0007.9855.00	ANALOG_DEV	AD8	46BN		
İ	N140	CURRENT-FEEDBAC BM MSAO386 DC-2			(	0848.4461.00	AVANTEK	MSA	0386		
	N250	BROADBAND AMPLI BM MSAO486 DC-3	. 20	MMIC		0846.4293.00	AVANTEK	MSA	-0486		
	N260	BROADBAND AMPLI BM MSAO386 DC-2	. 40	MMIC		0848.4461.00	AVANTEK	MSA	0386		
	N270	BROADBAND AMPLI BM MSAO386 DC-2	.40	MMIC		0848.4461.00	AVANTEK	MSA	0386		
١	N280	BROADBAND AMPLI BM MSAO486 DC-3	. 20	MMIC		0846.4293.00	AVANTEK	MSA	-0486		
ı	N290	BROADBAND AMPLI BM MSAO486 DC-3	. 20	MMIC		0846.4293.00	AVANTEK	MSA	-0486		
	N430	BROADBAND AMPLI BM MSAO486 DC-3	. 20	MMIC		0846.4293.00	AVANTEK	MSA	-0486		
	N435	BROADBAND AMPLI BM MSAO386 DC-2	.40	MMIC	(	0848.4461.00	AVANTEK	MSA	0386		
ı	N438	BROADBAND AMPLI BM MSAO386 DC-2	.40	S MMIC	(	0848.4461.00	AVANTEK	MSA	0386		
	N470	BROADBAND AMPLI BO NE5534D		OPAMP	(	0815.7555.00	SIGNETICS	NE5	534(D)		
l	N550	OPERATIONAL AMP BO LM2903D 2X DUAL		COMPAR		0520.7734.00	SIGNETICS	LM2	903(D)		
	P9	VL EINPRESSSTIF	Т 5	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
ļ	P30	PIN VL_EINPRESSSTIF	T E	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		l
	P32	PIN VL_EINPRESSSTIF	т 5	5,6	VL C	0010.7250.00	AMP	1-9	28776-5		
	P33	PIN VL EINPRESSSTIF	Т 5	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	P40	PIN VL EINPRESSSTIF	T 5	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	P55	PIN VL EINPRESSSTIF	T 5	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		l
ĺ	58 P70	PIN VL EINPRESSSTIF	Т 5	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	P80	PIN VL EINPRESSSTIF PIN	T 5	5,6	VL (	0010.7250.00	AMP	1-9	28776-5		
	R1	RG 100 OHM+-1%T	K 10	00 1206	RG (	0006.8884.00	ROEDERSTEI	D25			
	R3	CHIP RESISTOR RG 332 OHM+-1%T	K 10	00 1206	RG (	0007.5650.00	DRALORIC	CR	1206		
	R4	RESISTOR CHIP RG 12,1KOHM+-1%	TK	100 1206	RG (	0007.0841.00	ROEDERSTEI	D25			
	R5	CHIP RESISTOR RG 825 OHM+-1%T	K10	00 1206	RG (	0006.7259.00	ROEDERSTEI	D25			ŀ
		CHIP RESISTOR									
İ	1GPK	887 3PLU	Äi	Datum Date		Schaltteilli Parts IIs			Sachnummer Stock No.	<b>.</b>	Blatt-Nr. Page
1	·			70.0	<del> </del>	1 4113 113	- 171		310CA 110.		. 480

1GPK	887	3PLU	ÄI	Datum Date	Schalttellliste für Perts list for	Sachnummer Stock No.	Blatt-Nr. Page
POHDE	e schn	/AD7	46	07.10.99	ED SUMMIERSCHLEIFE	1038.7196.01 SA	7+
ROHDE&SCHWARZ				SUMMING-LOOPS			

ED SUMMIERSCHLEIFE

SUMMING-LOOPS

46 07.10.99

1038.7196.01 SA

8+

š

alle

ROHDE&SCHWARZ

wir uns alse Rechte vor.	
<u> </u>	

Für diese Unterlage behalten

	Comp. No.	Designation	n			Stock No.	Manufacturer	De	esignation	contai	ned in
	R49	RG 150 KOHM+-1%T	K 100	1206	RG	0007.5972.0	PHILIPS_CO	RCO	2		
	R50	RESISTOR CHIP RG 562 OHM+-1%TK	100	1206	RG	0006.9068.0	ROEDERSTEI	D25			
ı	R51	CHIP RESISTOR RG 68,1 OHM+-1%T	K 100	1206	RG	0006.8849.0	ROEDERSTEI	D25			
	R52	CHIP RESISTOR RG 1KO +-1% TK	100	1206	RG	0006.7271.0	ROEDERSTEI	D25			
	R53	CHIP RESISTOR RG 33,2KOHM+-1%T	K 100	1206	RG	0007.5914.0	PHILIPS_CO	RCO	2		
1	R54	RESISTOR CHIP RG 2,21KOHM+-1%T	K 100	1206	RG	0007.5743.0	ROEDERSTEI	D25			
	R55	RESISTOR CHIP RG 16,2KOHM+-1%T	K 100	1206	RG	0007.0870.0	DRALORIC	CR	1206		
	R56		100	1206	RG	0006.7271.0	ROEDERSTEI	D25			4
	R57	CHIP RESISTOR RG 1KO +-1% TK	.100	1206	RG	0006.7271.0	ROEDERSTEI	D25			
	R58	CHIP RESISTOR RG 100,0KOH+-1%T	K 100	1206	RG	0007.1948.0	ROEDERSTEI	D25			
	R59	CHIP RESISTOR RG 100,0KOH+-1%T	K 100	1206	RG	0007.1948.0	ROEDERSTEI	D25			
	R60	CHIP RESISTOR RG 5,62KOHM+-1%T	K 100	1206	RG	0007.0735.0	PHILIPS_CO	RCO	2		
	R61	CHIP RESISTOR RG 3,32KOHM+-1%T	K 100	1206	RG	0007.5789.0	PHILIPS_CO	RCO	2		
ŀ	R62	RESISTOR CHIP RG 1,82KOHM+-1%T	K 100	1206		0007.5720.0					
	R63	RESISTOR CHIP RG 909 OHM+-1%TK	.100	1206		0006.7265.0					
	R64	CHIP RESISTOR RG 562 OHM+-1%TK	.100	1206	RG	0006.9068.0	ROEDERSTEI	D25			
	R65	CHIP RESISTOR RG 432 OHM+-1%TK	100	1206	RG	0007.5689.0	PHILIPS_CO	RCO	2		
ı	R66	RESISTOR CHIP RG 274 OHM+-1%TK	100	1206	RG	0007.5637.0	ROEDERSTEI	D25			
١	R67	RESISTOR CHIP RG 182 OHM+-1%TK	100	1206	RG	0007.5595.00	PHILIPS_CO	RCO	2		
	R68	RESISTOR CHIP RG 1KO +-1% TK	100	1206	RG	0006.7271.0	ROEDERSTEI	D25			
	R70	CHIP RESISTOR RG 22,1 OHM+-1%T	K 100	1206	RG	0007.5489.0	ROEDERSTEI	D25			
	R71	RESISTOR CHIP RG 100 OHM+-1%TK	100	1206	RG	0006.8884.0	ROEDERSTEI	D25			
?	R72	CHIP RESISTOR RG 10,OKOHM+-1%T		1206	RG	0007.0793.0	ROEDERSTEI	D25			
	R73	RG CHIP RESISTOR RG 100 DHM+-1%TK		1206	RG	0006.8884.0	ROEDERSTEI	D25			
	R75	CHIP RESISTOR RG 825 OHM+-1%TK	.100	1206	RG	0006.7259.00	ROEDERSTEI	D25			
	R76	CHIP RESISTOR RG 121 OHM+-1%TK	100	1206	RG	0006.8903.0	PHILIPS_CO	RCO	2		
	R77	CHIP RESISTOR RG 10.0 OHM+-1%T	K 100	1206	RG	0006.8649.0	DRALORIC	CR	1206		ĺ
	R78	CHIP -RESISTOR RG 10,0K0HM+-1%T		1206	RG	0007.0793.0	ROEDERSTEI	D25			
	R79		100	1206	RG	0006.7271.0	ROEDERSTEI	D25			
	R80	CHIP RESISTOR RG 8,25KOHM+-1%T	K 100	1206	RG	0007.0770.0	PHILIPS_CO	RCO	2		
	R81		100	1206	RG	0006.7271.0	ROEDERSTEI	D25			
	R82	CHIP RESISTOR RG 3,32KOHM+-1%T	K 100	1206	RG	0007.5789.0	PHILIPS_CO	RCO	2		
	R83 .	RESISTOR CHIP RG 8,25KOHM+-1%T	K 100	1206	RG	0007.0770.0	PHILIPS_CO	RCO	2		
	R84		100	1206	RG	0006.7271.0	ROEDERSTEI	D25	***************************************		
	R86	CHIP RESISTOR RG 100 OHM+-1%TK	100	1206	RG	0006.8884.0	ROEDERSTEI	D25			
	R89	CHIP RESISTOR RG 150 OHM+-1%TK	100	1206	RG	0007.5589.0	PHILIPS_CO	RCO	2		
	R90	RESISTOR CHIP RG 18,2KOH+-O,1%	TK25	1206		0009.7637.0	PHILIPS_CD	MPC	01		
	R91	SMD-RESISTOR RG 10,0KOH+-0,1%	TK25	1206		0009.7666.0	PHILIPS_CO	MPC	01		
١	R92	SMD-RESISTOR RG 10,0KOH+-0,1%	TK25	1206		0009.7666.0	PHILIPS_CO	MPC	01		
		SMD-RESISTOR									
ł	1GPK	887 3PLU /	Äl	Detum			illiste für		Sachnummer		Blatt-Nr.
,	IGPN	007 07 0	-	Date		Parts	list for	······································	Stock No.		Page

1038.7196.01 SA ROHDE&SCHWARZ 46 07.10.99 ED SUMMIERSCHLEIFE SUMMING-LOOPS

SUMMING-LOOPS

	Comp. No.	Designation		Stock No.	Manufacturer	Designation	contained in
	R143	RG 100 OHM+-1%TK100 CHIP RESISTOR	1206	RG 0006.8884.00	ROEDERSTEI	D25	
	R144	RG 4K75 +-1% TK100	1206	RG 0007.5820.00	PHILIPS_CO	RCO2	
I	R160	RESISTOR CHIP RG 0,05W 51R1 +-1%	0805	0007.9132.00	HONEST_JAP	RN 73 C(E)2XF (1%)	
	R179	RESISTOR RG 100 OHM+-1%TK100	1206	RG 0006.8884.00	ROEDERSTEI	D25	
1	R210	CHIP RESISTOR RG 221 OHM+-1%TK100	1206	RG 0007.5614.00	DRALORIC	CR 1206	
1	R211	RESISTOR CHIP RG 4,750HM+-1%TK100	1206	RG 0007.8420.00	PHILIPS	RC 02	
1	R212		1206	RG 0006.8884.00	ROEDERSTEI	D25	
	R236	CHIP RESISTOR RG 47,5 OHM+-1%TK100	1206	RG 0007.5566.00	ROEDERSTEI	D25	
	R237	RESISTOR CHIP RG 562 OHM+-1%TK100	1206	RG 0006.9068.00	ROEDERSTEI	D25	
	R238	CHIP RESISTOR RG 8,250HM+-1%TK100	1206	RG 0007.8488.00	PHILIPS	RC 02	
Ì	R239	CHIP-RESISTOR RG 562 OHM+-1%TK100	1206	RG 0006.9068.00	ROEDERSTEI	D25	
	R245	CHIP RESISTOR RG 16,2 OHM+-1%TK100	1206	RG 0006.8690.00	PHILIPS_CO	RCO2	
	R247	CHIP RESISTOR RG 16,2 OHM+-1%TK100	1206	RG 0006.8690.00	PHILIPS_CO	RCO2	
	R248	CHIP RESISTOR RG 16,2 OHM+-1%TK100	1206	RG 0006.8690.00	PHILIPS_CO	RCO2	
	R250	CHIP RESISTOR RG 47,5 OHM+-1%TK100	1206	RG 0007.5566.00	ROEDERSTEI	D25	
	R251	RESISTOR CHIP RG 33,2 OHM+-1%TK100	1206	RG 0007.5520.00	ROEDERSTEI	D25	
Ì	R252	RESISTOR CHIP RG 162 DHM+-1%TK100 CHIP RESISTOR	1206	RG 0006.8932.00	PHILIPS_CO	RCO2	
l	R253	RG 162 OHM+-1%TK100 CHIP RESISTOR	1206	RG 0006.8932.00	PHILIPS_CO	RCO2	
	R256	RG 121 OHM+-1%TK100 CHIP RESISTOR	1206	RG 0006.8903.00	PHILIPS_CO	RCO2	
	R260	RG 68,1 OHM+-1%TK100 CHIP RESISTOR	1206	RG 0006.8849.00	ROEDERSTEI	D25	
	R268	RG 221 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5614.00	DRALORIC	CR 1206	
	R269	RG 221 DHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5614.00	DRALORIC	CR 1206	
2	R271		1206	RG 0007.5614.00	DRALORIC	CR 1206	
	R275	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00	ROEDERSTEI	D25	
	R276	RG 562 OHM+-1%TK100 CHIP RESISTOR	1206	RG 0006.9068.00	ROEDERSTEI	D25	
	R277	RG 221 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5614.00	DRALORIC	CR 1206	
Ì	R278 280	RG 47,5 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5566.00	ROEDERSTEI	D25	
Ì	R281	RG 301 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5643.00	PHILIPS_CO	RCO2	
	R282	RG 15,0 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5450.00	PHILIPS_CO	RCO2	
	R283	RG 301 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5643.00	PHILIPS_CO	RCO2	
	R284	RG 1KO +-1% TK100 CHIP RESISTOR	1206	RG 0006.7271.00	ROEDERSTEI	D25	
	R285	RG 100 0HM+-1%TK100 CHIP RESISTOR	1206	RG 0006.8884.00	ROEDERSTEI	D25	
1	R286	RG 4K75 +-1% TK100 RESISTOR CHIP	1206	RG 0007.5820.00	PHILIPS_CO	RCO2	
1	R287	RG 221 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5614.00	DRALORIC	CR 1206	
	R288	RG 22,1 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5489.00	ROEDERSTEI	D25	
	R289	RG 221 DHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5614.00	DRALORIC	CR 1206	
ı	R290	RG 1,82KOHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5720.00	PHILIPS_CO	RCO2	
١	R291	RG 150 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5589.00	PHILIPS_CO	RCO2	
ı	R292	RG 221 OHM+-1%TK100 RESISTOR CHIP	1206	RG 0007.5614.00	DRALORIC	CR 1206	
	1GPK		)atum Date	Schalttelii Parts lis		Sachnummer Stock No.	Blatt-Nr. Page

95.0026-0693

Für diese Unterlage behalten wir uns alle Rechte vor.

1GPK	887	3PLU	Äl	Datum Date	Schattellliste für Parts list for	Sachnummer Stock No.	Blatt-Nr. Page
ROHDE	&SCHW	ARZ	46	07.10.99	ED SUMMIERSCHLEIFE SUMMING-LOOPS	1038.7196.01 SA	11+

46 07.10.99

ED SUMMIERSCHLEIFE

SUMMING-LOOPS

Manufacturer

Designation

contained in

Blatt-Nr.

Page

12+

1038.7196.01 SA

Comp. No.

Designation

ROHDE&SCHWARZ

ē	
behalten	Š
Unterlage bi	Rachte
5	a!le
diese	ans
2	wir

٦	Comp. No.	Designation	חס			Stock No.	Manufacturer	Desig	nation	conta	ined In
-	R439	RG 150 OHM+-1%T	K 100	1206	RG	0007.5589.00	PHILIPS_CO				
	R440	RESISTOR CHIP RS 0,25W5OKOHM POTENTIOMETER	+-20%	SMD	RS	0007.9661.00	BI_TECHNOL	23 B	R TR		
١	R441	RG 68,1 OHM+-1% CHIP RESISTOR	TK 100	1206	RG	0006.8849.00	ROEDERSTEI	D25			
-	R442	RG 100 OHM+-1%TI	K 100	1206	RG	0006.8884.00	ROEDERSTEI	D25			
	R443		K 100	1206	RG	0006.7271.00	ROEDERSTEI	D25			
ı	R444	RG 4K75 +-1% TI RESISTOR CHIP	K 100	1206	RG	0007.5820.00	PHILIPS_CO	RCO2			
ı	R448	RG 100,0KOH+-1% CHIP RESISTOR	TK 100	1206	RG	0007.1948.00	ROEDERSTEI	D25			
	R451	RG 475 OHM+-1%TI RESISTOR CHIP	K 100	1206	RG	0007.5695.00	ROEDERSTEI	D25			
	R453	RG 392 OHM+-1%TI RESISTOR CHIP	K100	1206	RG	0007.5672.00	DRALORIC	CR 12	06		
	R454	RG 2,21KOHM+-1% RESISTOR CHIP	TK 100	1206	RG	0007.5743.00	ROEDERSTEI	D25			
	R455	RG 3,92KOHM+-1% RESISTOR CHIP	TK 100	1206	RG	0007.5808.00	ROEDERSTEI	D25			
	R456	RG 475 KOHM+-1% RESISTOR CHIP	TK 100	1206	RG	0007.6079.00	PHILIPS_CO	RCO2			
	R457	RG 1,OMOHM+-1%TH	K 100	1206	RG	0815.7532.00	DRALORIC	CRC 1	206		
	R458	RG 4K75 +-1% TI RESISTOR CHIP	K 100	1206	RG	0007.5820.00	PHILIPS_CO	RCO2			
	R459	_	K100	1206	RG	0006.7271.00	ROEDERSTEI	D25			
	R460	RG 2,740HM+-1%TH CHIP-RESISTOR	K100	1206	RG	0007.8365.00	PHILIPS	RC 02	*		
	R465		K 100	1206	RG	0006.7271.00	ROEDERSTEI	D25			
	R467	RG 392 OHM+-1%TH RESISTOR CHIP	<b>&lt; 100</b>	1206	RG	0007.5672.00	DRALORIC	CR 12	06		
	R468	RG 10,0 OHM+-1% CHIP -RESISTOR			RG	0006.8649.00	DRALORIC	CR 12	06		
	R469	RG 10,0 OHM+-1% CHIP -RESISTOR			RG	0006.8649.00	DRALORIC	CR 12	06		
	R471	RG 475 OHM+-1%TH RESISTOR CHIP		1206	RG	0007.5695.00	ROEDERSTEI	D25			
	R472	RG 274 OHM+-1%TH RESISTOR CHIP		1206	RG	0007.5637.00	ROEDERSTEI	D25	PRINCESSA		
	R473	RG 100 OHM+-1%TH CHIP RESISTOR		1206		0006.8884.00		_			
I	R474	RG 8,25KOHM+-1% CHIP RESISTOR	TK 100			0007.0770.00					
	R475	RG 182 OHM+-1%TE RESISTOR CHIP		1206	RG	0007.5595.00	PHILIPS_CO	RCO2			
	R476	RS 0,25W2OKOHM - POTENTIOMETER		SMD	RS	0007.9655.00	BI_TECHNOL	23 B	R TR		
	R477 479	RG 100 OHM+-1%TH CHIP RESISTOR		1206		0006.8884.00					
	R480	RG 825 OHM+-1%TE CHIP RESISTOR		1206		0006.7259.00					
	R481	RG 681 OHM+-1%TF CHIP RESISTOR	<b>(100</b>	1206		0006.9080.00					
	R482	RG 221 OHM+-1%TE RESISTOR CHIP	(100	1206		0007.5614.00		CR 12	06		
	R483	RG 22,1 OHM+-1% RESISTOR CHIP	FK 100	1206		0007.5489.00					
	R485	CHIP RESISTOR	(100	1206		0006.7271.00					
	R486	RG 221 OHM+-1%TE RESISTOR CHIP		1206		0007.5614.00		CR 12	06		
	R499	RG 2,74KOHM+-1% RESISTOR CHIP	TK 100	1206		0007.5766.00		CR 12	06		
ŀ	R500	RG 10,0K0HM+-1% RG CHIP RESISTOR		1206		0007.0793.00					
Į	R501	RG 10,0KOHM+-1% RG CHIP RESISTOR		1206	l	0007.0793.00					
	R502	RG 10,0KOHM+-1% RG CHIP RESISTOR	₹		RG	0007.0793.00	ROEDERSTEI	D25			
	R503	NICHT BESTUECKT, RG 10,0KOHM+-1%	TK 100		RG	0007.0793.00	ROEDERSTEI	D25			
	v de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de la companya de l	RG CHIP RESISTO	<b>R</b>								
	1GPK	887 3PLU		Datum Date		Schaltteill Parts lis			Sachnummer Stock No.		Blatt-Nr.
١				~a:6	-	rarts IIS	101		Stock No.		Page

46 07.10.99

SUMMING-LOOPS

contained in

ROHDE&SCHWARZ

Rechte

uns alle

Stock No.

Manufacturer

RG 0006.8884.00 ROEDERSTEI D25

Designation

contained in

behalten

Unterlage

diese

Ę

wir uns alle Rechte

Camp. No.

R565

Designation

1206

46 07.10.99

SUMMING-LOOPS

RG 100 OHM+-1%TK100

95.0026-0693

**ROHDE&SCHWARZ** 

1038.7196.01 SA ED SUMMIERSCHLEIFE

15+

contained in

Designation

Manufacturer

_
E
~=
ю
**
٧,
c
Sun
•
₹
-
,

ARRO

	Comp. No.	Designation	Stock No.	Manufacturer De	signation contai	nea in
	X15C	VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-92	28776-5	
	X16A	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-92	28776-5	
	X16B	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9:	28776-5	
	X20A	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-92	28776-5	
	Х20В	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-92	28776-5	
	X20C	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-93	28776-5	
	X20D	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-92	28776-5	
	AOEX	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-92	28776-5	
	хзов	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9:	28776-5	
	X47A	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9:	28776-5	
	X47B	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9:	28776-5	
	X47C	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9:	28776-5	1
	X47D	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9:	28776-5 `	
	X50A	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-92	28776-5	
1	X50B	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-92	28776-5	
	X50C	PIN VL EINPRESSSTIFT 5,6	VL 0010.7250.00	AMP 1-9:	28776-5	
	X50D	PIN VL EINPRESSSTIFT 5,6 PIN	VL 0010.7250.00	AMP 1-9:	28776-5	
	Z90	LD T-FILTER 3,3NF SMD	1039.1362.00	MIRATA NEM	61R20T332T1	
Ę	Z405	SMD-FILTER LD T-FILTER 3,3NF SMD	1039.1362.00		61R20T332T1	
ehalte vor.	Z520	SMD-FILTER LD T-FILTER 100PF SMD	1039.1356.00		61R00T101T1	
age b	524 Z580	SMD-FILTER LD T-FILTER 3,3NF SMD	1039.1362.00		51R20T332T1	
für diese Unterlage behalten wir uns alle Rechte vor.	584	SMD-FILTER S,SMI	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	MOTO TO THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE OF THE STATE	J. M. E. G. G. G. G. G. G. G. G. G. G. G. G. G.	
diese ir uns						
FÜ.				The state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the s		
				ре _н ер		
			The state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the s			
			and the second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second second s			
			The state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the s			
	1GPK	887 3PLU ÄI Datum	Schalttei Parts I		Sechnummer Stock No.	Blatt-Nr. Pags
<u>ب</u> ق						

95.0026-0693

ROHDE&SCHWARZ

46 07.10.99

ED SUMMIERSCHLEIFE SUMMING-LOOPS

1038.7196.01 SA

17-

ů.			



## XY-Liste

## **XY List**

## Erklärung der Spaltenbezeichnungen:

el. Kennz. Bauelement-Kennzeichen

Seite Leiterplatten-Seite, auf der sich das

**Bauelement befindet** 

X/Y Koordinaten (in Millimeter) des Bauelementes auf der

Leiterplatte bezogen auf den Nullpunkt

Planq., Bl. Planquadrat und Seite des Schaltbildes

für das jeweilige Bauelement

## Explanation of column designations:

Part Identification of instrument part

Side Side of the PC board on which instrument part is

positioned

X/Y Coordinates (in units of millimeters) of the component

on the PC board in reference to zero point

Sqr, Pg Square and page of the diagram for

the respective instrument part

÷		

		Sei	cvice	e-Rei	leva	nte Bau	ıteil	e /	Serv	/ice-	-Rele	evant (	Compo	nen	8.		
Part	Side	X	Y	Sqr	Pg	Part	Side	×	Y	Sqr	Pg	Part	Side	x	Y	Sqr	Pg
 L403	В	218	32	4E	5	R440	В	179	109	5C	5	X50D	В	77	128	11C	2
MP9	В	297	50	4C	2	R476	В	248	111	10C	5	X90A	В	189	11	1C	6
MP30	В	240	127	7C	2	T405	В	218	49	4E	5	X90C	В	189	11	1D	6
MP32	В	146	126	11C	2	X15A	В	166	135	9E	2	X91	В	17	15	12D	4
MP33	В	157	124	9F	2	X15B	В	163	135	9E	2	X97	В	271	15	1E	5
MP35	В	15	97	8C	3	X15C	В	166	137	9E	2	X99	В	296	15	2B	2
MP36	В	86	102	8E	3	X20A	В	240	122	7B	2	Z90	В	277	46	2C	2
MP37	В	232	29	3E	5	X20B	В	237	122	7B	2	Z405	В	204	25	2D	5
MP40	В	150	70	9B	6	X20C	В	237	124	7B	2	2520	В	197	37	4D	6
MP41	В	166	109	5C	5	X20D	В	240	124	7B	2	Z521	В	146	37	4D	6
MP55	В	138	51	5A	6	X30A	В	108	138	88	2	Z522	В	192	37	4C	6
MP56	В	150	53	9E	6	хзов	В	108	141	8B	2	<b>Z523</b>	В	141	37	4C	6
MP57	В	138	81	11F	6	X47A	В	242	94	12C	5	Z524	В	136	37	4B	6
MP58	В	143	81	10D	6	X47B	В	242	91	12C	5	Z580	В	202	37	4F	6
MP68	В	266	113	10E	5	X47C	В	239	91	12C	5	Z581	В	131	37	<b>4</b> F	6
MP70	В	192	138	3F	2	X47D	В	239	94	12C	5	2582	В	126	37	4E	6
MP80	В	178	139	12D	2	X50A	В	80	125	11C	2	Z583	В	93	33	4E	6
P30	В	237	127	7C	2	X50B	В	77	125	11C	2	Z584	В	93	28	4A	6
R405	В	234	32	4E	5	X50C	В	80	128	11C	2						

ROHDE	-I	Datum Date	XY-Liste frr XY-list for	Sach-Nummer Stock-Nr	Blatt Page
& schwarz	07	07.04.94	EE SUMMIERSCHLEIFE SUMMING-LOOPS	1038.7196.01 XY	1+



Nicht-Service-Relevante Bauteile / Non-Service-Relevant Components																	
Part	Sid	e X	Y	Sqr	Pg	Part	Side	x	Y	Sqr	Pg	Part	Side	x 	Y	Sqı	Pg
C1	В	291	26	2B	2	C140	В	37	113	10D	3	C420	в 2	17	69	5 E	5
C3	В	285	41	3B	2	C141	В	48	96	10D	3	C421	B 2		69	5 E	
C4	В	300			2	C142	В	38	92	10C	3	C422	A 2		83	6E	
C5	В	292	46		2	C143	В	57	82	11D	3	C429	B 1		96	3E	
C6	В	296 193	60	4B 8E	2 2	C144 C210	B	27 74	96 74	11C 2A	3 4	C430 C431		76 .06	82 96	2E 3E	
C10		204		3D	2	C236	A	33	14	11D	4	C431	B 1		96	3E	
C11				7E	2	C250	A	61	82	3E	4	C433	B 1		96	31	
C12		190			2	C251	В	51	72	3D	4	C434	в 1		96	4E	3 5
C15	A	166	124	9E	2	C255	В	69	72	2D	4	C435	в 1	64	96	5 E	3 5
C18		168			2	C257	A	28	82	4E	4	C436	В 1		96	6E	
C19	A	181			2	C259	В	34	47	7D	4	C437		97	96	6E	
C20	В		139	7B	2	C260	В	29	64	4D	4	C438		04	96	7E	
C21	В			7B 6B	2 2	C261 C263	B B	23 45	51 47	6D 8D	4 4	C439 C440			109	6 <i>I</i>	
C23		279 273			2	C264	A	31	30	7D	4	C441	A 1		102	20	
C24		258			2	C265	В	23	64	5D	4	C442			107	40	
C25		264			2	C266	A	24	64	6D	4	C443			106	5 E	
C26	В	248	126	7B	2	C268	A	39	48	8D	4	C445	A 2	47	93	111	5
C27	A	137			2	C269	A	15	70	4E	4	C448	в 2		70	8E	
C28	В				2	C271	A	32	65	4B	4	C449	В 2		72	71	
C30	В		135		2	C272	В	41	69	4C	4	C450	A 2		75	7E	
C31	В	123	129		2 2	C273	B B	54 67	61 55	5C 6C	4	C451 C453	B 2 B 2		67 80	8E 7E	
C34	В		124		2	C274	В	84	52	7C	4	C453	B 2		67	9E	
C39	В	129			2	C276	A	77	62	7B	4	C455	B 2		74	9E	
C50	В	82			2	C277	A	62	40	8B	4	C456		69	80	91	
C51	В	90	131	10B	2	C279	A	54	51	5B	4	C457	В 2		95	101	5
C52	В	90	125	10C	2	C280	В	63	35	9D	4	C458	в 2	75	89	10E	5
C70	В	283			2	C281	A	41	26	10D	4	C459		67		10E	
C71	В		137		2	C282	B	50	13	10D	4	C460		52		101	
C72 C73	B B		138 133		2 2	C283 C284	B B	20 24	22	11C 11C	4 4	C461 C462	B 2 B 2		81 77	10E 9E	
C80				12D	2	C285	В	65	30	9D	4	C462	B 2			101	
C90				11D	2	C286	В	67	44		4	C465	A 2		85	7E	
C91				11C	2	C287	В	68	13	9D	4	C466	B 2		85	7E	
C100	В	57	135	2E	3	C288	В	26	51	6D	4	C468	в 2	68	60	9E	5
C101	В		119		3	C289	В	67	57	6C	4	C470	B 2		92	8E	
C104	В		111		3	C290	В	24	21	11D	4	C471			100		
C105	В		110		3	C291	В	41	22	10D	4	C472			103		
C106	B B		103 102		3 3	C292 C294	A A	43 57	65 63	5B 6C	4 4	C478 C479			100 102		
C108	В		107		3	C295	A	50	60	5A	4	C485	B 2		83	90	
C119	В	68			3	C400		271	23	1E	5	C495	B 2			10E	
C120	В		130		3	C401		239		2F	5	C498	B 2		20	40	
C121	В		125		3	C402		252	48	1F	5	C499	В 2		17	3E	
C122	В		127		3	C403		236	48	2F	5	C545	A 1		72	81	
C123	В		110		3	C404		251	22	2E	5	C551	A 1			11E	
C124	В		116		3	C405		232	22 41	3E	5	C554	A 1		72	80	
C125	B B		115 108		3 3	C406 C407		252 218		1F 4E	5 5	C561 C562	A 1 A 1		57 63	9E 9E	
C126			100			C407		218			5	C565	B 1			110	
C128			95			C409		214				C567				110	
<u>+</u>	+-		+									+				+-	
	- 1	-I	1	Datu						te f		Sach-		r		1	latt
ROHD:	E		 	Date		 h=====		XY·	-lis	c f	or	Stoc	t−Nr			F	age
SCHWA	RZ			~ ~ ~ · · · · · · · · · ·		EE SU	MMIEF	RSCH	LEIF	E		, <b></b> 					
			07	07.0	4.94		MMING					1038	7196.	01	XY		2+
<del></del>	<del>-</del> -		<del>+</del>			+						+				<del>-</del> -	



Part Si			Y	Sqr		Part S			Y			Part S		x	Y	Sqr	Pg
C570		187	61	9D	6	L120	В		131	2B	3	N17		227			
C571	В	134	68	9C	6	L122	В		124	3B	3	N30	_	121		7C	
C573	В	93		11D	6	L123	В	23	114	4B	3	N140	В	41	105	10D	
C579		150	76	9B	6	L125	В		111	5B	3	N250	В	63 26	72 44	2D 6D	
C580		191	29	4F	6	L140	В	45 55	97 125	10D 2C	3	N260 N270	B B	73	55	6C	-
C581 C582		134 119	34 32	4F 4E	6	L160 L161	B B	29	130	2D	3	N270	В	65	13	9 D	
C583		119	21	4E	6	L179	В	57	31	8B	4	N290	В	38	22	10D	
C584	В	98	25	4A	6	L250	В	55	76	3D	4	N430	В	94	96	2B	
C589		134	19	3E	6	L251	A	70	79	3E	4	N435	В	134	96	4B	
D1		289		5B	2	L256	В	19	79	4E	4	N438	В	186	96	6B	
D10-A		197		6E	2	L260	В	34	41	7D	4	N470	В	248	102	110	5
D10-B	_			3D	2	L261	A	37	30	7E	4	N550-2	A В	157	66	70	6
D20-A	В	131	135	4F	2	L262	A	45	30	7E	4	N550-1	3			70	6
D20-B				2D	2	L263	В	46	53	8C	4	N550-0				11E	6
D260	В	28	61	5D	4	L264	В	86	41	7B	4	KP1	В	17	20	11D	4
D270	В	57	60	5C	4	L268	В	41	41	8D	4	KP2	В	<b>17</b>	22	11D	4
D500-A	В	160	26	2D	6	L269	В	26	67	4D	4	KP3	В	20	27	110	
D500-B				2C	6	L271	В	38	65	4B	4	KP4	В	42	88	10D	
D530-A	В	106	70	6E	6	L272	В	48	65	5B	4	KP5	В	209	96	7B	
D530-B				10D	6	L277	В	60	41	8B	4	P9	В	297	47	4C	
D531-A	В	106	57	6D	6	L280	В	57	16	10D	4	P32	В	144	126	110	
D531-B				11D	6	L285	В	27	15	11D	4	P33	В	155	124	9F	
D532-A	В	187	67	6C	6	L286	A	36	11	10E	4	P40		150	73	9B	
D532-B				10D	6	L293	В	81	58	7B	4	P55	В	138	54	5A	
D533-A	В	196	76	6B	6	L401	В	226	13	3E	5	P56	В	153	53	9E	
D533-B				9D	6	L404	В	203	29	2D	5	P57	В	135	81	11F	
D540-A	В	124	70	7E	6	L405		213	18	2D	5	P58	В	140	81	10D	
D540-B	_			11C	6	L430		102	99	3C	5	P70		192		3F	
D545-A	B	126	57	7F	6	L431		112	111	3C	5	P80	В		139		
D545-B				8C	6	L432		132	107	3C	5	R1	В	292	21	2B	
D545-C				11B 11B	6 6	L433 L434	В	142 194	99 99	4C 6C	5 5	R3 R4	B	291 285	33 38	2B 3B	
D545-E				9C	6	L434			102	6C	5	R5		292	41	30	
D560-A	R	149	57	9F	6	L450		247		7E	5	R7		299	36	3B	
D560-B	ט	742	5,	9E	6	L450		257	77	7F	5	R8		199		8F	
D560-C				10C	6	L452		271		10E	5	R9		292	52	4B	
D570-A	В	147	70	9B	6	L453			102			R10		207		3E	
D570-B	_		. •	10F	6	L454		244	83	8E		R11		211			
D570-C				11F	6	L456		236	78			R12		201		7F	
D570-D				10B	6	L570		181	58			R13		190			
D570-E				10C	6	L580		199	33			R14		178			
L6	В	292	63		2	L581		141	32	4F		R15		162			
L18	В	162	128	11F	2	L582	В	110	32	4E	6	R16	A	163	124	9F	2
L20	В	281	122	5B	2	L583	В	127	32	4E	6	R17	A	166	132	9E	
L21	В	266	122	6B	2	L584	В	105		4A	6	R18		166		9E	
L22	В	251	122	7B	2	L589	В	132			6	R19		186			
L26		243			2	MP21	В					R20		195		6F	
L90		274			2	MP34	В		122			R21		127			
L91	В	288			2	MP67		247				R22		123			
L100	В		136		3	MP69		237		12C		R23		135			
L102	В		116		3	N10			135			R25		246			
L103	В		109		3	N15-A		181	127			R27		119			
L105	В		106		3	N15-B				11D		R28		127		7E	
L109	A	76	97	7B	3	N15-C				11F	2	R29	B	295	114	5E	2
	+   .	 -I	<del></del>	 Datun	a			XY	 -Lis	<b>-</b> te f	nr nr	Sach-	 Numr	ner		   E	lat
ROHDE			- 1	Date					-lis			Stock					age
& ·	+		+			t						+ I				+- 1	
SCHWARZ			<u></u>	07.04	1 04	EE SUM			LEIF OPS	E		1038.	710/	6 N1	vv		3+



												<del> </del>					
Part S	ide	x	Y	Sqr	Pg	Part	Side	: X	Y	Sqr	Pg	Part	Side	e X	Y	Sqr	Pg
R30		112			2	R91			133		2	R250	A	55	79	3D	4
R31	В	100	131	. 9C	2	R92			141		2	R251	В	42	72	3D	4
R32		116			2	R93			139		2	R252	В	45	73	3D	4
R33		123			2	R94			125		2	R253	В	36	72	3D	4
R34		123			2	R95			129		2	R256	A	23	82	4E	4
R35		113			2	R96			138	7D	2	R260	A	34	33	7E	4
R36		123			2	R97			141	7D	2	R268	A	41	44	8E	4
R38		113			2	R98			137	7D	2	R269	A	18	67	4E	4
R39		129			2	R99		292	73	4B	2	R271	A	35	65	4B	4
R40		149			2	R101	B	65	115	3D	3	R275	A	25	74	5E	4
R41		149			2	R103	В	48	108	4E	3	R276	A	18	70	5E	4
R42		149			2	R105	В	55	106	4E	3	R277	A	66	37	8B	4
R43		123			2	R106	В	51	102	4F	3	R278	В	31	53	6D	4
R44		140			2	R107	В	47	99	4F	3	R279	В	67	64	6B	•
R45		141			2	R108	В	49	104	4F	3	R280	A	49	26	10E	•
R46		146			2	R109	В	68	95	6E	3	R281	В	72	35	9D	•
R47		149			2	R110	В	65	95	5E	3	R282	В	68	30	9D	•
R48		152			2	R111	В	63	99	5E	3	R283	В	72	22	9D	
R49		100			2	R112	A	65	90	6E	3	R284	В	20	28	11C	
R50	В		125		2	R113	A	64	97	7E	3	R285	В	27	26	11C	
R51 R52	B B		125		2 2	R114 R115	A A	70 73	106 102	7E 8E	3 3	R286 R287	A B	25 34	35 57	11C 7D	
R52	_	102			2	R116	A	83	102	8E	3	R288	В	37	53	7D	
R54		104			2	R120	A		125	2B	3	R289	В	43	57	7D	
R55				10B	2	R121	В	18	121	3B	3	R290	A	43	67	5B	
R56		102			2	R122	В	18	113	4B	3	R291	A	50	62	5B	
R57		106			2	R123	A	17		4B	3	R292	A	46	70	5B	
R58				11C	2	R125	В		111	4B	3	R293	A	69	67	5C	
R59		160			2	R126	В	20	108	4C	3	R294	A	69	64	5C	
R60		140			2	R127	В	17	100	4C	3	R296	A	81	66	7B	
R61		140			2	R128	В	16	105	4C	3	R297	В	78	41	7B	
R62		140			2	R129	В	36	96	6C	3	R298	В	75	44	7C	
R63		140			2	R130	В	34	96	5C	3	R299	В	69	41	7B	
R64		127			2	R131	В	31		5B	3	R400	В		29	3D	
R65		127			2	R132	A	25		6B	3	R402		257	27	2E	
R66	В	133	137	5E	2	R133	A	28	90	7B	3	R403		254	27	2E	
R67		127			2	R134	A	15	91	7C	3	R404		226	26	4E	
R68		132			2	R135	A	17	95	8C	3	R406		213	33	4F	
R70		269			2	R136	A	17	97	8C	3	R407		217	24	4F	
R71		261			2	R141	A	55		10D	3	R408		217	21	5F	
R72	A	263	137	2E	2	R142	В	27	93	10C	3	R409		271	20	1D	
R73		255			2	R143	В	30		10C	3	R410		230	29	3E	
R75			43		2	R144	A	23		11C	3	R411		264	21	2E	
R76	В	163	137	9E	2	R160	В	52	116	3C	3	R412		251	19	2E	
R77		162			2	R179	В	57	25		4	R413		268	25	2E	
R78	В	235	138	1F	2	R210	В	83	64	1B	4	R415		245	46	1F	
R79	В	235	135	1E	2	R211	В	86	61	3B	4	R419	В	243	16	3E	
R80	A	175	126	10E	2	R212	В	82	75	18	4	R420	В	220	66	5E	
R81	A	175	128	11D	2	R236	A	30		11E	4	R421	В	227	72	6F	
R82				11E	2	R237	В	44		10D	4	R422		215	72	6E	
R83				11E	2	R238	В	48		10D	4	R424		220	85	6E	
R84				. 11D	2	R239	В	51		10D	4	R425		220	89	6E	
R86		103			2	R245	В	64			4	R426		218	89	6E	
R89			81		2	R247		69			4	R428		221	74	6E	
R90	В	222	126	11D	2	R248	В	74	82	2D	4	R429	В	217	74	6E	
	+   -	-I		Datum	1					te f		Sach-		ner	44	B)	
ROHDE &			<u> </u>	Date	,	 +		XY	-lis	t f	or 	Stoc	ι-Nr			Pa	ıge
SCHWARZ	, <u> </u>		 			EE SU	MMIEF	SCH	LEIF	 E		, <b></b> 				 	
			07	07.04	.94	1	MMING			-		1038	.719	5.01	XY		4-
			07	07.04	.94	្រ នបា	MMING	;− <u>1,</u> O(	JPS			T038	. 719(	5.01	ΧY		4



Part S	ide	x	Y	Sqr	Pg	Part	Side	Х	Y	Sqr	Pg	Part	Side	X	¥	Sqr	Pg
R430	A 1	102	107	3C	5	R513	A	183	24	3D	6	V56	В	160	137	9E	2
R431	в 1		93	3B	5	R514	A	184	27	3D	6	V57		159		9E	2
R432	в 1	L20	93	3B	5	R515		182	29	3D	6	₩70		258		3F	2
R433			103	3B	5	R516		184	32	3D	6	V75			140	2E	2
R434			107	4C	5	R517		184	34	3D	6	V78		229		2E	2
R435	В		92	4B	5	R518		176	18	3C	6	V79		236	124	2E 10D	2
R436	B 1		96	4B	5	R520		184 154	14 37	4D 4D	6	V85 V95	B B	138		7D	2
R437	B :		92 100	5B 5B	5 5	R521 R522		184	37	4D	6	V100	В		117	2E	3
R438 R439	B :		96	6B	5	R523		145	29	4C	6	V101	В		114	3E	3
R441			104	6C	5	R524		145	21	4B	6	V105	В		103	4E	3
R442			109	6B	5	R525		197	47	5D	6	V106	В		104	6E	3
R443			102	7B	5	R526		146	47	5D	6	V107	A	65	94	6E	3
R444			112	7A	5	R527		192	47	5C	6	V108	A	70	101	7E	3
R448	В :	166	106	5C	5	R528	В	141	47	5C	6	V120	В	27	131	2B	3
R451	A 2	241	83	7E	5	R529	В	136	47	5B	6	V122	В		121	3B	3
R453		265	63	9E	5	R530	В	96	66	6F	6	V125	В		108	4B	3
R454		262	67	9E	5	R531		178	62	5C	6	V126	В		106	6B	3
R455		250	63	8E	5	R533	A	96	63	6D	6	V127	A	32	94	6C	3
R456		262	81	9D	5	R534		200	69	5B	6	V128	A	17	92	7C	3
R457		253	87		5	R545		114	70	8D	6	V140	В	33	90		3 4
R458		251	90		5	R546		118 118	67 75	8D	6 6	V210 V211	B B	79 77	72 64	2B 1B	4
R459		257 253	93 72	10D 8E	5	R547 R550		161	75 72	8E 7D	6	V211	В	24	72	4F	4
R460 R465		262	78	9D	5 5	R550		161	66	7C	6	V260	В	29	71	4D	4
R465		267	63	9E	5	R551		165	60	7B	6	V270		34	71	4C	4
R468		266	110		5	R553		166	72	8D	6	V275	A	25	68	5E	4
R469		245	89	8D	5	R554		169	69	8C	6	V276	В	50	36	8C	4
R471		245	73		5	R555		171	60	7B	6	V277	В	45	36	8D	4
R472		248	91	88	5	R556		164	69	8C	6	V278	В	40	34	8F	4
R473	В	242	107	11D	5	R560	A	156	58	9F	6	V279	В	47	50	7D	4
R474	В	248	107	10C	5	R561	A	156	56	9E	6	V280	В	51	67	4D	4
R475	В	241	110	10C	5	R562	A	145	70	9E	6	V285	В	25	28		4
R477				10C	5	R563		147	70	9D	6	V287	A	59	65	5C	4
R478		260		11D	5	R564		147	79	9D	6	V400		261	19	2E	5
R479			106		5	R565		129		12C	6	V401		218	36	4E	5
R480		238	78		5	R567		174	53	11E	6	V402		247	43	2F	5
R481		240	70		5	R568		122 139	77 77	12B 9D	6 6	V403 V405		211 245	41 19	4F 3E	5 5
R482 R483		269 271	110 107		5 5	R569 R571		130	64	12D	6	V405		248	26	3D	5
R485		262	87			R571		154	66	11E	6	V407		240	19	3E	5
R486		277			5	R579		152	82	9B	6	V408		235	23	3D	5
R499		229	38			V1		293	36	3B	2	V420		220	79	6E	5
R500		150	15			V40		155	141	9D	2	V421		220	84		5
R501		150	17			V41	A	116	128	10E	2	V440	В	174	96	5B	5
R502	В	150	20	2D	6	V42		144		9C	2	V445		198		6В	
R503		150	22			V43		145		8D	2	V450		238	82		5
R504		150	25			V44	В		135	9B	2	V453		244	78		
R505		150	27			V47		123			2	V455		252	69		5
R506		150	30			V50	В		139		2	V456		265	75		
R508		150	32			V51	В		139	10B 11C	2	V457		253 176	83 71		
R509		150	35			V52 V53	B A		130	9B	2 2	V565		119	81		
R510 R511		184 184				V54	A A			10B	2	X16A		149			
R511		184				V55		104				X16B			124		
ROHDE	-+		+	Datu Date	 m	XY-Liste for XY-list for					Sach-Nummer Stock-Nr					lattage	
& SCHWAR	z		07	07.0	4.94	EE SU	MMIE:			E		1038	.719	6.01	XY		5-



-14m

			1